LIGHTWARE
INNOVATIVE. RELIABLE. MADE IN EUROPE.

USER MANUAL



UCX-2x1-TPX-TX30
UCX-4x3-TPX-TX30

Universal Switcher Extender

Bookmark Page

Applied Network Ports

Box Contents

Button Functionality

Mechanical Drawings

Mounting Options

Port Diagrams

Cable Wiring Guide

Connecting Steps

Electrical Connections

Port Numbering

Powering Options

Specifi-cations

Factory Default Settings

Front/Rear View

Lightware Device Controller

Status LEDs

Trouble-shooting

Important Safety Instructions

Class II apparatus construction.

The equipment should be operated only from the power source indicated on the product.

To disconnect the equipment safely from power, remove the power cord from the rear of the equipment, or from the power source. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

There are no user-serviceable parts inside of the unit. Removal of the cover will expose dangerous voltages. To avoid personal injury, do not remove the cover. Do not operate the unit without the cover installed.

The appliance must be safely connected to multimedia systems. Follow instructions described in this manual.


Ventilation

For the correct ventilation and to avoid overheating, ensure enough free space around the appliance. Do not cover the appliance, leave the ventilation holes free and never block or bypass the ventilators (if there are any).

WARNING

To prevent injury, the apparatus is recommended to be securely attached to the floor/wall, or mounted in accordance with the installation instructions. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus. No naked flame sources, such as lit candles, should be placed on the apparatus.

Waste Electrical & Electronic Equipment (WEEE)

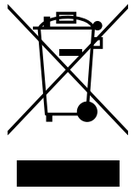

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

CAUTION

The device contains a BR1632A button battery, which supplies power to the clock when the device is not powered on. Danger of explosion if battery is replaced incorrectly. Replace only with the same or equivalent type.

WARNING

Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours, and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Common Safety Symbols

Symbol	Description
	Direct current
	Alternating current
	Protective conductor terminal
	Equipotential Connector
	On (Power)
	Off (Power)
	Double insulation
	Caution, possibility of electric shock
	Caution
	Laser radiation
	Warning, Rotating fan
	Caution: for indoor use only

Table of Contents

1. INTRODUCTION 9
1.1. Description 10
1.2. Box Contents 11
1.3. Typical Application 12
1.4. Features of the Device 13
1.5. Compatible Lightware Cables 14
1.5.1. Passive USB-C to USB-C Cables 14
1.5.2. Active USB-C to USB-C Cables 14
1.5.3. USB-C to HDMI Cables 14
2. PRODUCT OVERVIEW 15
2.1. UCX-4x3-TPX-TX30 16
2.2. UCX-2x1-TPX-TX30 17
3. FRONT PANEL CONTROL 18
3.1. Button Functionality 19
3.1.1. Video Source Selection - UCX-4x3-TPX-TX30 19
3.1.2. Video Source Selection - UCX-2x1-TPX-TX30 19
3.1.3. Enabling DHCP IP Address 19
3.1.4. Reset to Factory Default Settings 20
3.1.5. Control Lock 20
3.2. Status LEDs 20
3.2.1. Front Panel LEDs 20
3.2.2. Rear Panel LEDs 21
3.2.3. Ethernet Status LEDs 21
3.2.4. TPX Connector LEDs 21
4. INSTALLATION 22
4.1. Mounting Options 23
4.1.1. 1U High Rack Shelf 23
4.1.2. Mounting Plate F100 (and PSU F120) 23
4.1.3. C-Lock 24
4.1.4. H-Lock 24
4.2. Electrical Connections 25
4.2.1. HDMI Input and Output Ports 25
4.2.2. USB Connectors 25
4.2.3. Analog Stereo Audio 25
4.2.4. TPX Connector 25
4.2.5. Configurable Ethernet Port 25
4.2.6. GPIO - General Purpose Input/Output Ports 26
4.2.7. RS-232 Connector 26
4.3. Powering Options 27
4.4. Power Delivery over Type-C 28
4.4.1. Power Data Objects (USB-C) 28
4.5. USB-C Cable Recommendation 29
4.6. Connecting Steps 30
5. DEVICE CONCEPT 31
5.1. Universal Switcher Concept 32
5.2. USB Interface 32
5.2.1. USB-C Interface 32
5.2.2. USB Data - USB Interface 32
5.2.3. USB Service Ports - USB 2.0 Interface 34
5.3. Video Interface 34
5.3.1. Welcome Screen 35
5.3.2. Video Port Diagrams 35
5.3.3. DisplayPort Alternate Mode 36
5.4. The Autoselect Feature 36
5.5. Audio Interface 39
5.5.1. Analog Audio Interface 39
5.6. Ethernet Interface 39
5.7. Lightware Advanced Room Automation (LARA) 41
5.7.1. Opening the LARA interface 41
5.7.2. Running LARA 41
5.7.3. Downloading/Uploading a Configuration 42
5.7.4. Status Board 42
5.7.5. Touch Panel Support 42
5.8. Basic Network Security 43
5.8.1. Disable Ethernet Ports 43
5.8.2. HTTP/HTTPS 43
5.8.3. Encryption (HTTPS, WSS) 44
5.9. 802.1x Authentication 46
5.10. Advanced Ethernet Security 47
5.10.1. Network Separation 50
5.10.2. Including the Receivers in VLAN Management 50
5.11. WebSocket Service (WS, WSS) 51
5.12. Bulk Device Management 51
5.12.1. Network Settings 51
5.12.2. Device Configuration 51
5.13. Serial Interface 52
5.13.1. Serial Port Diagram 52
5.14. GPIO Interface 53
5.15. OCS Interface 53
5.16. Further Built-in Features 53
5.16.1. Device Cloning – Configuration Backup and Restore 53
5.16.2. SNMP Monitoring 53
5.16.3. Remote System Logging 54
6. SOFTWARE CONTROL OPTIONS 55
6.1. Software Control Modes 56
6.2. Using the Built-in Web 57
6.3. Install and Update the LDC 58
6.4. Running the LDC 58
6.5. Establishing the Connection 59
6.6. Bulk Device Management 60
6.6.1. Network Settings 60
6.6.2. Device Configuration 61
6.7. Video & Audio Crosspoint 62
6.7.1. Port Tiles 63
6.8. Port Properties Window 63
6.8.1. Welcome Screen 63
6.8.2. USB-C Inputs 64
6.8.3. HDMI Video Input 65
6.8.4. TPX Output 66
6.8.5. HDMI Video Output 67
6.8.6. Embedded Audio Input 68
6.8.7. Analog Audio Output 68
6.8.8. Frame Detector 68
6.9. CEC Tool 69
6.10. USB Crosspoint 70
6.10.1. USB-C Port Properties 70
6.10.2. USB-B Port Properties 71
6.10.3. USB Hub Properties 71
6.11. EDID Menu 72
6.11.1. EDID Operations 72
6.11.2. EDID Summary Window 73
6.11.3. Editing an EDID 73
6.11.4. Creating an EDID - Easy EDID Creator 74
6.12. Control Menu 75
6.12.1. Ethernet 75
6.12.2. GPIO 76
6.12.3. OCS - Occupancy Sensor 76
6.12.4. RS-232 77
6.13. Settings Menu 78
6.13.1. TX Status 78
6.13.2. RX Status 78
6.13.3. Network 79
6.13.4. 802.1x Configuration 79
6.13.5. Services 81
6.13.6. Power 83
6.13.7. System 84

6.14. Advanced View Window 85

7. LIGHTWARE REST API REFERENCE 86

7.1. Overview 87
7.2. Instructions for the Terminal Application Usage 87
7.2.1. Web Browser Plugins 87
7.2.2. Third-party API Platform 88
7.2.3. Terminal Application 88
7.3. Protocol Rules 90
7.3.1. Command Structure Example 90
7.3.2. General Rules 90
7.3.3. Legend for the Control Commands 90
7.3.4. Lightware REST API vs. LW3 Protocol 90
7.3.5. Method Types 91
7.3.6. Supported Commands 91
7.3.7. Not Supported Commands 91
7.3.8. Status Codes, Error Messages 91
7.3.9. Polling 91
7.4. REST API Security 92
7.4.1. Authentication 92
7.4.2. Encryption (HTTPS) 92
7.5. System Commands 92
7.5.1. Setting the Device Label 92
7.5.2. Resetting the Device 92
7.5.3. Restoring the Factory Default Settings 92
7.5.4. Querying the Firmware Package Version 93
7.5.5. Control Lock 93
7.5.6. Setting the Current Time 93
7.5.7. Identifying the Device 93
7.5.8. Toggling the Dark Mode Setting 94
7.5.9. Setting the Delay of the Dark Mode 94
7.5.10. Enabling Remote System Logging 95
7.5.11. Setting the Remote Server Address 95
7.5.12. Setting the Protocol for the Remote System Logging 95
7.5.13. Setting the Format of the Remote System Logging 95
7.5.14. Setting the Port for Remote System Logging 96
7.5.15. Enabling/Disabling SNMP Monitoring 96
7.5.16. Setting the Device Location 96
7.5.17. Setting the SNMP Authentication 97
7.6. Video Port Settings - General 97
7.6.1. Switching the Video Input 97
7.6.2. Switching an Input to All Outputs 97
7.6.3. Locking the Video Port 98
7.6.4. Muting the Video Port 98
7.6.5. Setting the Autoselect Policy 98
7.6.6. Changing the Autoselect-Included Input Ports 98
7.6.7. Changing the Input Port Priority 99
7.6.8. Querying the Connected Source 99
7.6.9. Querying the Connected Destinations 99
7.6.10. Querying the Input Switching Capability 99
7.6.11. Querying the Video Signal Presence 99
7.6.12. HDCP Setting (Input Port) 100
7.6.13. HdcpMode 100
7.6.14. Querying the Embedded Audio Presence 100
7.6.15. Muting the Embedded Audio 100
7.6.16. Setting the Output Signal Type 101
7.6.17. Turning on Output 5V 101
7.7. Welcome Screen Settings 101
7.7.1. Displaying the Welcome Screen Image 101
7.7.2. Displaying the Welcome Screen Text 102
7.7.3. Setting the Welcome Screen Text 102
7.7.4. Resetting the Welcome Screen Image 102
7.8. Video Port Settings - USB-C Related Commands 102
7.8.1. Restarting the Link Training 102
7.9. CEC Command Sending 103
7.9.1. Simple CEC Code Sending 103
7.9.2. Remote Control Code Sending 103
7.10. Audio Port Settings 104
7.10.1. Switching the Audio Input 104
7.10.2. Querying the Connected Source 104
7.10.3. Querying the Connected Destinations 104
7.10.4. Setting the Autoselect Operation Mode 105
7.10.5. Setting the Followed Video Port to Autoselect 105
7.10.6. Locking the Audio Port 105
7.10.7. Muting the Audio Port 1. 106
7.10.8. Muting the Audio Port 2. 106
7.10.9. Querying the Audio Signal Presence 106
7.10.10. Analog Audio Output Volume (dB) Setting 107
7.10.11. Analog Audio Output Volume Percent Setting 107
7.10.12. Setting the Balance 107
7.10.13. Analog Audio Output Level Setting by Steps (dB) 107
7.10.14. Analog Audio Output Level Setting by Steps in Percent 108
7.10.15. Analog Audio Output Balance Setting by Steps 108
7.11. USB Port Settings 108
7.11.1. Switching the USB Input 108
7.11.2. Querying the Connected Source 108
7.11.3. Querying the Connected Destinations 109
7.11.4. Locking the USB Port 109
7.11.5. Setting the 5V Sending to the USB Peripherals 109
7.11.6. Setting the USB Autoselect Policy 110
7.11.7. Setting the Followed Video Port to Autoselect 110
7.11.8. Changing the Autoselect Included USB Ports 110
7.11.9. Changing the USB Port Priority 110
7.12. USB Port Settings - USB-C Related Commands 111
7.12.1. Setting the USB-C Power 111
7.12.2. Setting the Displayport Alternate Mode Policy 111
7.12.3. Querying the Host Alternate Mode Support 112
7.12.4. Querying the Status of the Alternate Mode 112
7.12.5. Querying the Port Data Role 112
7.12.6. Querying the Port Power Role 112
7.12.7. Setting the Port Power Role 113
7.13. EDID Management 113
7.13.1. Querying the Emulated EDIDs 113
7.13.2. Querying the Validity of a Dynamic EDID 113
7.13.3. Querying the Preferred Resolution of a User EDID 113
7.13.4. Emulating an EDID to an Input Port 114
7.13.5. Emulating an EDID to All Input Ports 114
7.13.6. Copying an EDID to User Memory 114
7.13.7. Deleting an EDID from User Memory 114
7.13.8. Resetting the Emulated EDIDs 115
7.14. Ethernet Port Configuration 115
7.14.1. Setting the DHCP State 115
7.14.2. Changing the IP Address (Static) 115
7.14.3. Changing the Subnet Mask (Static) 116
7.14.4. Changing the Gateway Address (Static) 116
7.14.5. Applying the Network Settings 116
7.14.6. Setting the Hostname 116
7.15. Network Security 117
7.15.1. Enabling/Disabling the Ethernet Port 117
7.15.2. Querying the Network Service Port Number 117
7.15.3. Enabling/Disabling the Network Service Port 117
7.15.4. Querying the Username for Authentication 117
7.15.5. Setting a Password for Authentication 118
7.15.6. Enabling the Authentication 118
7.15.7. Setting the VLAN Preset 119
7.15.8. Setting the VLAN ID 119
7.15.9. Setting up the Static IP Address for Management Network 120
7.15.10. Setting Up Gateway for Static IP on Management Network 120
7.16. Serial Port Configuration 120
7.16.1. BAUD Rate Setting 120
7.16.2. Stop Bits Setting 120
7.16.3. Querying the Data Bits 121
7.16.4. Parity Setting 121
7.16.5. Querying the Serial over IP Port Number 121
7.16.6. Enabling the Serial over IP Port 121
7.17. Serial Port Messaging 122
7.17.1. Sending a Message via RS-232 122
7.18. GPIO Port Configuration 122

7.18.1. Setting the Direction of a GPIO Pin 122
7.18.2. Setting the Output Level of a GPIO Pin 122
7.18.3. Setting the Output Level for a Specified Time 123
7.18.4. Toggling the Level of a GPIO Pin 123
7.19. OCS Port Configuration 123
7.19.1. Querying the Input Level of an OCS Pin 123
7.19.2. Setting the Sensor Type 124
7.19.3. Querying the Reported OCS State 124
7.20. Updating the Device via REST API 124
7.20.1. Querying the Update REST API Version 124
7.20.2. The Updating Process 125
7.20.3. Uploading the Package 125
7.20.4. Configuration Parameters – Keep the Current Settings 126
7.20.5. Configuration Parameters - Setting "Soft" Factory Reset 126
7.20.6. Configuration Parameters - Querying Factory Reset Setting 127
7.20.7. Configuration Parameters - Deleting "Soft" Factory Reset 127
7.20.8. Executing the Update 128
7.20.9. Querying the State of the Updating Process 128
7.21. LightWare REST API Quick Summary 129

8. LW3 PROGRAMMERS' REFERENCE 134

8.1. Overview 135
8.2. Instructions for the Terminal Application Usage 135
8.3. Websocket (WS) or Secured Websocket (WSS) Usage 135
8.4. Protocol Rules 136
8.4.1. LW3 Tree Structure and Command Structure (examples) 136
8.4.2. General Rules 136
8.4.3. Legend for the Control Commands 136
8.4.4. Command Types 137
8.4.5. Prefix Summary 137
8.4.6. Error Messages 137
8.4.7. Escaping 137
8.4.8. Signature 138
8.4.9. Subscription 138
8.4.10. Notifications about the Changes of the Properties 138
8.5. System Commands 139
8.5.1. Setting the Device Label 139
8.5.2. Resetting the Device 139
8.5.3. Restoring the Factory Default Settings 139
8.5.4. Querying the Firmware Package Version 139
8.5.5. Control Lock 139
8.5.6. Setting the Current Time 139
8.5.7. Identifying the Device 140
8.5.8. Toggling the Dark Mode Setting 140
8.5.9. Setting the Delay of the Dark Mode Setting 140
8.5.10. Enabling Remote System Logging 141
8.5.11. Setting the Remote Server Address 141
8.5.12. Setting the Protocol for the Remote System Logging 141
8.5.13. Setting the Format of the Remote System Logging 141
8.5.14. Setting the Port for Remote System Logging 141
8.5.15. Enabling/Disabling SNMP Monitoring 142
8.5.16. Setting the Device Location 142
8.6. Video Port Settings - General 142
8.6.1. Switching Video Input 142
8.6.2. Switching an Input to All Outputs 142
8.6.3. Locking the Video Port 143
8.6.4. Muting the Video Port 143
8.6.5. Setting the Autoselect Policy 143
8.6.6. Changing the Autoselect Included Input Ports 143
8.6.7. Changing the Input Port Priority 144
8.6.8. Querying the Connected Source 144
8.6.9. Querying the Input Switching Capability 144
8.6.10. Querying the Connected Destinations 144
8.6.11. Querying the Video Signal Presence 144
8.6.12. HDCP Setting (Input Port) 144
8.6.13. Setting the HDCP Mode 145
8.6.14. Setting the Output Signal Type 145
8.6.15. Querying the Embedded Audio 145
8.6.16. Muting the Embedded Audio 145
8.6.17. Setting the Output 5V Mode 145
8.6.18. Querying the HDCP Capability (Output Port) 146
8.6.19. Querying the HDCP Setting (Output Port) 146
8.7. Welcome Screen Settings 146
8.7.1. Displaying the Welcome Screen Image 146
8.7.2. Displaying the Welcome Screen Text 146
8.7.3. Setting the Welcome Screen Text 147
8.7.4. Resetting the Welcome Screen Image 147
8.8. Video Port Settings - USB-C Related Commands 148
8.8.1. Restarting the Link Training 148
8.9. CEC Command Sending 148
8.9.1. Simple CEC Code Sending 148
8.9.2. Remote Control Code Sending 148
8.10. Audio Port Settings 150
8.10.1. Switching the Audio Input 150
8.10.2. Querying the Connected Source 150
8.10.3. Querying the Connected Destinations 150
8.10.4. Setting the Autoselect Operation Mode 150
8.10.5. Setting the Followed Video Port to Autoselect 150
8.10.6. Locking the Audio Port 151
8.10.7. Muting the Audio Port 1 151
8.10.8. Muting the Audio Port 2 151
8.10.9. Querying the Audio Signal Presence 151
8.10.10. Analog Audio Output Volume (dB) Setting 152
8.10.11. Analog Audio Output Volume Percent Setting 152
8.10.12. Setting the Balance 152
8.10.13. Analog Audio Output Level Setting by Steps (dB) 152
8.10.14. Analog Audio Output Level Setting by Steps in Percent 153
8.10.15. Analog Audio Output Balance Setting by Steps 153
8.11. USB Port Settings 153
8.11.1. Switching the USB Input 153
8.11.2. Querying the Connected Source 153
8.11.3. Querying the Connected Destinations 154
8.11.4. Locking the USB Port 154
8.11.5. Setting the 5V Sending to the USB Peripherals 154
8.11.6. Setting the USB Autoselect Policy 154
8.11.7. Setting the Followed Video Port to Autoselect 155
8.11.8. Changing the Autoselect Included USB Ports 155
8.11.9. Changing the USB Port Priority 155
8.11.10. Setting the Icron Role Automation Mode 155
8.12. USB Port Settings - USB-C Related Commands 156
8.12.1. Setting the USB-C Power 156
8.12.2. Setting the Power Allocation Mode 156
8.12.3. Setting the Displayport Alternate Mode Policy 156
8.12.4. Querying the Host Alternate Mode Support 156
8.12.5. Querying the Status of the Alternate Mode 157
8.12.6. Querying the Port Data Role 157
8.12.7. Querying the Port Power Role 157
8.12.8. Setting the Port Power Role 157
8.13. EDID Management 158
8.13.1. Querying the Emulated EDIDs 158
8.13.2. Querying the Validity of a Dynamic EDID 158
8.13.3. Querying the Preferred Resolution of a User EDID 158
8.13.4. Emulating an EDID to an Input Port 158
8.13.5. Emulating an EDID to All Input Ports 158
8.13.6. Copying an EDID to User Memory 159
8.13.7. Deleting an EDID from User Memory 159
8.13.8. Resetting the Emulated EDIDs 159
8.14. Ethernet Port Configuration 160
8.14.1. Setting the DHCP State 160
8.14.2. Changing the IP Address (Static) 160
8.14.3. Changing the Subnet Mask (Static) 160
8.14.4. Changing the Gateway Address (Static) 160
8.14.5. Applying the Network Settings 160
8.14.6. Setting the Host name 161
8.15. Remote Power 161
8.15.1. Enabling/Disabling Remote Power 161
8.16. Network Security 161
8.16.1. Enabling/Disabling the Ethernet Port 161

8.16.2. Querying the Service Port Number ... 161
8.16.3. Enabling/Disabling the Service Port ... 162
8.16.4. Querying the Username for Authentication ... 162
8.16.5. Enabling/Disabling the Authentication ... 162
8.16.6. Restarting the Network Services ... 162
8.16.7. Setting the VLAN Preset ... 163
8.16.8. Setting the VLAN ID ... 163
8.16.9. Setting up the Static IP Address for Management Network ... 163
8.16.10. Setting Up Gateway for Static IP on Management Network ... 163
8.17. Serial Port Configuration ... 164
8.17.1. BAUD Rate Setting ... 164
8.17.2. Stop Bits Setting ... 164
8.17.3. Querying the Data Bits ... 164
8.17.4. Parity Setting ... 164
8.18. Sending a Message via RS-232 ... 164
8.19. GPIO Port Configuration ... 165
8.19.1. Querying the Direction of a GPIO Pin ... 165
8.19.2. Setting the Direction of a GPIO Pin ... 165
8.19.3. Querying the Output Level of a GPIO Pin ... 165
8.19.4. Setting the Output Level of a GPIO Pin ... 165
8.19.5. Setting the Output Level for a Specified Time ... 165
8.19.6. Toggling the Level of a GPIO Pin ... 165
8.20. OCS Port Configuration ... 166
8.20.1. Querying the Input Level of an OCS Pin ... 166
8.20.2. Setting the Sensor Type ... 166
8.20.3. Querying the Reported OCS State ... 166
8.21. LW3 Commands - Quick Summary ... 167

9. FIRMWARE UPDATE ... 171

9.1. Introduction ... 172
9.2. Preparation ... 172
9.2.1. About the Firmware Package (LFP2 File) ... 172
9.2.2. LDU2 Installation ... 172
9.3. Running the Software ... 173
9.4. Updating Via GUI ... 174
9.5. Updating the RX via the TX ... 176
9.6. Updating the RX via TX Outside of Management Network ... 177
9.7. Command Line Interface (CLI) ... 178
9.7.1. How to Run ... 178
9.7.2. How to Use ... 178
9.8. CLI Commands ... 178
9.8.1. Help ... 178
9.8.2. LDU2 Version ... 179
9.8.3. Check For New LDU2 Version ... 179
9.8.4. Device Info ... 180
9.8.5. Update ... 180
9.8.6. Package Options ... 181
9.8.7. Complex Example ... 181
9.8.8. Exit Codes ... 182
9.9. Updating via REST API ... 182
9.10. If the Update is not successful ... 182

10. TROUBLESHOOTING ... 183

10.1. Use Case Studies ... 184
10.2. How to Speed Up the Troubleshooting Process ... 185

11. TECHNOLOGIES ... 186

11.1. EDID Management ... 187
11.1.1. Understanding the EDID ... 187
11.1.2. Advanced EDID Management ... 187
11.2. HDCP Management ... 188
11.2.1. Protected and Unprotected Content ... 188
11.2.2. Disable Unnecessary Encryption ... 188
11.2.3. HDCP 2.2 ... 189
11.3. Pixel Accurate Reclocking ... 190

12. APPENDIX ... 191

12.1. Specifications ... 192
12.2. Port Numbering ... 194
12.3. Applied Ports (Network Settings) ... 195
12.4. Factory EDID List ... 196
12.5. Cable Wiring Guide ... 198
12.5.1. Serial Ports ... 198
12.5.2. Audio Ports ... 198
12.6. Factory Default Settings ... 199
12.7. Content of the Backup File ... 200
12.8. Mechanical Drawings ... 201
12.9. Firmware Release Notes for UCX-TPX-TX30 Devices ... 202
12.10. Hashtag Keyword List ... 203
12.11. Further Document Information ... 204
12.12. Limited Warranty Statement ... 204

Applied SW/FW/HW Environment

All presented functions refer to the indicated products. The descriptions have been made while testing these functions in accordance with the indicated Hardware/Firmware/Software environment:

Item	Version
FW package (UCX-TX)	v1.21.0b10
Lightware Device Controller (LDC) version	v2.24.0b5
Lightware Device Updater V2 (LDU2) version	v2.40.0b1

Document Revision History

Rev.	Release date	Changes	Editor
v1	2026-10-29	Initial release.	Nikolett Keindl

Contact Us

sales@lightware.com

+36 1 255 3800

support@lightware.com

+36 1 255 3810

Lightware Visual Engineering PLC.

Gizella 51-57, Budapest H-1143, Hungary

www.lightware.com

©2026 Lightware Visual Engineering. All rights reserved.
All trademarks mentioned are the property of their respective owners.
Specifications are subject to change without notice.

1

Introduction

Thank You for choosing Lightware's UCX-TPX-TX30 series device. In the first chapter we would like to introduce the device, highlighting the most important features in the sections listed below:

- Description **10**
- Box Contents **11**
- Typical Application **12**
- Features of the Device **13**
- Compatible Lightware Cables **14**

1.1. Description

Lightware's UCX-TPX-TX30 series universal matrix switcher Transmitter exploits the USB-C connectivity for a simplified extension of up to 100m of 4K video, audio, control signals and power, providing meeting participants with easy host switching, video resolution capabilities up to 4K@60Hz at 4:4:4, as well as comprehensive and secure Ethernet features.

The Receiver extender with AVX technology allows users to extend HDMI 2.0 signals up to 4K60 4:4:4 video resolution through a single CATx cable over distances of up to 100 meters. They also support independent USB host switching with USB 2.0, making the pair excellent for meeting room setups.

The Transmitter / Receiver pair is featured with audio de-embedding function via the 5-pole Phoenix® Combicon analog audio ports.


Beyond the benefits of sending high-resolution video over long distances, the pair is also capable of handling various connectivity standards, including bi-directional RS-232, GPIO and OCS as well.

The Gigabit Ethernet port is also a valuable addition, allowing users to connect an additional device to the network directly through the TPX extender.

The Transmitter is also capable of powering the HDMI-UCX-TPX-RX107 Receiver remotely over Ethernet, as the Receiver is PoE compatible.


UCX-3x3-TPX-RX20 model is compatible with all transmitters in the UCX-TPX family.

Model Denomination

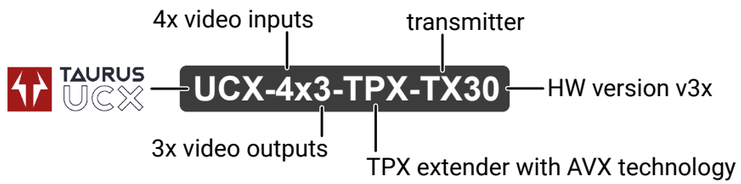

About the Serial Number

From 1st of October 2024, serial number format of Lightware devices is the following: the first two digits are of the year of manufacture, while the remaining digits make up the running sequence number.



On any UCX series device manufactured after 1st of July 2025, you will find a sticker on the device with a QR code that contains all MAC addresses of the device, as well as the serial number.

For devices manufactured before this date, or any further information on expansion of the MAC Address list, please see the MAC Addresses section.

Default Password




UCX-TPX-TX30 models have a **random-generated factory default password** applied to the device during the manufacturing process. This password is supplied on a sticker along with the device.





The sticker containing the credentials and the serial number can be found on the device enclosure.

INFO: The QR code on the label shows the password.


For more information about the factory default password, see the Basic Authentication section.

1.2. Box Contents


	Supplied Accessories							
								
	Transmitter device	24V power adaptor with IEC power cable	Phoenix® Combicon 3-pole Connector	Phoenix® Combicon 5-pole Connector	Phoenix® Combicon 8-pole Connector	Safety and Warranty Info, QSG	Type C (USB-C) to Type C (USB-C) Cable, 1m	2 pcs. of M3x4 flat head screw
UCX-4x3-TPX-TX30	✓	✓	2x	✓	✓	✓	✓	✓
UCX-2x1-TPX-TX30	✓	✓	✓	✓	✓	✓	✓	✓

	Optional accessories					
						
	Button panels: RAP-B511 and TBP6	Rack shelf	UD mounting plate F100	UD Mounting PSU F100	UD Mounting PSU F120	UD Mounting Pro P210
UCX-4x3-TPX-TX30	✓	✓	✓	✗	✓	✓
UCX-2x1-TPX-TX30	✓	✓	✓	✓	✗	✓

1.3. Typical Application

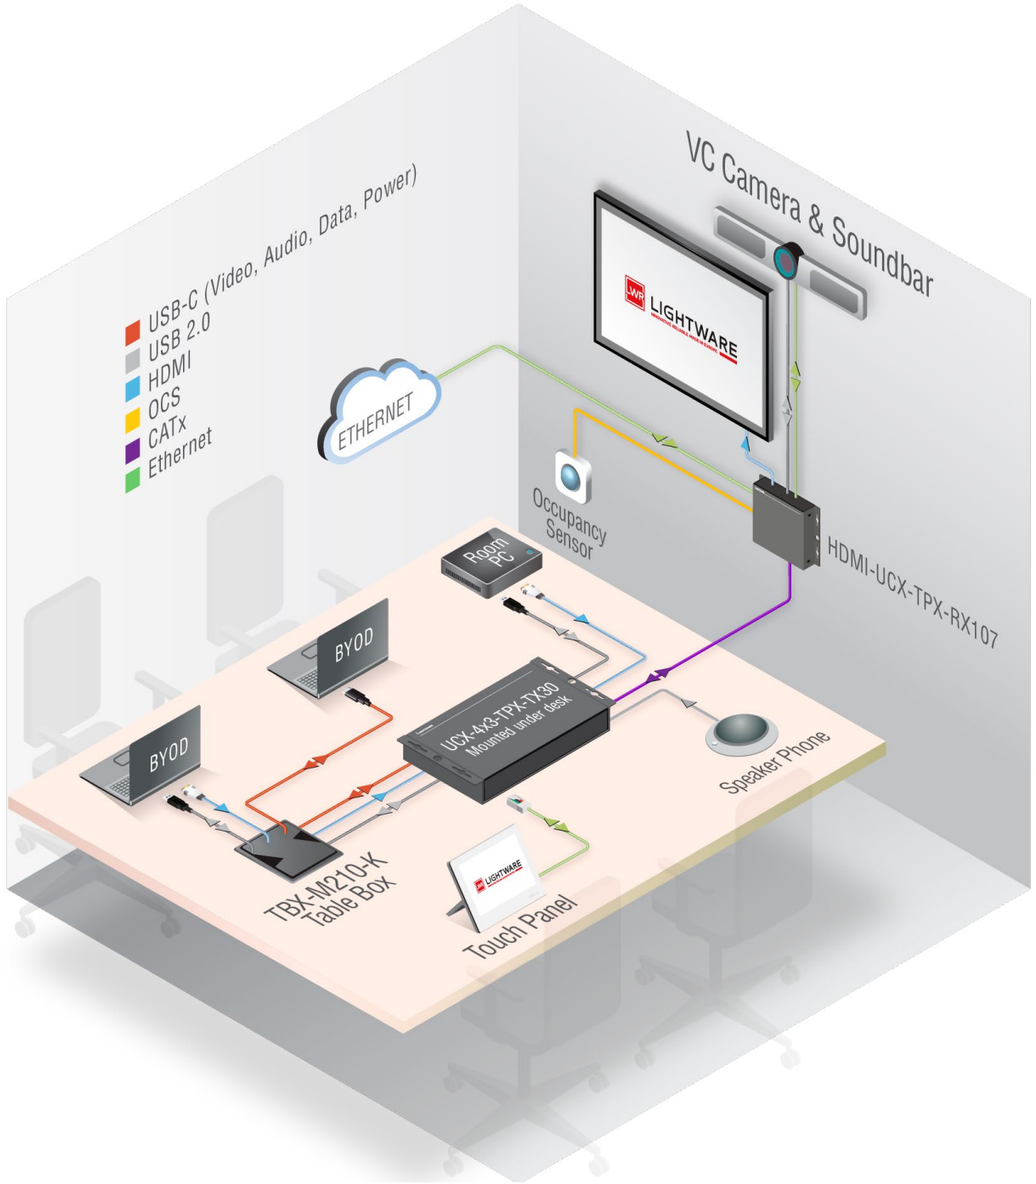

INFO: UCX-3x3-TPX-RX20 model is compatible with all transmitters in the UCX-TPX family.

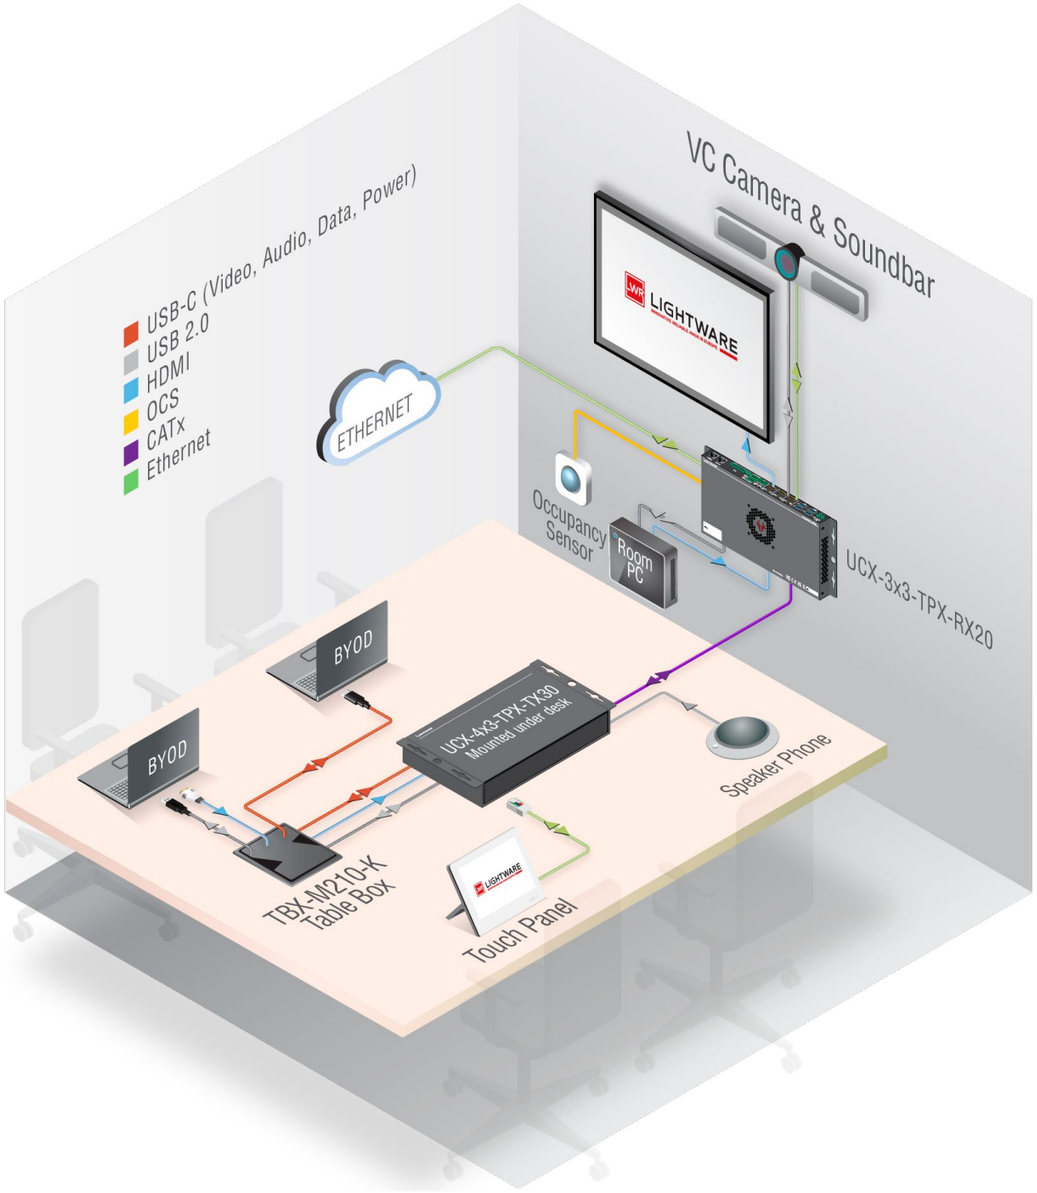

1.4. Features of the Device



4K and 5K Video Support

HDMI 2.0 signal switching supporting 5K 21:9 ultrawide displays (5120x2160@30Hz, RGB 4:4:4, 12 bits) as well as 4K@60Hz, RGB 4:4:4, 18Gbit/sec bandwidth.



Autoselect Function for Video and USB Inputs

The Autoselect feature can sense the port status on the video input and USB Host ports and select them automatically. Priority number can be set for each input port, and the feature allows to set various modes for the automatic input selection (First detect, Last detect).



Basic IT-security

These entry-level network security improvements help prevent unauthorized access to the Lightware device; HTTPS/WSS support, basic network authentication.



Bi-directional RS-232

AV systems can also contain serial port controllers and controlled devices. Serial transmission supports any unit that works with standard RS-232.



Dark Mode

All illuminating elements of the front/rear panel can be switched on and off. This feature is useful in live-stage shows or other environments where flashing LEDs would be distracting.



De-embedder Function

The analog audio can be de-embedded from HDMI inputs and it can be routed to the analog audio output.



Ethernet Control

Multiple simultaneous TCP/IP connections are available with a simple ASCII-based protocol for controlling or configuring the product, or to perform a firmware update.



Factory Default Password

The devices come with a unique, random generated default password to ensure basic security right out of the box.



Frame Detector and Signal Analysis

The exact video and audio signal format can be determined such as timing, frequencies, scan mode, HDCP encryption, color range, color space and audio sample rate.



GPIO Control Port

Six GPIO pins operating at TTL digital signal levels that can be controlled with LW3 commands. 5V is supplied over the 7th pin constantly, up to 500 mA.



HDCP-compliant

The devices fulfill the HDCP standard. HDCP capability on the digital video inputs can be disabled when non-protected content is used.



Lightware Rest API

The UCX matrix switcher extenders can be controlled through standard HTTP(S) requests to ensure the control functions from REST clients or terminal program.



Pixel Accurate Reclocking

Each output has a clean, jitter free signal, eliminating signal instability and distortion caused by long cables or connector reflections.



Powered by LARA

Future-proof room automation platform for system integrators so they can seamlessly and invisibly support people's collaboration to make the most out of their virtual or in-person meetings.



Remote Power (PoE)

The UCX-TPX-TX30 series models can provide power over Ethernet (according to IEEE 802.3at) to the HDMI-UCX-TPX-RX107 via the TPX ports, as well as to a connected device (e.g. touch panel) on the Ethernet 3 port.



SNMP Monitoring

IT administrators can use SNMP managers to keep track of the system health and network status information.



USB 2.0 Switch

The USB 2.0 layer provides switching four external USB peripherals (e.g. webcamera, speakerphone, multitouch display, etc.) to four independent host computers or laptops.



USB Type C Source Connection

USB Type C port ensures USB-C connectivity to the source device with USB 2.0 data and Displayport Alternate mode for video. It provides power delivery of up to 100 W for the first connected device (e.g. BYOD laptop or smartphone).

1.5. Compatible Lightware Cables

To order Lightware produced cables, please contact sales@lightware.com.

ATTENTION: The USB-C input ports of UCX-TPX-TX30 models are developed to connect native USB-C sources. HDMI–USB-C or DP–USB-C adapters are not supported and not recommended to apply.

For more information about recommended USB-C cables, please see the USB-C Cable Recommendation section.

1.5.1. Passive USB-C to USB-C Cables



Part Number	Product name	Length		USB Standard	Max. charging	USB tiers
		Metric	Imperial			
13740048	CAB-USBC-T100B	1m	3.28ft	USB3.2 Gen 2x2	60W / 3A	0
13740016	CAB-USBC-T100C	1m	3.28ft	USB3.2 Gen 2x2	100W / 5A	0
13740017	CAB-USBC-T200B	2m	6.56ft	USB3.2 Gen 1x2	60W / 3A	0
13740030	CAB-USBC-T200C	2m	6.56ft	USB3.2 Gen 2x2	100W / 5A	0
13740045	CAB-USBC-T200X	2m	6.56ft	USB4 Gen 3x2	240W / 5A	0
13740020	CAB-USBC-T300B	3m	9.84ft	USB3.2 Gen 1x2	60W / 3A	0
13740034	CAB-USBC-T300C	3m	9.84ft	USB3.2 Gen 2x2	100W / 5A	0
13740023	CAB-USBC-T400B	4m	13.12ft	USB3.2 Gen 1x2	60W / 3A	0
13740039	CAB-USBC-T400C	4m	13.12ft	USB3.2 Gen 1x2	100W / 5A	0
13740024	CAB-USBC-T500B	5m	16.40ft	USB3.2 Gen 1x2	60W / 3A	0
13740038	CAB-USBC-T500C	5m	16.40ft	USB3.2 Gen 1x2	100W / 5A	0

1.5.2. Active USB-C to USB-C Cables



Part Number	Product name	Length		USB Standard	Max. charging	USB tiers
		Metric	Imperial			
13740035	CAB-USBC-AOC800E	8m	26.25ft	USB3.2 Gen 1x1	60W / 3A	1
13740047	CAB-USBC-AOC900B	9m	29.53ft	USB3.2 Gen 1x1	60W / 3A	1
13740036	CAB-USBC-AOC1000E	9.8m	32.15ft	USB3.2 Gen 1x1	60W / 3A	1

1.5.3. USB-C to HDMI Cables



Part Number	Product name	Length		USB Standard	Max. charging	USB tiers
		Metric	Imperial			
13750103	CAB-USBC-HDMI-C200F	2m	6.56ft	N/A	N/A	N/A
13750104	CAB-USBC-HDMI-C300F	3m	9.84ft	N/A	N/A	N/A

2


Product Overview

The following sections are about the physical structure of the devices, input/output ports and connectors:

- UCX-4x3-TPX-TX30 **16**
- UCX-2x1-TPX-TX30 **17**

2.1. UCX-4x3-TPX-TX30

Front view

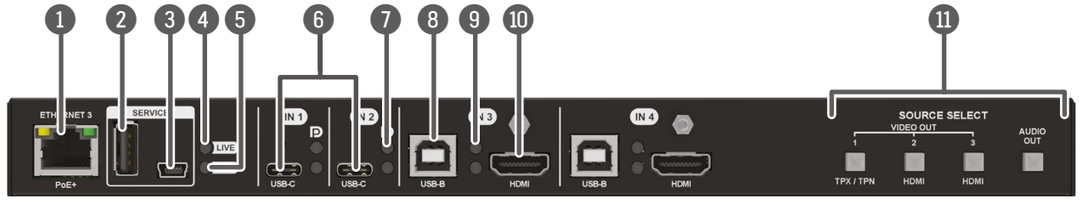

1	**Configurable Ethernet Port**	RJ45 connector for configurable 1GBase-T Ethernet communication. This port is also able to supply 30W for the connected device.
2	**USB-A Port**	The SERVICE-labelled USB-A connector is designed for service functions.
3	**USB mini-B Port**	The SERVICE-labelled USB mini-B port is designed for service functions.
4	**LIVE LED**	See the details in the Front Panel LEDs section.
5	**RX LED**	The function will be implemented in a later firmware update.
6	**USB-C Ports**	USB-C ports for receiving video and audio signals, as well as USB data from the host device.
7	**Status LEDs**	See the details in the Front Panel LEDs section.
8	**USB-B Ports**	Upstream ports for connecting USB host devices (e.g. computer).
9	**Status LEDs**	See the details in the Front Panel LEDs section.
10	**HDMI Input Ports**	HDMI input ports for sources. The applied cable shall not be longer than 5m. Use cables certified for HDMI 2.0 (3x6Gbps) applications.
11	**Input Selection Buttons**	For more details, see the Button Functionality section. When LEDs blink green three times after pressing any button, they show that the front panel lock is enabled.

Rear view




1	**DC Input**	DC input for local powering. Connect the output to the 2-pole Phoenix® connector.
2	**USB-A and USB-C Ports**	Downstream ports for connecting USB peripherals (e.g. camera, keyboard, multitouch display).
3	**TPX Output Port**	RJ45 port for AVX output signal transmission.
4	**HDMI Output Ports**	Local HDMI output ports for sending video and audio signals to the sinks (e.g.monitor) connected to the device.
5	**Status LEDs**	See the details in the Rear Panel LEDs section.
6	**Analog Audio Output Port**	Audio output port (5-pole Phoenix®) for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
7	**RS-232 Ports**	3-pole Phoenix® connectors for bi-directional RS-232 communication.
8	**GPIO port**	8-pole Phoenix® connector for configurable general purpose. Max. input/output voltage is 5V, see the details in the GPIO - General Purpose Input/Output Ports section.
9	**Configurable Ethernet Ports**	RJ45 connectors for configurable 1GBase-T Ethernet communication.

WARNING! Always use the supplied power supply! Use of any other power supplies may lead to damage! Warranty void if damage occurs due to using a different power source.

2.2. UCX-2x1-TPX-TX30

Front view

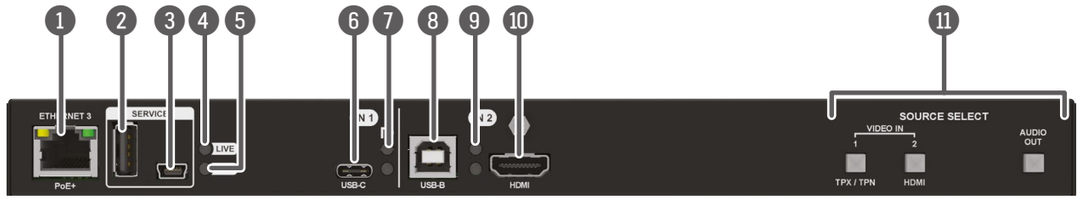

1	**Configurable Ethernet Port**	RJ45 connector for configurable 1GBase-T Ethernet communication. This port is also able to supply 30W for the connected device.
2	**USB-A Port**	The SERVICE-labelled USB-A connector is designed for service functions.
3	**USB mini-B Port**	The SERVICE-labelled USB mini-B port is designed for service functions.
4	**LIVE LED**	See the details in the Front Panel LEDs section.
5	**RX LED**	The function will be implemented in a later firmware update.
6	**USB-C Port**	USB-C port for receiving video and audio signals, as well as USB data from the host device.
7	**Status LEDs**	See the details in the Front Panel LEDs section.
8	**USB-B Port**	Upstream port for connecting USB host devices (e.g. computer).
9	**Status LEDs**	See the details in the Front Panel LEDs section.
10	**HDMI Input Port**	HDMI input port for sources. The applied cable shall not be longer than 5m. Use cables certified for HDMI 2.0 (3x6Gbps) applications.
11	**Input Selection Buttons**	For more details, see the Button Functionality section. When LEDs blink green three times after pressing any button, they show that the front panel lock is enabled.

Rear view



1	**DC Input**	DC input for local powering. Connect the output to the 2-pole Phoenix® connector.
2	**USB-A and USB-C Ports**	Downstream ports for connecting USB peripherals (e.g. camera, keyboard, multitouch display).
3	**TPX Output Port**	RJ45 port for AVX output signal transmission.
4	**Analog Audio Output Port**	Audio output port (5-pole Phoenix®) for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
5	**RS-232 Port**	3-pole Phoenix® connector for bi-directional RS-232 communication.
6	**GPIO port**	8-pole Phoenix® connector for configurable general purpose. Max. input/output voltage is 5V, see the details in the GPIO - General Purpose Input/Output Ports section.
7	**Configurable Ethernet Ports**	RJ45 connectors for configurable 1GBase-T Ethernet communication.

WARNING! Always use the supplied power supply! Use of any other power supplies may lead to damage! Warranty void if damage occurs due to using a different power source.

3

Front Panel Control

The following sections are about the front panel operation of the devices and the status LEDs:

- Button Functionality **19**
- Status LEDs **20**

3.1. Button Functionality

INFO: If the control lock is enabled and a button is pressed, front panel LEDs blink 3 times quickly.

3.1.1. Video Source Selection - UCX-4x3-TPX-TX30



Push **TPX/TPN (1)** to select the video input for the TPX OUT1 port.

Push **HDMI (2)** to select the video input for the HDMI OUT2 port.

Push **HDMI (3)** to select the video input for the HDMI OUT3 port.

Push **AUDIO OUT** to set the audio source of the analog audio output.

The sequence is the following (both for the video and audio switching): *#switch #crosspoint*

❶ USB-C IN 1 → ❷ USB-C IN 2 → ❸ HDMI IN 3 → ❹ HDMI IN 4

3.1.2. Video Source Selection - UCX-2x1-TPX-TX30



Push **TPX/TPN (1)** to select the USB-C port as input for the TPX output port.

Push **HDMI (2)** to select the HDMI port as input for the TPX output port.

Push **AUDIO OUT** to set the audio source of the analog audio output.

The sequence is the following for the video switching: *#switch #crosspoint*

❶ USB-C IN 1 → ❷ HDMI IN 2

3.1.3. Enabling DHCP IP Address


The device has a dynamic IP address as a factory default setting. If it is set to static IP address during install or usage, dynamic IP address can be enabled from the front panel:

Step 1. Make sure the device is powered on and operational.

Step 2. Press and keep pressing the **AUDIO OUT** button for 5 seconds.



Step 3. After 5 seconds the front panel LEDs start blinking; release the button and press it 3 times again quickly (within 3 seconds).

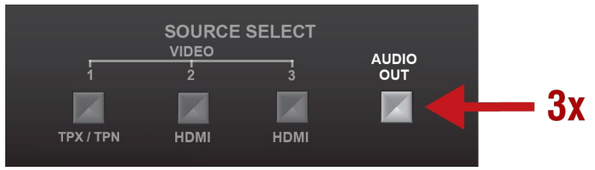

Step 4. The LEDs get dark, DHCP gets enabled. *#dhcp*

3.1.4. Reset to Factory Default Settings

To restore factory default values, do the following steps: *#factory*


Make sure the device is powered on and operational.

Step 1. Press and keep pressing the **AUDIO OUT** button for 10 seconds.



Step 2. After 5 seconds the front panel LEDs start blinking, but keep on pressing the button.

Step 3. After 10 seconds the LEDs start blinking faster; release the button and press it 3 times again quickly (within 3 seconds).

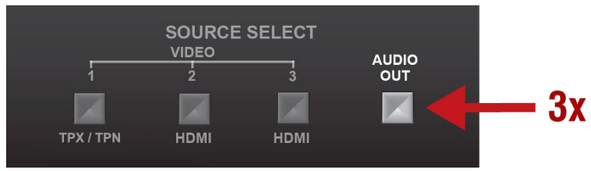


Step 4. The LEDs get dark, the device restores the factory default settings and reboots.

Factory default settings are listed in the Factory Default Settings section.

3.1.5. Control Lock

Press the **TPX (IN 1)** and **AUDIO OUT** buttons **together** (within 100 ms) to disable/enable front panel buttons; front panel LEDs blink 4 times when locking/unlocking. If the control lock is enabled and a button is pressed, front panel LEDs blink 3 times quickly.

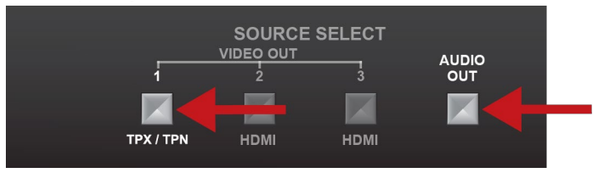

3.2. Status LEDs


INFO: When Dark mode is enabled, no LEDs are lit, even though the device is fully functional. For more details about the dark mode, see the TX Status section.

3.2.1. Front Panel LEDs

Live LED

LIVE LED		
	blinking	The device is powered on and operational.
	off	The device is not powered or out of operation.

Arrangement of the status LEDs *#status*

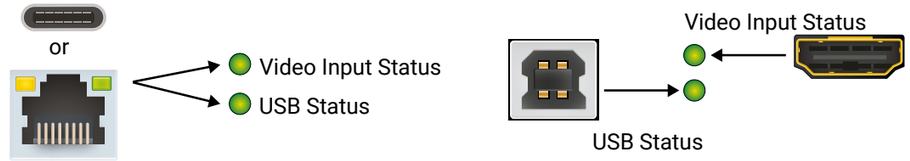







Video Input Status LED (the upper one)		
	off	There is no valid video signal on this port.
	on	There is a valid video signal on this port.
	blinks once	The port is selected by a button press.

USB Status LED (the lower one)		
	off	No USB Host or deselected port.
	on	USB Host connected and selected.
	blink once	Port selected by a button press.





3.2.2. Rear Panel LEDs

Video Output Status		
○	off	The signal is not present or muted.
●	on	The video signal is present.

3.2.3. Ethernet Status LEDs

LED state	Left LED	Function
	Off	0 Mbit/s
	On (Solid)	1 Gbit/s
	Blinking	Activity
LED state	**Right LED**	**Function**
	Off	Not linked
	On (Solid)	No activity
	Blinking	Activity

3.2.4. TPX Connector LEDs

LED state	Left LED	Function
	Off	No connection is established between the transmitter and the receiver units.
	On (Solid)	Connection is established with 10G bandwidth.
LED state	**Right LED**	**Function**
	Off	No data transmission on the port.
	On (Blinking)	Data transmission is active

4

Installation

This chapter is about the installation of the devices and connecting to other appliances, also presenting the mounting options and further assembly steps:

- Mounting Options **23**
- Electrical Connections **25**
- Powering Options **27**
- Power Delivery over Type-C **28**
- USB-C Cable Recommendation **29**
- Connecting Steps **30**

4.1. Mounting Options


To mount the devices, Lightware supplies optional accessories for different usage. There are two kinds of mounting kits with a similar fixing method. The device has two mounting holes with inner thread on the bottom side; see the bottom view in the Mechanical Drawings section. To order mounting accessories, please contact sales@lightware.com. Fasten the device with the screws enclosed to the accessory.

For further information about mounting, please see our Mounting Assembly Guide.

WARNING! Always use the supplied screws. Using different (e.g. longer) ones may cause damage to the device.

Ventillation

WARNING! Never block the ventilation holes on any side of the devices! Ensure proper ventilation by letting the air flow freely.

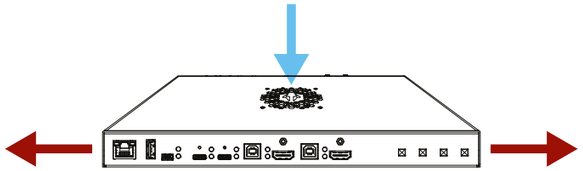


Direction of the airflow

4.1.1. 1U High Rack Shelf

Allows rack mounting for half-rack, quarter-rack and pocket sized units.



1U high rack shelf provides mounting holes for fastening two half-rack or four quarter-rack sized units. Pocket-sized devices can also be fastened to the shelf.

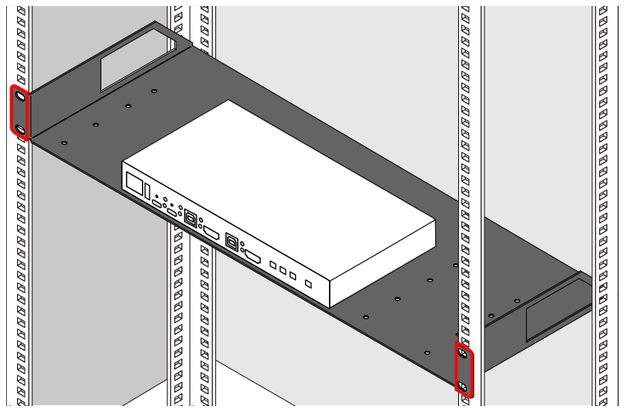


4.1.2. Mounting Plate F100 (and PSU F120)


DIFFERENCE: The following accessory can be purchased optionally, please contact sales@lightware.com.

The examples demonstrate the applications of the UD Kit accessories:


Step 1. Turn the transmitter and the power adaptor upside down.

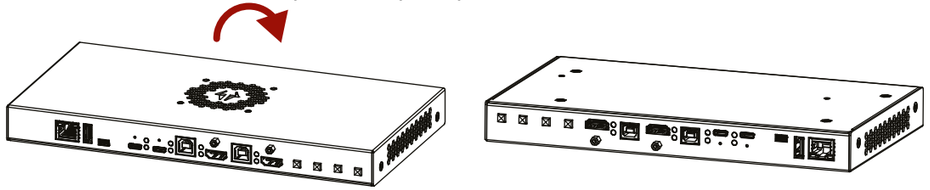


Step 2. Fix the **UD Mounting plate F100** to the transmitter by fastening the screws (2 pcs screws are supplied with the switcher).

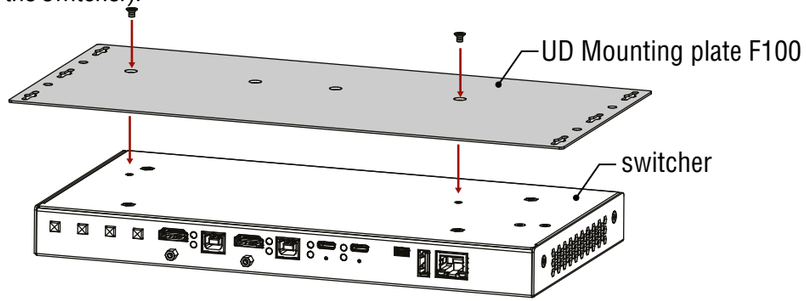

Step 3. Insert the power supply into the **UD Mounting PSU F120.**

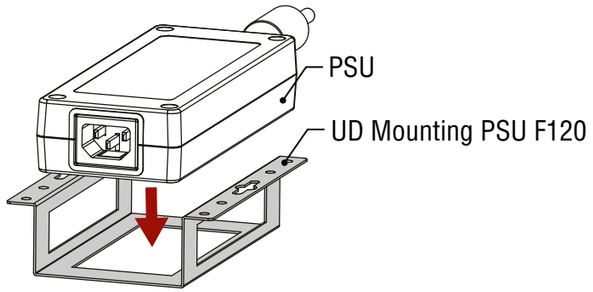

Step 4. Fix the **UD Mounting plate F100** and **UD Mounting PSU F120** under the desk by fastening the screws.

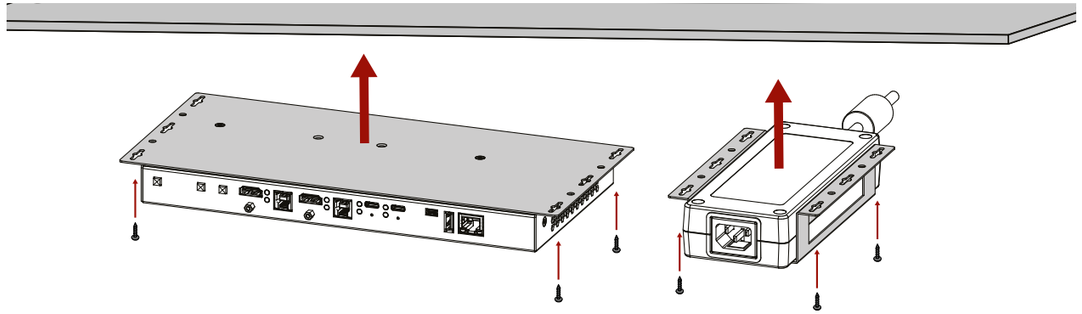

INFO: **UD Mounting plate F100** and **UD Mounting PSU F120** do not contain the fixing screws; they can be purchased from the local hardware store. 4pcs M3-M5 metric or wood screws are needed, M3 size is recommended.

ATTENTION: To ensure the correct ventilation and avoid overheating, insert the transmitter face down to the **UD Mounting plate F100** to keep the ventilation holes free.

4.1.3. C-Lock

The USB-C Cable Lock is a product designed to enhance the security and reliability of a physical connection by providing a 2-point securing option for connected USB-C cables.

Step 1. Plug the USB-C cable in.

Step 2. Fix the C-Lock with the M2 screw.

Step 3. Use the provided zip ties to fasten the flange to the USB-C connector.





4.1.4. H-Lock

The HDMI Cable Lock is a product designed to enhance the security and reliability of a physical connection by providing a 2-point securing option for connected HDMI cables.

Step 1. Remove the screw above the HDMI port.

Step 2. Plug the HDMI cable in.

Step 3. Fix the H-Lock with the M2 screw.

Step 4. Use the provided zip ties to fasten the flange to the HDMI connector.





4.2. Electrical Connections

4.2.1. HDMI Input and Output Ports



The UCX series matrix switcher extenders are assembled with standard 19-pole HDMI connectors with screw lock for inputs and outputs. Always use high quality HDMI cables for connecting sources and displays.

DIFFERENCE: UCX-2x1-TPX-TX30 model has no HDMI output.


4.2.2. USB Connectors

USB Type-C



ATTENTION: The USB-C port(s) of the transmitter are developed to connect native USB-C sources. HDMI–USB-C or DP–USB-C adapters are not supported and not recommended to apply.

The transmitter is supplied with USB 2.0 USB C-type port for video, USB data, and Ethernet transmission. It provides power delivery for a max. of two connected devices up to 60W or 100W for the first connected device. Supported power profiles: 5V/3A, 9V/3A, 15V/2A, 15V/3A, 20V/1.5A, 20V/3A, 20/5A. USB-C connector has symmetrical plug and pin layout.

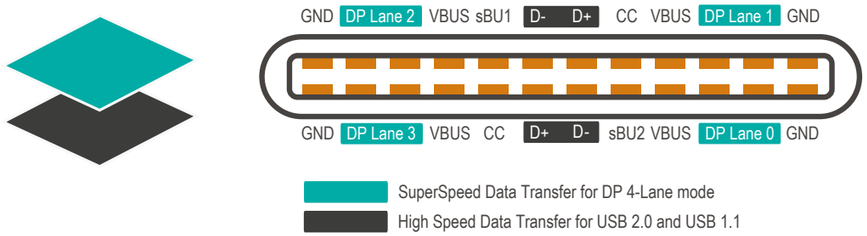

The pinout of the USB-C connector

ATTENTION: USB-C functionality and speed depend on the cable and the device. Mandatory features of the USB-C - USB-C cables are: USB 2.0 (480 Mbps), min. 3A current, min. 60W power.

ATTENTION: In order to charge the connected device with 100W, it is necessary to use a certified cable supporting 20V/5A.

USB Type-A and USB Type-C Downstream Port



UCX-TPX-TX30 series have USB 2.0 (max. 480 Mbps data speed) USB A-type and USB C-type ports for connecting USB peripherials.

The 5V output power capability can be turned on and off for all ports. All ports are able to supply 1.66A.

USB Type-B



The switcher is supplied with USB 2.0 (max. 480 Mbps data speed) B-type ports for connecting USB hosts.


INFO: The black color inside the connector refers to the USB 2.0 data speed.

4.2.3. Analog Stereo Audio

A 5-pole Phoenix® connector is used for balanced analog audio output. Unbalanced audio devices can be connected as well. See more details about the balanced and unbalanced output port wiring in the Cable Wiring Guide section.



Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

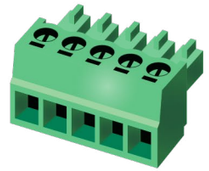

Analog audio connector and plug pin assignments

Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 5-pole), type: MC 1.5/5-ST-3.5.

4.2.4. TPX Connector

The UCX-TPX-TX30 series extenders provide standard RJ45 connectors for TPX input/output ports. Always use high quality Ethernet cables for connecting the transmitters and the receivers.

4.2.5. Configurable Ethernet Port


The extenders contain RJ45 connectors for 1Gbit Ethernet/LAN connection for local control functions.

The Ethernet ports can be connected to a LAN hub, switch or router by a CATx cable. Even though both cable types (straight or cross) are supported and handled by the device, the pin assignment below is recommended.


The **Ethernet 3** port is capable of supplying up to 30W to the connected device (e.g. touch panel).

Wiring of LAN Cables

Lightware recommends the termination of LAN cables on the basis of TIA/EIA T 568 A or TIA/EIA T 568 B standards.

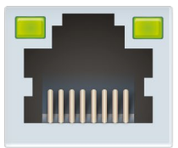

Pin	TIA/EIA T568A	TIA/EIA T568B
1	white/green	white/orange
2	green	orange
3	white/orange	white/green
4	blue	blue
5	white/blue	white/blue
6	orange	green
7	white/brown	white/brown
8	brown	brown

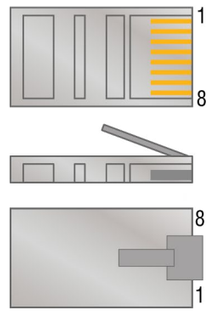

INFO: The Transmitter is capable of sending power to the Receiver over Ethernet through the TPX output port.

4.2.6. GPIO - General Purpose Input/Output Ports


The switcher transmitter is supplied with an 8-pole Phoenix® connector with six GPIO pins that operate at TTL digital signal levels, and can be set to high or low level (Push-Pull). The direction of the pins can be input or output (adjustable). Voltage ranges for GPIO inputs are the following:

	Input voltage [V]	Output voltage [V]	Max. output current [mA]
Logical low level	0 - 0.8	0 - 0.5V	30
Logical high level	2 - 5	4.5 - 5V	18

The maximum total current for the six GPIO pins is 180 mA.



Pin nr.	Signal
1	Configurable
2	
3	
4	
5	
6	
7	5V
8	Ground

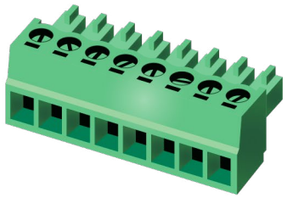

GPIO connector and plug pin assignments

INFO: The recommended cable for the connectors is the AWG24 (0.2 mm2 diameter) or the generally used ‘alarm cable’ with 4x0.22 mm^2 wires.

Compatible plug type

Phoenix® Combicon series (3.5mm pitch 8-pole), type: MC 1.5/8-ST-3.5.

ATTENTION: The occupancy sensor connector and the GPIO port are not compatible with each other because of the voltage level difference, please do not connect them directly.

4.2.7. RS-232 Connector

The extenders contain a 3-pole Phoenix® connector, which is used for RS-232 serial connection.



Pin nr.	Signal
1	Ground
2	TX data
3	RX data



RS-232 connector pin assignments

RS-232 Output Voltage Levels

- Logic low level: 3V .. 15V
- Logic high level: -15V .. -3V

Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 3-pole), type: MC 1.5/3-ST-3.5.

You can find more information about RS-232 in the Serial Interface section.

4.3. Powering Options

INFO: The external power supply is not isolated, 230V side is galvanically connected to the 0 output pole.

Powering Locally

The UCX-TPX-TX30 Transmitter devices are built with 2-pole Phoenix connector for DC power connection.



Pin nr.	Signal
1	-
2	+



Details of the powering information are as follows:

Device Name	Voltage	Electric Current
	24V	6.6A
UCX-4x3-TPX-TX30	✔	✔
UCX-2x1-TPX-TX30	✔	✔

Remote Powering the Receiver

A receiver can be powered by up to 30W over the TPX input port by a UCX-TPX-TX30 Transmitter device.

Remote Powering via the Ethernet Port


The **Ethernet 3** port is capable of supplying up to 30W to the connected device (e.g. touch panel).

Remote Powering via USB-C Ports


The UCX-TPX-TX30 models are designed to provide power delivery for the connected device over the USB-C connector(s).

The following operation modes are available:

- Charge one device on the first connected port with up to 100W. Supported power profiles: 5V/3A, 9V/3A, 15V/3A, 20V/3A, 20V/5A

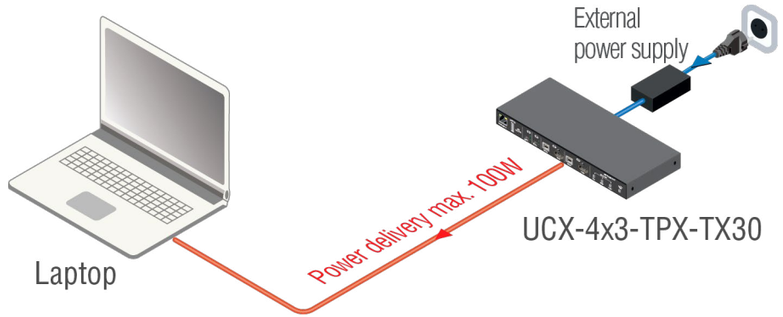

- Charge both devices with 60W. Supported power profiles: 5V/3A, 9V/3A, 15V/2A, 20V/1.5A, 20V/3A

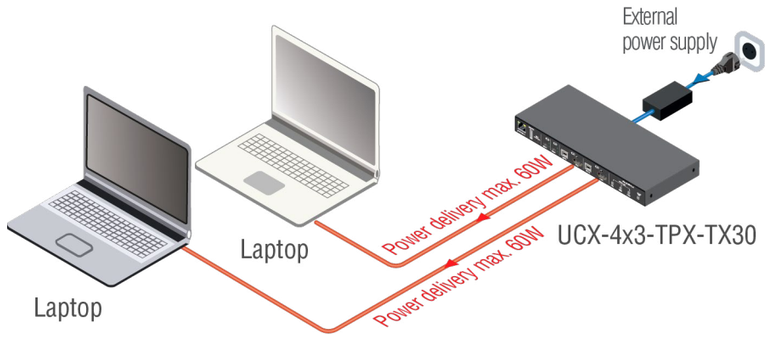

WARNING! Always use the supplied power supply! Use of any other power supplies may lead to damage! Warranty void if damage occurs due to using a different power source.

INFO: Selecting the appropriate power profile happens automatically, no manual intervention required.

INFO: Charging two devices at once is only available with UCX-4x3-TPX-TX30.

Remote Powering via USB-A and USB-C Downstream Ports (D1-D4)

5V output power capability can be turned on and off for all ports. All ports are able to supply 1.66A.

Remote Powering via RJ45 ports

The UCX-TPX-TX30 models are capable of remote powering the receiver via connection between the TPX ports with a CATx cable.


4.4. Power Delivery over Type-C



With Power delivery, these issues were solved:

- Allows negotiation of **up to 100 W** of power delivery to supply or charge equipment connected to a USB-C port.
- Power direction is **not fixed.**
- Intelligent and flexible system-level **management of power** (negotiation); the two connected partners exchange real-time PD protocol messages through the CC (control channel) lines.

USB PD supersedes all previous technologies and does not incorporate them. It can achieve any of the previous levels, but does so with its own methods.

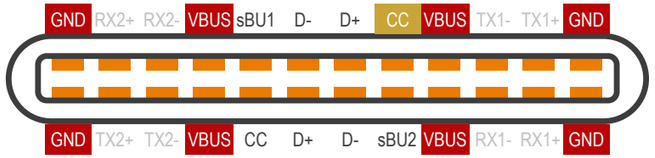

Power Pins of USB-C Connector

- The VBUS and GND pins are power and the return paths for the signals
- The CC channel is used for power negotiation
- The other CC pin can be used for VCONN powering

USB Chargers


USB-C PD covers a range of different power levels, with different amperage and voltage combinations that a charger can deliver, depending on what the device asks for and the cable negotiates. These values are defined by PDO (Power Data Objects).


According to the specification, 12V is not a mandatory Voltage level. The reason for support in case of certain chargers is that the 12V value was on the mandatory list of a former specification.

4.4.1. Power Data Objects (USB-C)

Power Data Object (PDO) defines a power capability:

- Nominal voltage and maximum current
- A Source must have at least one PDO
- The Sink chooses one of the Source's PDOs via CC communication

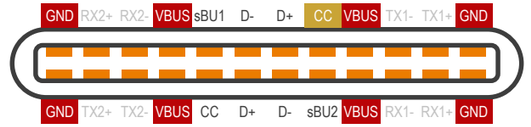

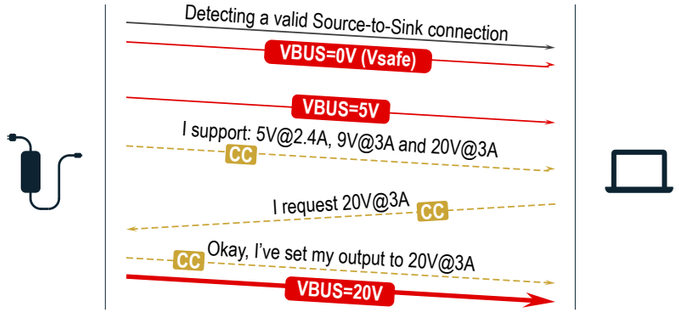

Powering Handshake

Dual-Role Power

With USB-C, the connector is the same on all products. Laptops, certain tablets and smartphones can be both a charger and a charged device (not simultaneously). Source/Sink defines the power role the port is currently operating in.

Source (SRC)
supply power over VBUS

Sink (SNK)
consuming power from VBUS

Dual-Role Power (DRP)
can operate as either
a Source or a Sink


	Source-only	Sink-only	Dual-Role Power
Source-only	Non-functional	Functional	DRP = Sink
Sink-only	Functional	Non-functional	DRP = Source
Dual-Role Power	DRP = Sink	DRP = Source	DRPs negotiate

4.5. USB-C Cable Recommendation

Please find the recommendations for the applied cables below:

- Use Full-featured USB Type-C cables made by reliable brands.
- USB2.0 cables do not have the Superspeed channels, neither DP video, nor USB3 transmission works with them.
- Type-C cables certified for USB 3.x Gen1-Gen2 (5Gbps or 10Gbps) and Displayport Alternate mode HBR2-HBR3 (5.4Gbps or 8.1Gbps) applications are recommended.
- Thunderbolt cables are not backwards compatible with USB3.x or Displayport unless the manufacturer explicitly states so.
- Passive, 20Gbps Thunderbolt 3 cables, which are also specified for USB3.x are a good, but more expensive choice.
- 5A charging capability is advised (for charging with 100W). However, all USB Type-C cables should support at least 3A (up to 60W) charging.

4.6. Connecting Steps

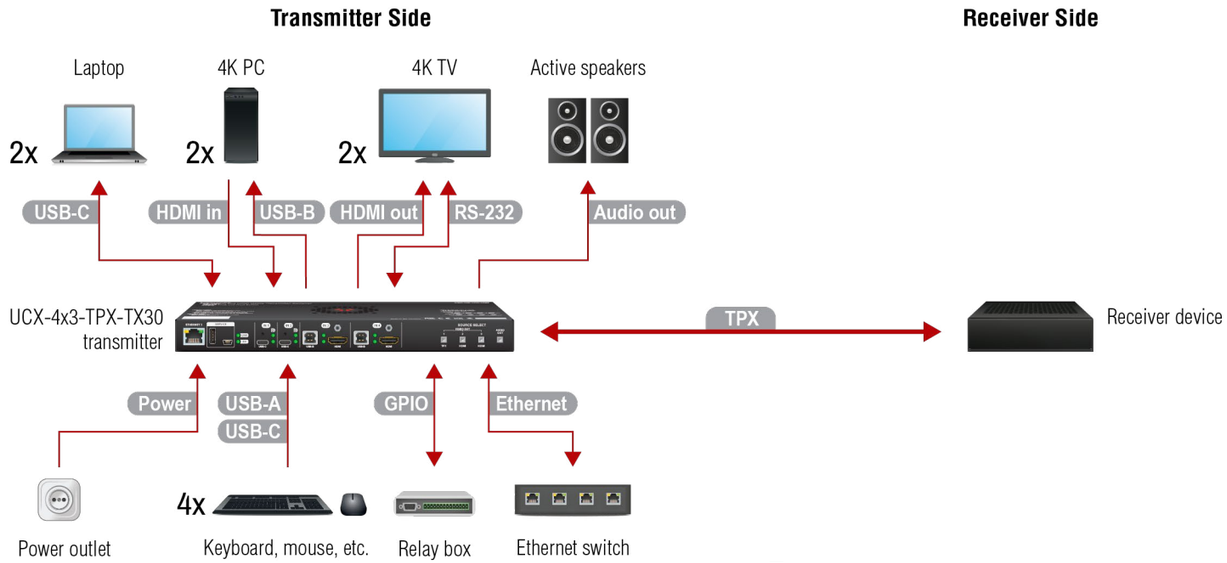

Transmitter side	
TPX	Connect a CATx cable between the TPX output port of the transmitter and the TPX input port of the receiver.
USB-C	Connect a USB-C source (e.g. BYOD laptop) to the USB-C input port. The applied cable shall be certified for Displayport Alternate mode HBR2 (4x5.4Gbps) applications.
HDMI in	Connect an HDMI source (e.g. BYOD laptop or room PC) to the HDMI input port.
Ethernet	Optionally connect the device to a LAN network.
USB	**USB Type-A / USB Type-C:** Optionally connect the USB device (e.g. keyboard and mouse). **USB Type-B:** Optionally connect the USB host (e.g. PC).
HDMI out	Connect an HDMI sink (e.g projector) to the HDMI output port.
RS-232	Optionally for RS-232 extension: connect a controller/controlled device (e.g. projector to the RS-232 port.
Audio out	Optionally connect an audio device (e.g. active speakers) to the analog audio output port by an audio cable.
GPIO	Optionally connect a device (e.g. a relay box) to the GPIO port.
Power	Connect the external power supply to the AC power socket and the switcher unit. Powering the device is recommended as the final step.

ATTENTION: Please only connect one side (TX or RX) to the LAN, otherwise a loop may be created.

ATTENTION: The USB-C ports of Taurus are developed to connect native USB-C sources. HDMI–USB-C or DP–USB-C adapters are not supported and not recommended to apply.

INFO: Connecting USB-B and HDMI ports to the same PC or laptop is recommended in case of IN3 and IN4 inputs (IN2 in case of UCX-2x1-TPX-TX30).

5


Device Concept

The following chapter describes the features of the devices with a few real-life examples:

- Universal Switcher Concept **32**
- USB Interface **32**
- Video Interface **34**
- The Autoselect Feature **36**
- Audio Interface **39**
- Ethernet Interface **39**
- Lightware Advanced Room Automation (LARA) **41**
- Basic Network Security **43**
- 802.1x Authentication **46**
- Advanced Ethernet Security **47**
- WebSocket Service (WS, WSS) **51**
- Bulk Device Management **51**
- Serial Interface **52**
- GPIO Interface **53**
- OCS Interface **53**
- Further Built-in Features **53**

5.1. Universal Switcher Concept


Lightware's universal switcher transmitter exploits the USB-C connectivity for a simplified transmission of 4K video, audio, control signals and power providing meeting participants with easy host switching, utilizing data speeds of up to 480 Mbps under the USB 2.0 providing video supporting up to 4k@60Hz at 4:4:4 video resolution.

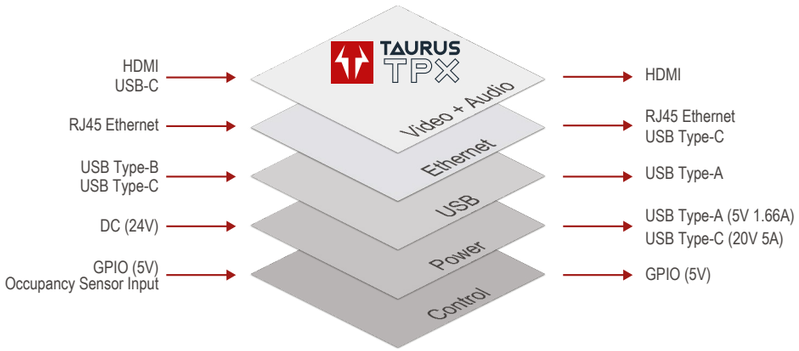

5.2. USB Interface

5.2.1. USB-C Interface


USB-C Pinout and Data Channels

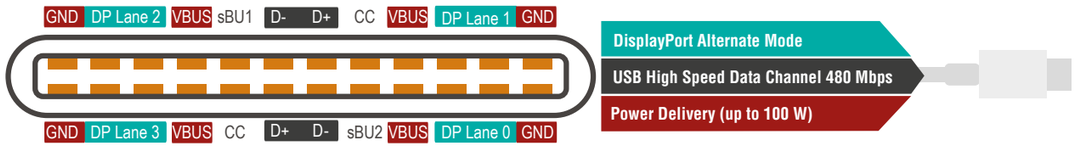

The USB-C interface consists of three main layers:


USB Data

- USB 2.0 data (480 Mbps) is transferred over the High-speed data channels. The built-in USB-Ethernet bridge provides Ethernet connection over the USB-C connector. This function uses the High-speed channels. For more details, see the USB Port Diagram (UCX-4x3-TPX-TX30) and the Ethernet Interface section.




Displayport Alternate Mode (Video + Embedded Audio)

- DisplayPort Alternate Mode: Alternate mode is designed for carrying uncompressed, native Displayport video as non-USB data (All Superspeed Data lanes deliver video signals, it reserves the whole bandwidth of the SS Lines).



Power Delivery

- Going outward to power/charge external devices.




5.2.2. USB Data - USB Interface

Summary of USB ports

	Upstream ports (UFP)		Downstream ports (DFP)	
	USB-C 2.0 (480 Mbps)	USB-B 2.0 (480 Mbps)	USB-A 2.0 (480 Mbps)	USB-C 2.0 (480 Mbps)
				
UCX-4x3-TPX-TX30	2x	2x	2x	2x
UCX-2x1-TPX-TX30	1x	1x	2x	2x

USB Port Diagram (UCX-4x3-TPX-TX30)

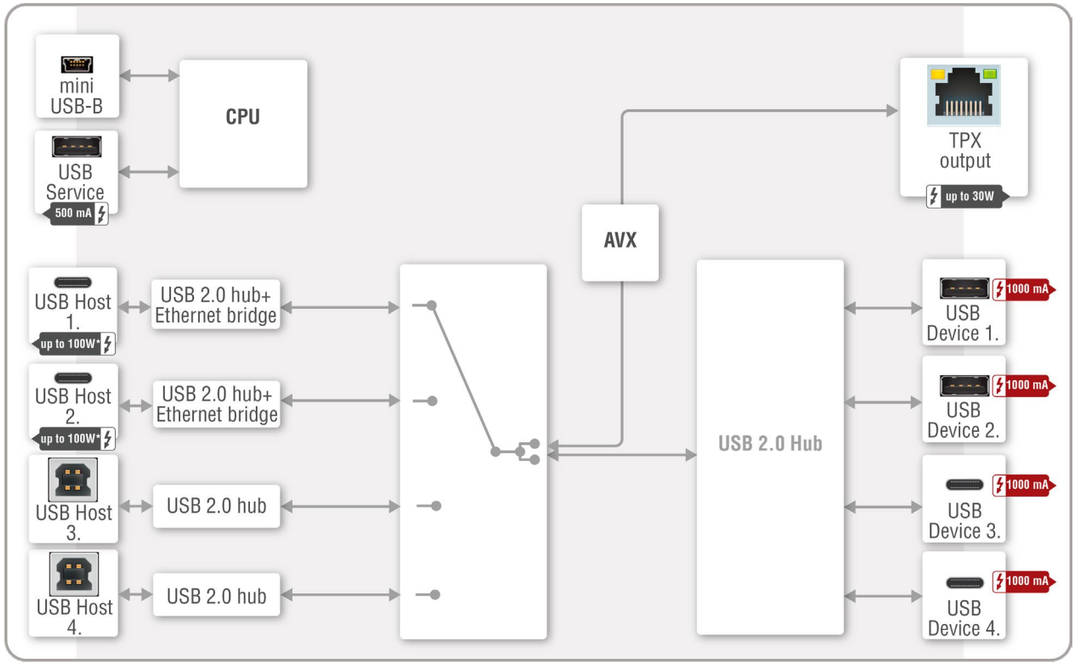

* For more details about the power delivery of the USB-C port, see the Powering Options section.

INFO: The UCX-TPX series devices present 2 tiers in the USB topology due to the USB2 layer (two HUBs).

USB-A, USB-B and USB-C connectors also have high-speed data lines besides Superspeed.

The built-in USB-Ethernet bridge provides Ethernet for the USB-C connection. It is still available while the USB data channels are reserved for video or USB data transmission. For more details, see the Ethernet Port Diagram (UCX-4x3-TPX-TX30).

USB Features

DisplayPort Alternate Mode

This function is available only for USB Type-C connectors. See more details in the DisplayPort Alternate Mode section.

Host detection

One host is available at once. UCX-TPX-TX30 series devices give a feedback about the connected hosts.


In case of USB Type-B ports: When the 5V is detected on USB Vbus, the **Connected** property becomes true.

In case of USB Type-C ports: USB Type-C introduced the port Power Roles: Sink port, Source port and Dual Role Power port. Supplying VBUS is not the privilege of the USB Host anymore.

Detecting the presence of a BYOD device on Type-C ports is done using the Power Delivery protocol over the Communication Channel.


Sending 5V Power to the Device

This function allows sending 5V power to the device (USB peripheral). Most USB devices can be powered by this 5V, so disabling and enabling this property is equal to unplugging the USB connector and plugging it back in.

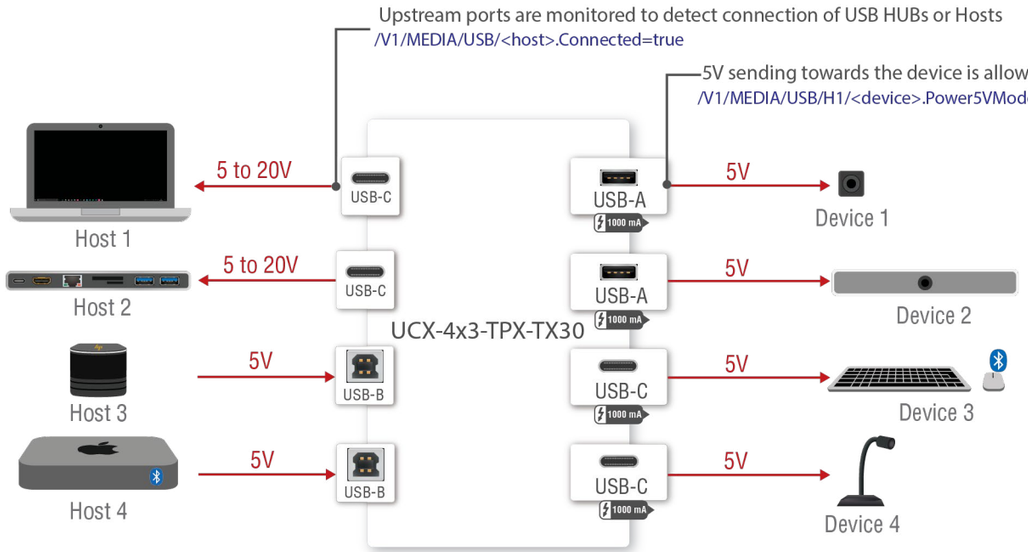

USB features in the UCX-4x3-TPX-TX30

Application of USB - Example

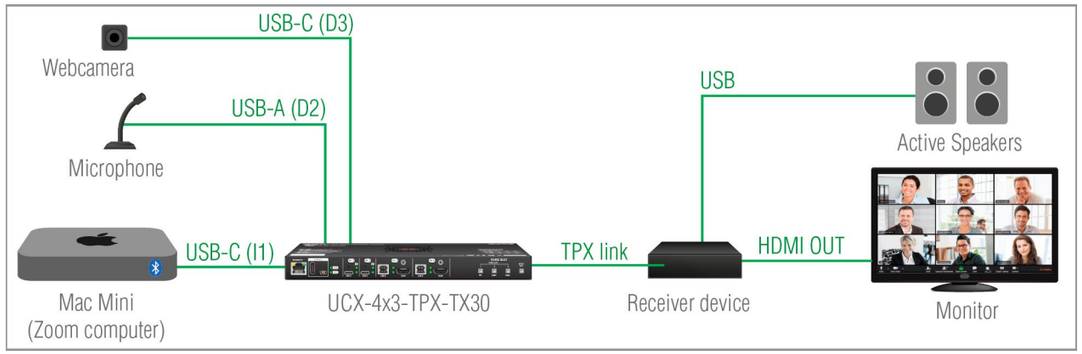

The Concept

The Webcam and USB microphone (D2) are connected to the Mac Mini computer (U3) through a USB HUB (UCX-4x3-TPX-TX30). Zoom running on the computer sends video and embedded audio signal to the Taurus HDMI input (I3).

The switcher forwards the signals to the receiver, which routes the analog audio to the active speakers and digital video to the HDMI display.

Settings

Step 1. In the Crosspoint menu, USB tab, switch the Mac Mini (U3) to the USB hub (H1).

Step 2. Pay attention to the connected USB devices (D1 and D2) and turn on the **Power 5V Mode**.

Step 3. The video crosspoint is switched to I3-O1.

5.2.3. USB Service Ports - USB 2.0 Interface

Summary of USB 2.0 Service ports

	Service ports	
	USB-A USB 2.0 (480 Mbps)	mini USB- B USB 2.0 (480 Mbps)
		
UCX-4x3-TPX-TX30	✔	✔
UCX-2x1-TPX-TX30	✔	✔

The **SERVICE**-labelled USB-A connector is designed for service function. The Mini B-type connector is reserved for future LW3 control. Both features will be added by a future firmware update.

5.3. Video Interface

ATTENTION: The USB-C ports of Taurus are developed to connect native USB-C sources. HDMI–USB-C or DP–USB-C adapters are not supported and not recommended to apply.

Summary of Video Ports in Transmitter (TX) Devices *#welcomescreen*

		Video Inputs		Video Outputs	
					
	Welcome screen option	Displayport Alternate mode HBR2 (4x5.4Gbps)	HDMI 2.0 (18 Gbps)	TPX port (10GBase-T)	HDMI 2.0 (18 Gbps)
UCX-4x3-TPX-TX30	✔	2x	2x	1x	2x
UCX-2x1-TPX-TX30	✔	1x	1x	1x	-

*This HDMI output port is mirrored from the TPX output port - they cannot be switched separately.

ATTENTION: The Welcome screen is disabled in the transmitters if the connected Receiver is UCX-3x3-TPX-RX20.

5.3.1. Welcome Screen

DEFINITION: The Welcome screen is an internal source, which can be customized by uploading an image file, jpg, or bmp. Besides this, custom text can be set to display on the output with or without the image.

DIFFERENCE: The Welcome screen is disabled in the transmitters if the connected Receiver is UCX-3x3-TPX-RX20.

Rules

- Welcome screen is an option and appears as an **additional input**.
- The image and the text can be **displayed separately or together** as well.
- If the image option is not enabled, a **light grey screen** is displayed.
- One image can be stored in the device. If a new image is uploaded, the existing one **will be overwritten**.
- The max. image size is 4MB, preferred resolution is 1280x720.
- The text length can be max. **63 characters** and the following characters are allowed: letters (a-z, A-Z), space, hyphen (-), underscore (_), numbers (0-9) and dot (.). The text color is **black**.
- If no image is uploaded, the factory default image (**Lightware logo**) can be displayed.




The Default Welcome Screen

Limitations

- If the I1 input port is switched to an output, the **Welcome screen is not available**.
- If the Welcome screen is switched to an output:
  - **I1 input port is not available** and I1 audio cannot be de-embedded to the analog audio output port.
  - I1 does not send hotplug signal and the **signal parameters of the I1 port are not measured**.
- If the audio of the I1 port is switched to the analog audio output and the Welcome screen is switched to the output, **the audio signal is lost**, however, the audio crosspoint is not changed.


5.3.2. Video Port Diagrams

UCX-4x3-TPX-TX30

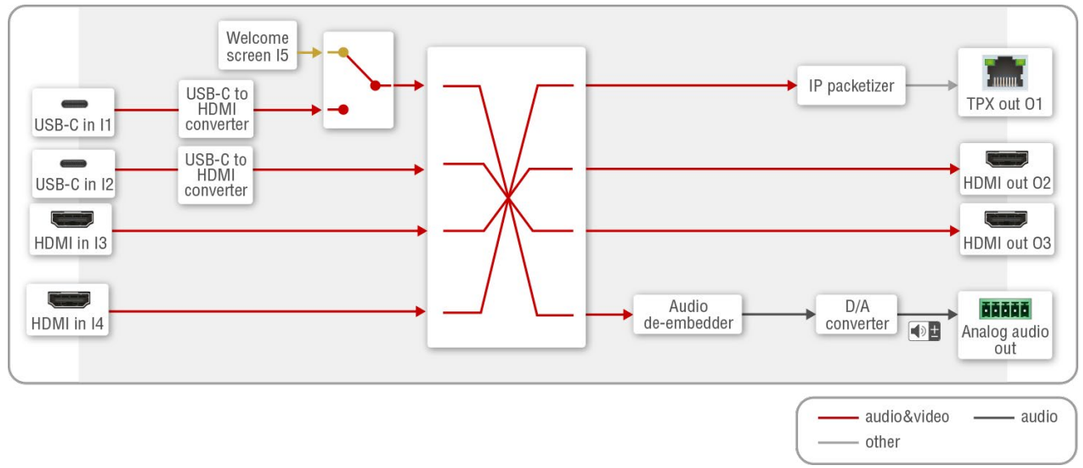

INFO: The source that is connected to the USB-C port sends DisplayPort video signal. This signal is converted to HDMI by the video IC internally.

UCX-2x1-TPX-TX30

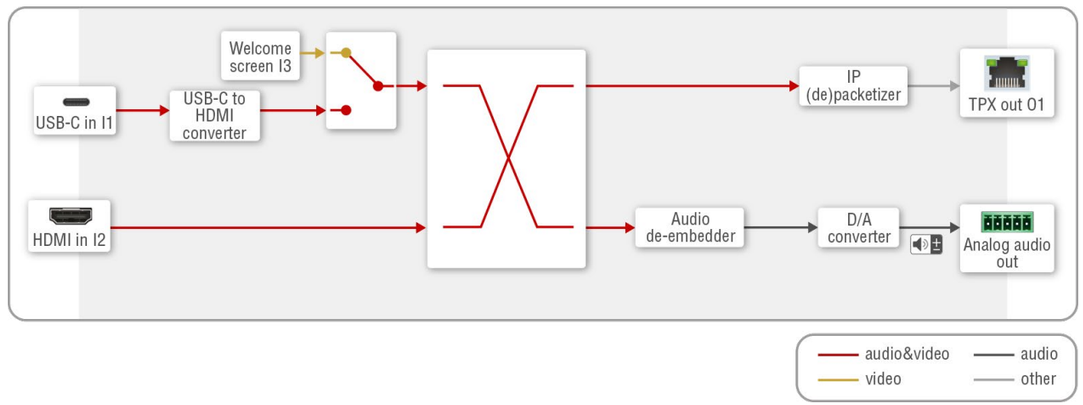


INFO: The source that is connected to the USB-C port sends DisplayPort video signal. This signal is converted to HDMI by the video IC internally.


5.3.3. DisplayPort Alternate Mode

USB-C sources send Displayport signal for video transmission.

Displayport Alternate mode allows using the USB-C cable instead of DisplayPort cable for DP video signals. The standard uses the Superspeed data transfer channels for carrying the video stream.



ATTENTION: The bandwidth of the video is based on the capacity of the source and the sink. USB3.1 Generation (Gen1=5Gbps, Gen2=10Gbps) is not related to DP bitrate (HBR1=4x2.7Gbps, HBR2=4x5.4Gbps)

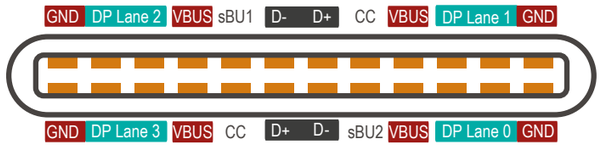

USB-C pinout in DP Alt mode

In Alt Mode, 2 or all 4 of the USB-C Superspeed data channels can be configured as DisplayPort lanes. A full-bandwidth DisplayPort connection is always defined as 4 lanes.

The table below shows the correlation of the video resolution and the assigned lanes:

DisplayPort Video			DisplayPort Alternate Mode			
			2-Lane DP		4-Lane DP	
DisplayPort Standard	Raw bandwidth (1 lane)	Display Resolutions	BW	Display Resolutions	BW	Display Resolutions
HBR1 (DP 1.0 / 1.1)	2.7 Gbps	1440p@60 Hz	5.4 Gbps	1 × FullHD	10.8 Gbps	1× 4K@30 Hz
HBR2 (DP 1.2)	5.4 Gbps	4K@60 Hz	10.8 Gbps	1× 4K@30 Hz	21.6 Gbps	1 × 4K@60 Hz

5.4. The Autoselect Feature

Aside from manually selecting crosspoints, you can choose the Autoselect option in case of video and USB ports.

Video input source can be selected in the following ways:

- using the front panel buttons
- using Lightware Device Controller (LDC)
- sending LW3 protocol command or
- using the Autoselect function.

There are several Autoselect policies as follows:

- Disable autoselect
- First detect
- Last detect
- Follow video (in case of USB and audio ports)

INFO: SignalPresent cannot be sensed on I1 if I3/I5* is displayed due to the mutually exclusive operation of video input I1 and the internal Welcome screen image generator I3/I5*. Welcome screen image will disappear and the video crosspoint will be switched to I1 upon connecting a Host computer to I1, regardless of whether the computer sends Displayport image or not.

* **I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30** model.

Individual input settings

This setting defines the priority level of the ports. The priority property is valid both for first detect and last detect operation modes. It overrides the chronological order of the appearance of the active video signal. The highest priority active input is always selected to transmit (1- highest priority, 100- lowest priority).

TIPS AND TRICKS: To use the individual input settings, change the default priority settings from 1 to 5 depending on their importance (e.g. I1 priority:1; I2 priority:2; I3 priority:3; I4 priority:4; I5 priority:5).

ATTENTION: The autoselect function remains active after the manual crosspoint switching. This operation mode works in contrast to the other Lightware matrix switchers or extenders.

Disable autoselect

The crosspoint state change only happens manually.

First detect

The selected input port is kept connected to the output as long as it has an active signal. The crosspoint changes when the signal becomes inactive on the chosen input, or when the video signal appears on a higher priority port.


TIPS AND TRICKS: To uphold the first detect mode, default priority settings (I1 priority:50; I2 priority:50; I3 priority:50; I4 priority:50; I5 priority:100) are appropriate. Lower priority of the I5 port is highly recommended, because this is an internal source with constant video signal,thus this port is always the first one.

Last detect

It is always the last attached input that is selected to transmit. The crosspoint changes when the signal becomes inactive on the chosen input, or when the active video signal appears on a port with the same or higher priority.


TIPS AND TRICKS: To uphold the last detect mode, default priority settings (I1 priority:50; I2 priority:50; I3 priority:50; I4 priority:50; I5 priority:100) are appropriate.

Automatic Input Selection - Example 1.

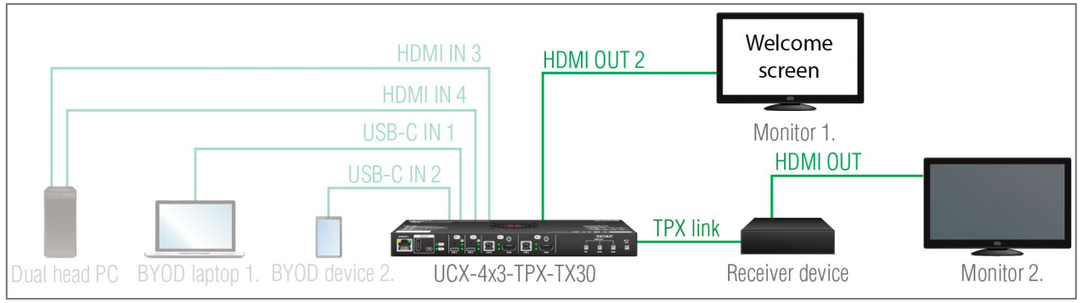


The Welcome screen appears on the Monitor 1. (O2) when no active source is connected.

The video signal of the dual-head PC (I3, I4) can be seen on Monitor 1. and Monitor 2. (O2 and O3) when it is powered on and no BYOD device is connected.

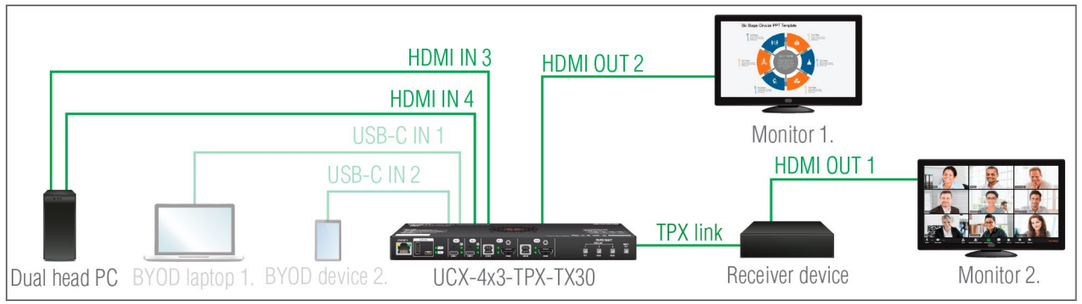

BYOD laptop 1. (I1) is displayed on Monitor 1. (O2) and BYOD device 2. (I2) can be seen on Monitor 2. when they are connected and send active video signal.The individual input settings are the following:

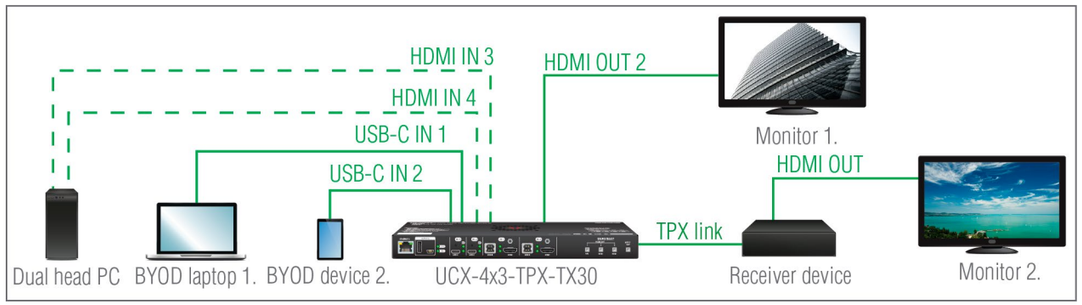


O1: I1 priority:1; I2 priority: disabled; I3 priority:2; I4 priority: disabled; I5 priority:3


HDMI OUT: I1 priority: disabled; I2 priority: 1; I3 priority: disabled; I4 priority: 2; I5 priority: disabled

Automatic Input Selection - Example 2.

One of the BYOD laptops is switched to Monitor 1. depending on the operation policy (Last detect/first detect) and the connection order of the BYOD laptops. The USB autoselect mode should be **Follow video,** the USB peripherials (webcam, microphone etc.) are connected to the chosen laptop. The USB Type-C provides Ethernet to the BYOD device, so the conferencing software can run there.

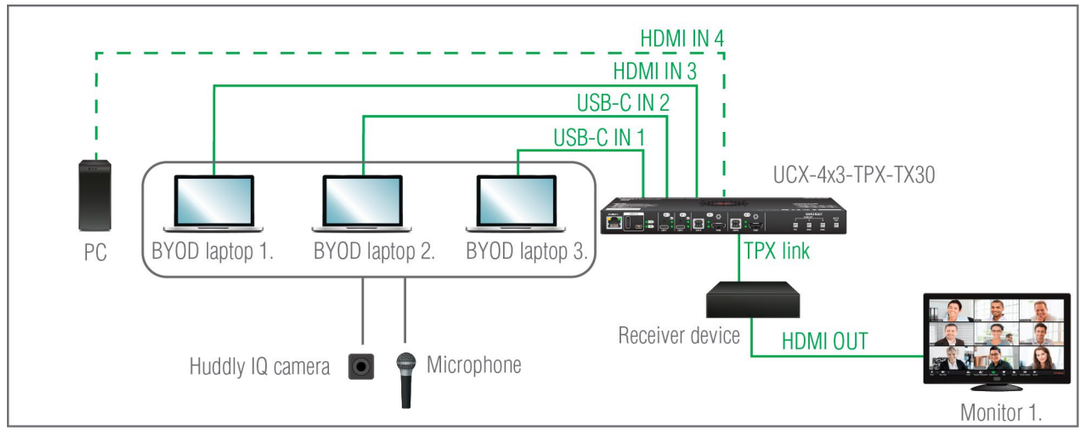


When no active BYOD device is connected and the local PC is powered on, the UCX-4x3-TPX-TX30 is switched to I4 and transmits the video to Monitor 1 through the receiver.

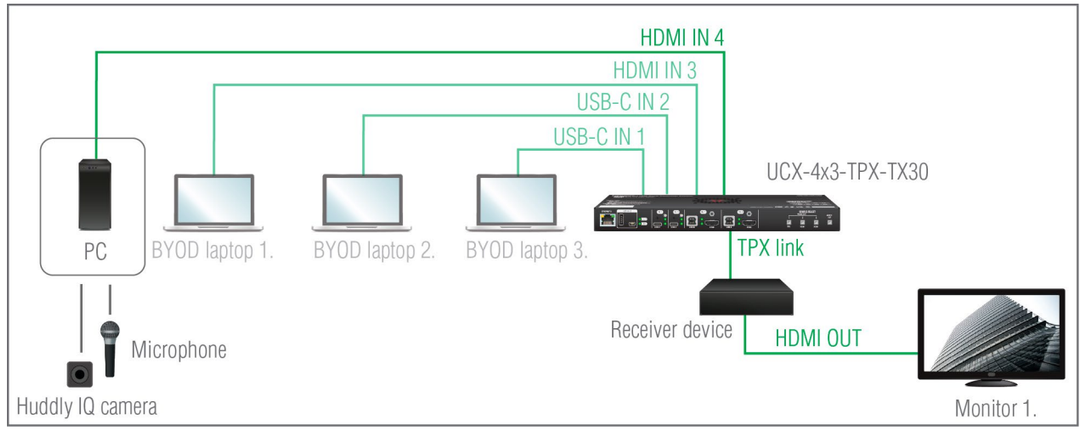

The individual input settings are the following:

HDMI OUT: I1 priority:1; I2 priority: disabled; I3 priority:2; I4 priority: disabled; I5 priority:3

Automatic Input Selection - Example 3.

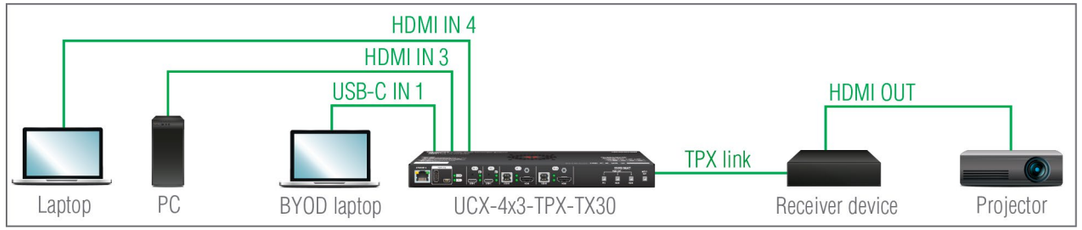


The laptop on HDMI IN 4 will be automatically switched to the HDMI output on the receiver if there is no other source connected to the switcher. If the PC is powered on and has active video signal, the HDMI IN 3 will be switched to the HDMI output. If the BYOD Laptop is connected through the USB-C input 1, it will be switched to the HDMI output – independently of the presence of the other video signals.

Set the Autoselect mode to Last detect for HDMI OUT 1: The priorities are the following (the lowest number means the highest priority):

Source device	Input port	Priority
Laptop	I4 (HDMI IN 4)	**3**
PC	I3 (HDMI IN 3)	**2**
BYOD Laptop	I1 (USB-C IN 1)	**1**

Priorities can be set in Lightware Device Controller software, see the related settings in the HDMI Video Output section.


Automatic Input Selection - Example 4.

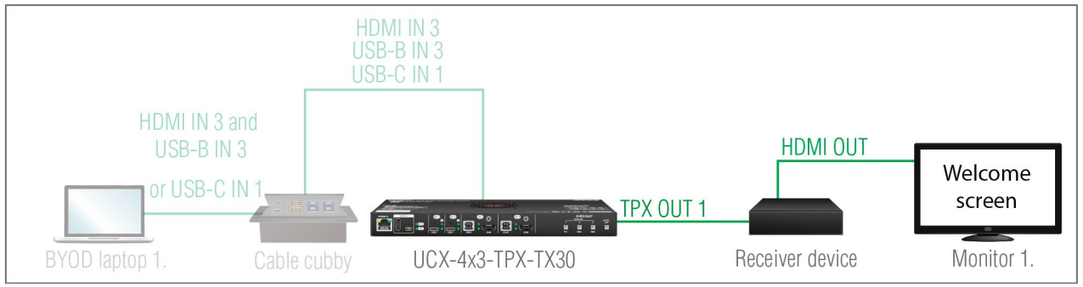

The Welcome screen appears on the Monitor 1. (O1) when no active source is connected. A presenter can choose what cable(s) are appropriate for their BYOD. Either a USB Type-C cable alone for both USB and Displayport, or one USB cable (USB-B or USB-C) for data and one HDMI cable for video can be used. The UCX-4x3-TPX-TX30 will switch both USB and video layers accordingly. Cable cubby for BYOD #1 has three cables connecting to USB-C (IN1), USB-B (IN3), HDMI (IN3).


Case 1.

When the BYOD laptop uses HDMI for video and USB-B for data.

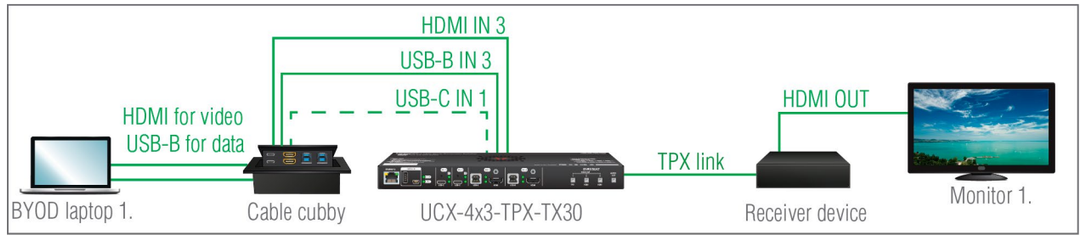


Case 2.

When the BYOD laptop uses HDMI for video and USB-C for data.

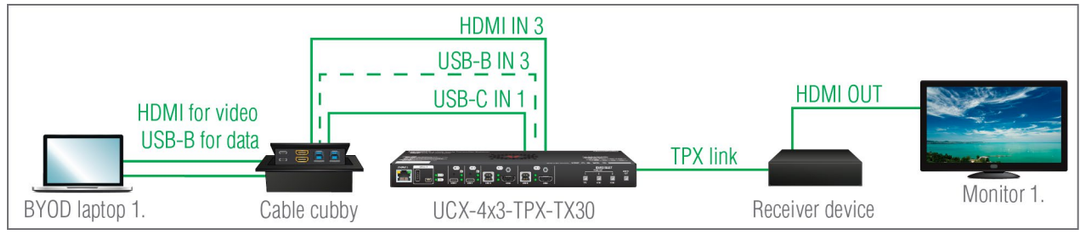

Case 3.

When the BYOD laptop uses USB-C for video and data and USB-C for data.

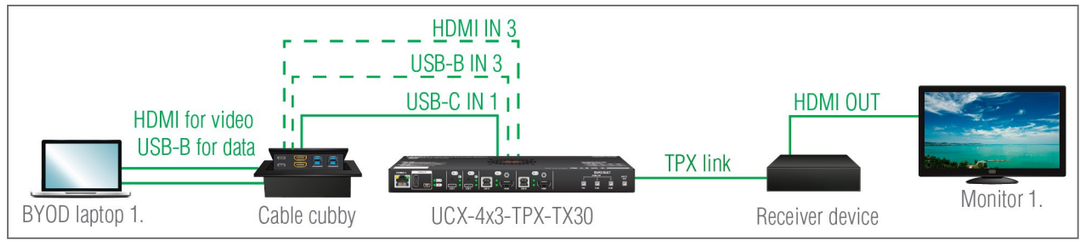

The individual input settings are the following:

Video

O1:Last detect; I1 priority:1; I2: disabled; I3 priority:1; I4: disabled; I5 priority:2

ATTENTION: Take care that the O2 video is not switched to I5 because of the crosspoint limitation: I1 and I5 ports are not available at the same time, only one of them can be selected to any output.

USB


H1: Last detect, U1 priority:1; U2 priority:1; U3 priority:1; U4 priority:1

5.5. Audio Interface

Summary of Audio Ports

	Audio Outputs
	Analog audio de-embedding
	
	5-pole Phoenix® Combicon
UCX-4x3-TPX-TX30	✓
UCX-2x1-TPX-TX30	✓

Video and Audio Port Diagram (UCX-4x3-TPX-TX30)

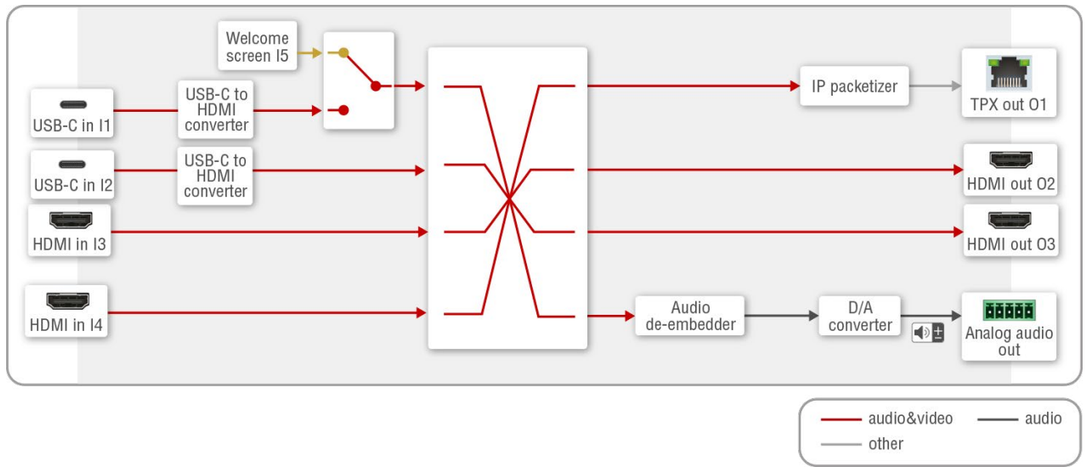

5.5.1. Analog Audio Interface

The device can receive embedded audio signal on the HDMI or USB-C inputs.

The switcher transmitter has a built-in audio de-embedder, which means the device is able to de-embed audio from its video ports to its analog audio output port.

> **ATTENTION:** Audio can not be de-embedded from I1 to O3 as long as I3/I5* is in use. This is due to the mutually exclusive operation of I1 and I3/I5* ports. Embedded audio signal present will read false in the case described above.


* **I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30** model.

5.6. Ethernet Interface


Summary of Ethernet ports

	USB-C	Ethernet 1	Ethernet 2	Ethernet 3	TPX
					
UCX-4x3-TPX-TX30	2x	✓	✓	✓	✓
UCX-2x1-TPX-TX30	1x	✓	✓	✓	✓

Ethernet Port Diagram (UCX-4x3-TPX-TX30)

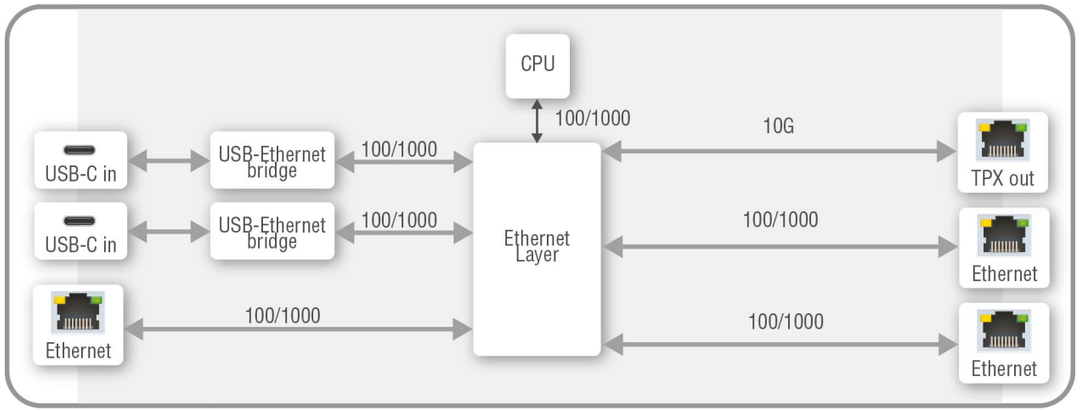

Ethernet Port Diagram (UCX-2x1-TPX-TX30)

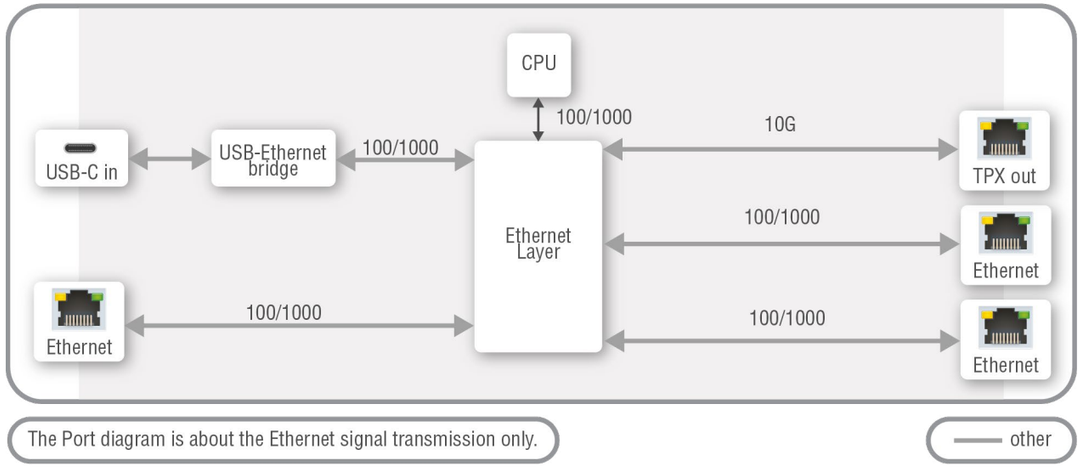

The device can be controlled via Ethernet (standard RJ45 connector). This interface supports:

- Configuration of the device with Lightware Device Controller. For more information about the LDC, see the Software Control Options section.
- Control of the Lightware devices with LW3 command protocols. See more details about the Lightware protocol in the LW3 Programmers' Reference section.
- Establishing the connection to the Lightware Device Updater v2 software and performing Firmware Update.
- Creation of a local network, passthrough the Ethernet traffic.
- The switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands. For more details, see the WebSocket Service (WS, WSS) section.
- REST API interface is also desiged for control UCX switcher. See more details in the Lightware REST API Reference section.

USB- Ethernet Bridge

The built-in USB- Ethernet bridge provides Ethernet for the USB-C connection through the USB-2.0 layer.

System Requirements of USB- Ethernet Bridge

The built-in USB- Ethernet bridge operates as a Network Interface Card (NIC).

- Windows an MacOS X operation systems handle it plug and play, however, we highly recommend making sure you have the most recent version of the driver. The driver updates can be downloaded from the following website: https://www.realtek.com/Download/List?cate_id=585
- It is possible to disable the USB-Ethernet Bridge by disabling the Ethernet port connected to it. For further information, please see the Ethernet section for setting in LDC, the Enabling/Disabling the Ethernet Port section for setting in the REST API, and the Enabling/Disabling the Ethernet Port section for setting in the LW3.

5.7. Lightware Advanced Room Automation (LARA)

Lightware Advanced Room Automation (LARA) is a future-proof room automation platform that enables controlling both Lightware and 3rd-party devices in a meeting room area and also accessing remote services over the network. LARA has an easy-to-use graphical interface that allows the integrators to set up and deploy their system and also helps the technicians and IT personnel to check the system status and diagnose possible errors. LARA comes with built-in touchscreen control support, where a fully customizable graphical interface can be provided to literally any modern touchscreen device.

LARA eliminates the need for an external controller unit or PC, as it is embedded into the Taurus UCX family. Because of the modular design, the integrators can build their system based on existing modules (drivers, touch screens, services and more) or create their own. Thanks to the approach of open source modules, the integrators can easily modify or extend the existing modules, or use them as a base for their new solutions.

With LARA, integrators can set up the behavior of the meeting room by creating rules and setting various parameters, there is an option to write codes. JavaScript is the most widespread language today, which has a steep learning curve and huge online community. By using the popular NodeJS engine, the integrators can rely on the public NPM repository (http://www.npmjs.org) and use the free packages available there.

We are working hard to release new functionalities regularly and make LARA more and more user-friendly.

5.7.1. Opening the LARA interface

ATTENTION: When connecting to a device, you will need the 443 port for HTTPS connection, and optionally the 6107 port for raw TCP connection and the 80 port for HTTP connection.

Step 1. Enable LARA in your device. Navigate to the Settings/Network tab. First set a password for the 'admin' user, then enable LARA via the checkbox.

INFO: As LARA is capable of running NodeJS scripts accessing your network, it is imperative to prevent open access that could be used by a malicious attacker.

Step 2. Open LARA in either of the following ways:
- Via the **Open LARA** button under the System tab in the LDC, or
- By typing http**s**://<ip_address>/lara into the address field of your browser. Even though any modern browser should work, we recommend using the latest Chrome or Safari versions. If you don't know the IP address of your device, please use Lightware Device Controller to discover it on your local network.

LARA does not run by default, however, once it starts, it will remain running even after resetting the device or closing the browser, until it is stopped by the user. It can be disabled in the LDC software. Please be aware that calling factory reset will erase LARA configurations.

While a graphical interface is available for most of the general functions, LARA offers the option to use it with JavaScript codes for every step and modification for both basic and more advanced task creation. Wizard and JavaScript code usage can easily be combined for maximum efficiency.

Help

LARA offers a built-in help interface, which is available by clicking on the **Help** button near the top right corner. If you have active Internet connection, the LARA User Manual is available either via the QR code or the clickable link beneath it.

5.7.2. Running LARA

LARA uses modules and their instances as basic building blocks of a configuration.

Modules

Modules are software pieces that give a base to the processes in the LARA interface. There are five module categories available as follows:

- **Driver**: a module connected to a certain device in the network
- **Logic**: a module for organizing the other modules into a system
- **Userpanel**: provides a user interface for the end user (e.g. tabletop control)
- **Service**: a module connected to a certain service in the network (e.g. calendar services)
- **Script**: any custom module for a specific purpose

LARA modules have access to the devices' every port, connection interface and the entire parameter library of the LW3 tree.

There are several pre-made modules that can be found in LARA for quick and easy system setup. These modules can be found in the **Browse Modules** menu by clicking on the **Create New** button and choosing one of the options from the **Base modules** drop-down list.

- **Taurus/MMX2 driver** module - for controlling the device
- **Taurus/MMX2 CEC driver** module - for sending CEC messages via the HDMI ports
- **Generic LW3 driver** module - for controlling another Lightware device that supports LW3 protocol
- **Generic TCP/IP driver** module - for controlling any device that is available via TCP/IP connection
- **Cisco Webex script** module - integration with Cisco Webex supporting BYOD (Bring Your Own Device) functions
- **OCS sensor serial message script** module - for sending a serial message to a device (e.g. Display) if the Occupancy Sensor detects a signal
- **Generic REST Client driver** module: universal module for controlling third-party devices over HTTP(S) REST API (PUT, POST, GET, DELETE)
- **Signal present serial message script** module - for sending a serial message to a device (e.g. Display) if a video signal is detected on a port

Instances

Modules can be run as instances. Different parameters may be added to different instances for the same module to include every possible process in the desired system.

Instances can communicate with each other using **Events** and **Methods**.

ATTENTION: It is currently only possible to run all instances together, or run none of them.

Events

Every instance can emit Events when something happens. An event is always momentary, it will be emitted immediately when something triggers it. An event can be used by other logic or user panel instances, or even by the same instance itself.

Methods

Methods are software pieces in any instance, which can be invoked (called) to initiate an activity in the associated room equipment.

Rules

Rules allow setting up processes according to changes in the state of the device. A status change might dispatch an **Event**, which can trigger a rule. The rule will then be able to execute an **Action** according to the triggering Event. When defining a new rule, a triggering Event must be selected. In case of Logic and Userpanel modules any instance can be chosen as the source of the Event. In other cases only the given module's own Events may be selected.

Once an Event has been dispatched that triggered a rule, an Action will be launched. An Action may have an unlimited number of steps defined.

5.7.3. Downloading/Uploading a Configuration


The modules, or even the entire configuration can be downloaded to the computer as a .zip file, or a previously saved configuration can be uploaded to a device.

ATTENTION: If the links to methods/properties are compatible with other models within the UCX/MMX2 product family, the configuration will work without a problem. However, sometimes a simple fine tune in the LW3 path of the properties/methods is necessary.


In case of downloading (and later uploading) a configuration of the module, these files are contained within the .zip file.

5.7.4. Status Board

The Status board offers real-time information about the connected devices through all running instances as Status Indicators. Such information might include connection status, signal presence, or even parameter status tracking. The indicators may show either static or self-refreshing information based on the current states of the device.

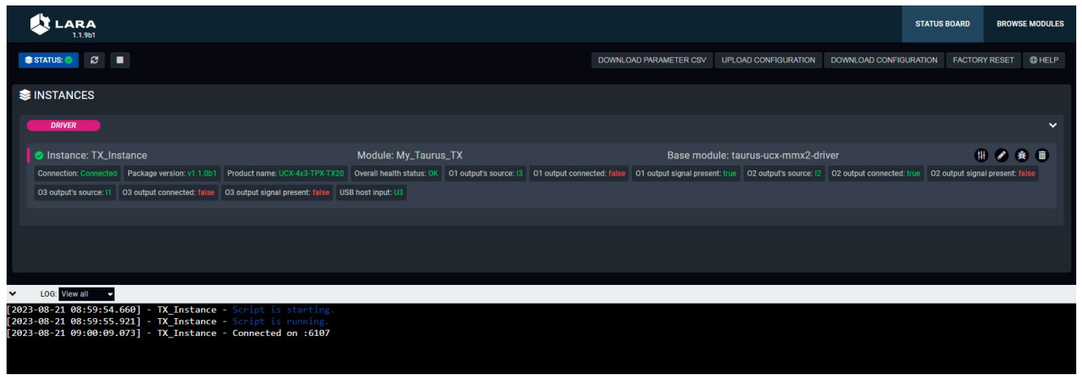

5.7.5. Touch Panel Support

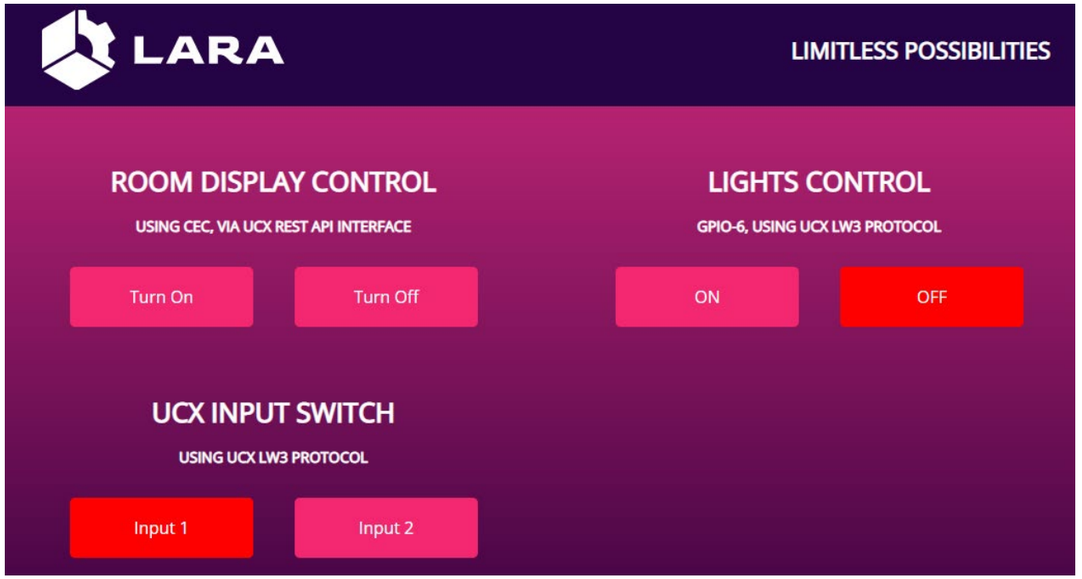

LARA offers support for any touch panel device that has a browser installed on it. With the use of Userpanel modules, you can easily upload project specific HTML/CSS/JS files to your devices, and edit or change them in LARA in real time. There is a Content option under a Userpanel module for the purpose of uploading and editing these files. It is also possible to create folders and subfolders for easy organization. Uploading can be done by dragging and dropping the files into the content section.

For proper operation, in the HTML code a unique ID shall be assigned to every HTML element where LARA interaction is required.

For more information, sample configurations and training materials, please visit lightware.com/lara or take a look at the LARA User Manual.

INFO: It is possible to update LARA independently from the UCX-TPX-TX30 FW, using its own separate FW package. Please be aware that upon a factory reset, the system will restore the LARA version built into the UCX-TPX-TX30 FW package, and the separately installed LARA FW will be discarded.

5.8. Basic Network Security

These basic network security improvements help to prevent unauthorized access to the UCX series switchers:

- Disable Ethernet Ports
- Disable Network Services
- Basic Authentication
- Encryption (HTTPS,WSS)
- Session Management (only in webLDC)
- Lightware Crypto Core

The following table summarizes the ports, protocols, features and the security options.

Port number	Protocol	Function	Affected software	Port disable option	Encryption	Authentication	Other features
80	TCP	HTTP port (LW3 over WS, REST API, LARA user panels)	LDC, LDU2	✓	×	✓	FW update, Welcome Screen image upload, Log files, Serial messaging
443	TCP	HTTPS port (LW3 over WSS, REST API, LARA management GUI)	LDC, LDU2	✓	✓	✓	
6107	TCP	LW3 protocol	LDC	✓	×	✓	
6970	TCP	TCI protocol between the UCX-TPX API server and the BlueRiver Control Server	BlueRiver Control Server	×	×	×	
8080	TCP			×	×	×	
8001, 8002; 8003 (RX)	TCP	Serial over IP (RS-232)	-	✓	×	×	
161	UDP	SNMP	-	×	×	×	
224.0.0.251: 5353	UDP	mDNS / Bonjour (Device Discovery)	LDC, LDU2	×	×	×	
230.76.87.82: 37421	UDP	Remote IP	LDC, LDU2	×	×	×	

INFO: The ports are necessary to be passed via a network switch/firewall for proper operation between the device and the softwares.

ATTENTION: Be careful when combining the security functions; improper settings may cause malfunction.

5.8.1. Disable Ethernet Ports

Internal Ethernet connections can be limited by enabling/disabling the Ethernet ports depending on the actual system configuration (e.g. Ethernet layer of the USB Type-C port can be disabled if necessary).

5.8.2. HTTP/HTTPS

UCX series switcher transmitter provides HTTP/HTTPS server services on its 80 (for HTTP) and 443 (for HTTPS) ports. It makes it possible to use the following services via HTTP/HTTPS:

- LW3 over WebSocket (WS, WSS) for LW3 protocol or using LDC for device control
- REST API for device control
- Serial message sending with REST API
- Firmware update
- Uploading WelcomeScreen image
- LARA interface
- Downloading logfiles from the device

ATTENTION: LARA management GUI is only available through HTTPS and it is password-protected.

Basic Authentication


There is a random-generated factory default password applied to the device during manufacturing. This password is required for authentication **after calling factory default values**.

To limit user access for HTTP/HTTPS server services, basic authentication can be turned on for the ports 80 and 443 separately.

HTTP is disabled by default.

ATTENTION: Authentication feature in UCX-TPX-TX30 series is not equal to the Cleartext login feature in the Advanced Control Pack v3 of the TPS family extenders.

The picture below illustrates the successful authentication process:

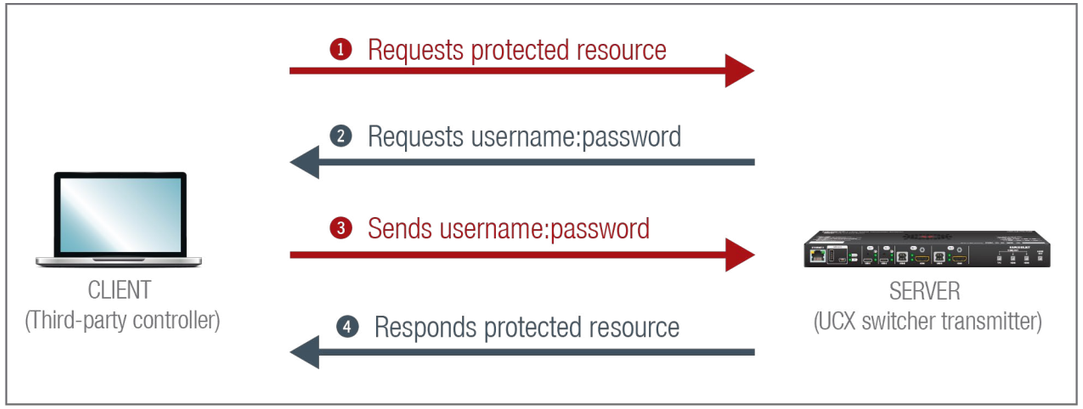

User

- The transmitter can manage one user (with fixed username: admin) with full access.

Password

- UCX-TPX-TX30 models are equipped with a random-generated factory default password. Authentication is enabled and HTTP is disabled by default.
- The old password is required when password is changed.
- The password must be at least 10 characters long, and any UTF-8 character is allowed.
- Password history is maintained in the web authentication, not allowing for the last 10 passwords to be set again.
- The device does not store the password string, so it can not be queried.
- If a wrong password is entered during login five times in a row, all login attempts are denied for 15 minutes.
- The password can be reset by calling factory defaults (Reset to Factory Default Settings).

Follow the instructions to set the authentication:

Step 1. Set the password with Lightware Device Controller software (Network) or REST API command (Setting a Password for Authentication).

Step 2. Enable the authentication on the chosen port (HTTP: 80 or HTTPS: 443) with the Lightware Device Controller software (Network) or LW3 protocol command (Enabling/Disabling the Authentication).

Step 3. Restart network services.


ATTENTION: The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP.

INFO: It is possible to call a "soft" factory reset on the devices that restores most factory default settings, **except for example: the login credentials (password)**. This is currently only available over REST API, for more information, please see the Configuration Parameters - Setting "Soft" Factory Reset section.

5.8.3. Encryption (HTTPS, WSS)

HTTP protocol uses clear text format for data transport. This method allows a third-party to listen in and eavesdrop on the transferred information.


HTTP request-response

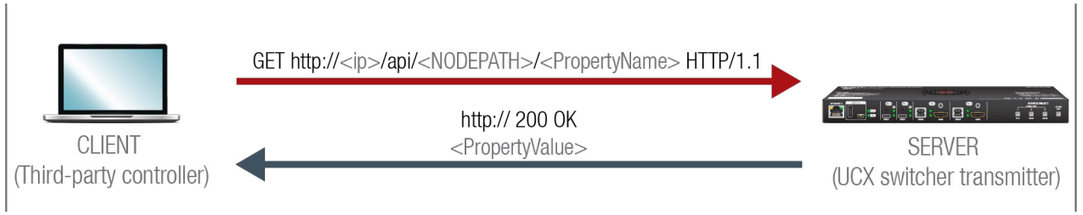

To ensure the secure data transmission, the HTTP port (80) can be disabled, and the all the information can be transferred via HTTPS (443 port). HTTPS protocol encrypts the clear text, so it becomes incomprehensible for a third-party and keeps the data secure.

INFO: HTTP is disabled by default.

HTTPS request-response

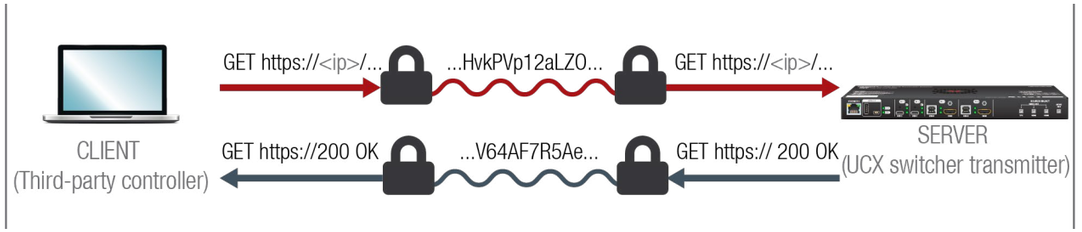


The same services are available on HTTPS as HTTP (for the detailed service list, see the HTTP/HTTPS section).

- The UCX series switcher transmitter generates a self-signed certificate, so the user does not have to deal with the configuration.
- SSL certificates can also be uploaded into the device (Certificate Management).
- A new certificate is generated after hostname changing or restoring the factory default settings.
- Please ensure proper UCX time and date setting in UCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

ATTENTION: HTTPS does not guarantee that the communication is secure. Make sure that the client communicates with the server directly, without any third-party element in the communication route (Man-in-the-middle attack).

Basic Security System Example

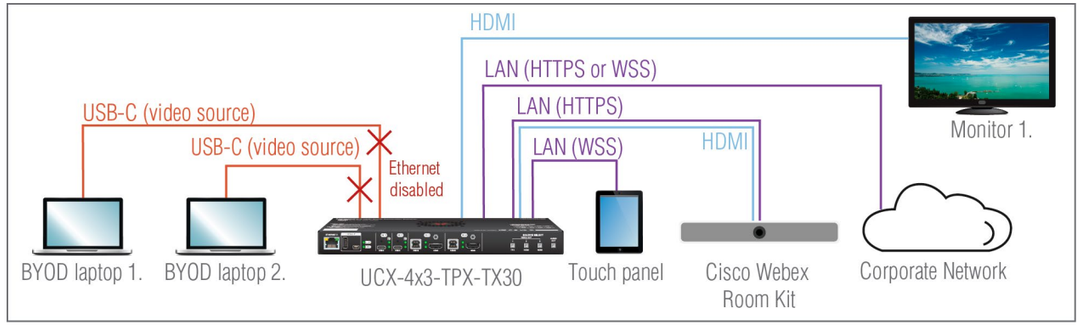

To keep the system protected, the unsecured ports should be disabled and data traffic should be managed by secured channels.

Step 1. Disable the Ethernet layer of the USB-C ports towards the laptops. The video and USB data transmission still work.

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the Network section)
- LW3 protocol commands (see the details in the Enabling/Disabling the Ethernet Port section)

Step 2. Disable the HTTP port (80) and use HTTPS (443) instead.

INFO: HTTP is disabled by default.

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the Enabling/Disabling the Network Service Port section).
- LW3 protocol commands (see the details in the Enabling/Disabling the Service Port section).

Step 3. Set the password and enable the authentication.

INFO: Authentication is enabled by default.

The username is always fix (admin) and the password has to be set before authentication is enabled. The setting is available in the following ways:

- Lightware Device Controller software (see the details in the Network section)
- Lightware REST API HTTP posts (see the details in the Setting a Password for Authentication and the section).

Step 4. Disable 6107 port, use Lightware REST API HTTPS (443 port) or WSS for LW3 protocol to control the device.

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the Enabling/Disabling the Network Service Port section).
- LW3 protocol commands (see the details in the Enabling/Disabling the Service Port section).

Step 5. Disable the remaining unsecured Serial over IP ports (8001 and 8002).

The setting is available in the following ways:


- Lightware REST API HTTP posts (see the details in the Enabling/Disabling the Network Service Port section).
- LW3 protocol commands (see the details in the Enabling/Disabling the Service Port section).

5.9. 802.1x Authentication

ATTENTION: 802.1x authentication over the Management network provides authentication for both the UCX-TPX-TX30 and the BYOD device, but only when there is exactly one port in the Management VLAN.

ATTENTION: The 802.1x authentication must only be turned on after the Management network has been set up, otherwise the certificate must be uploaded again.

802.1x is a server-based port authentication protocol that restricts unauthorized clients from accessing a LAN through a public port. Three parties make up the most basic setup of 802.1x: a supplicant (client device), an authenticator (Ethernet switch) and an authentication server. Before the device is permitted access to the network, port communication is restricted to Extensible Authentication Protocol over LAN (EAPOL) traffic.

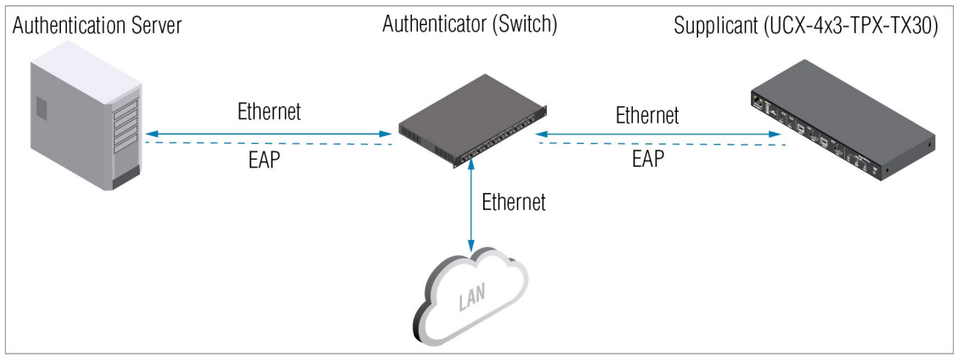

After the device passes the authentication process, the authentication server notifies the switch, allowing the client to access the LAN.

The available method for 802.1x authentication can be found in the UCX-TPX-TX30 series devices:

- **EAP-TLS**: This method utilizes Public Key Infrastructure to authenticate with an authentication server. To communicate with the server, a certification authority (CA) certificate and a client-side certificate that is signed by a known certification authority are needed.

The UCX itself can act as a supplicant, but also as a route through which a BYOD device can reach the authenticator as a supplicant.

ATTENTION: If the Management network is not used, this method authenticates the UCX device, not the BYOD connected to the UCX! If you only want to authenticate the connected BYOD device and not the UCX, you do not need to activate 802.1x authentication in the UCX device. Both the UCX and the BYOD device can be authenticated over the Management network.

INFO: When updating the firmware of the UCX-TPX-TX30 series device, sensitive information (passwords, keys etc.) on the authentication will not be downloaded into the backup file, but it will be retained in the device during the update.


5.10. Advanced Ethernet Security

This feature is a port-based VLAN setting, which allows the user to decide which network(s) the USB-C ports are connected to, and thus which network(s) the connected devices can use. This way the connected devices can be separated from the corporate network, increasing network security.


There are four presets available, which are the following:

- **Transparent**: this is the default mode, with the network openly used by Taurus and the BYOD devices. If you want to authenticate the connected BYOD through 802.1x, this option is not recommended.
- **Dedicated:** in this mode, each USB-C-Ethernet pair (Isolated LAN 1 and 2), the TPX output (Default) and the P1 Ethernet port (Management LAN) are in different VLANs, fully separated from each other. Management network is available on the P1 Ethernet port.
- **Separated BYOD:** in this mode, the USB-C ports and the P3 Ethernet port (Isolated LAN 1) are separated from the Default network on the TPX output and the P2 Ethernet port, as well as the Management network available on the P1 Ethernet port.
- **Custom**: this preset becomes active if the network setup differs from all other presets described. It cannot be manually chosen.


INFO: Only one preset can be active at the same time.

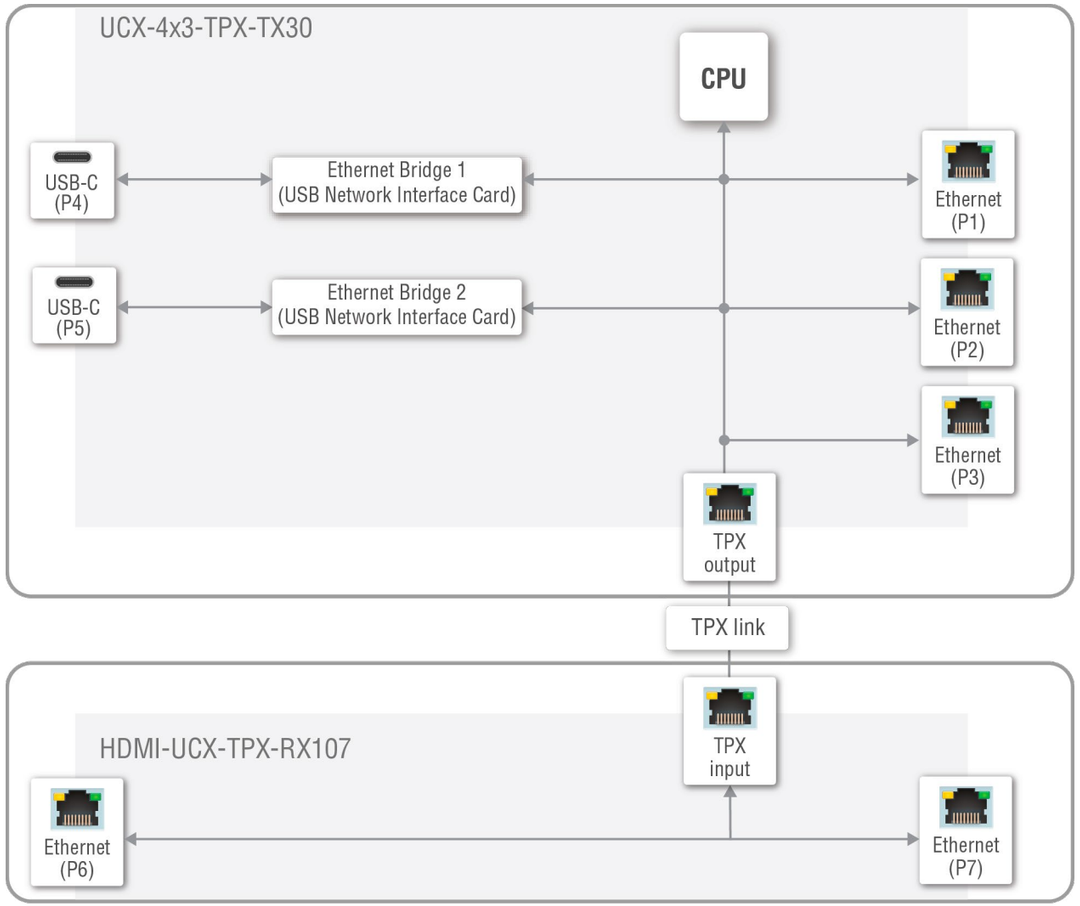

Transparent VLAN preset with UCX-4x3-TPX-TX30 and HDMI-UCX-TPX-RX107

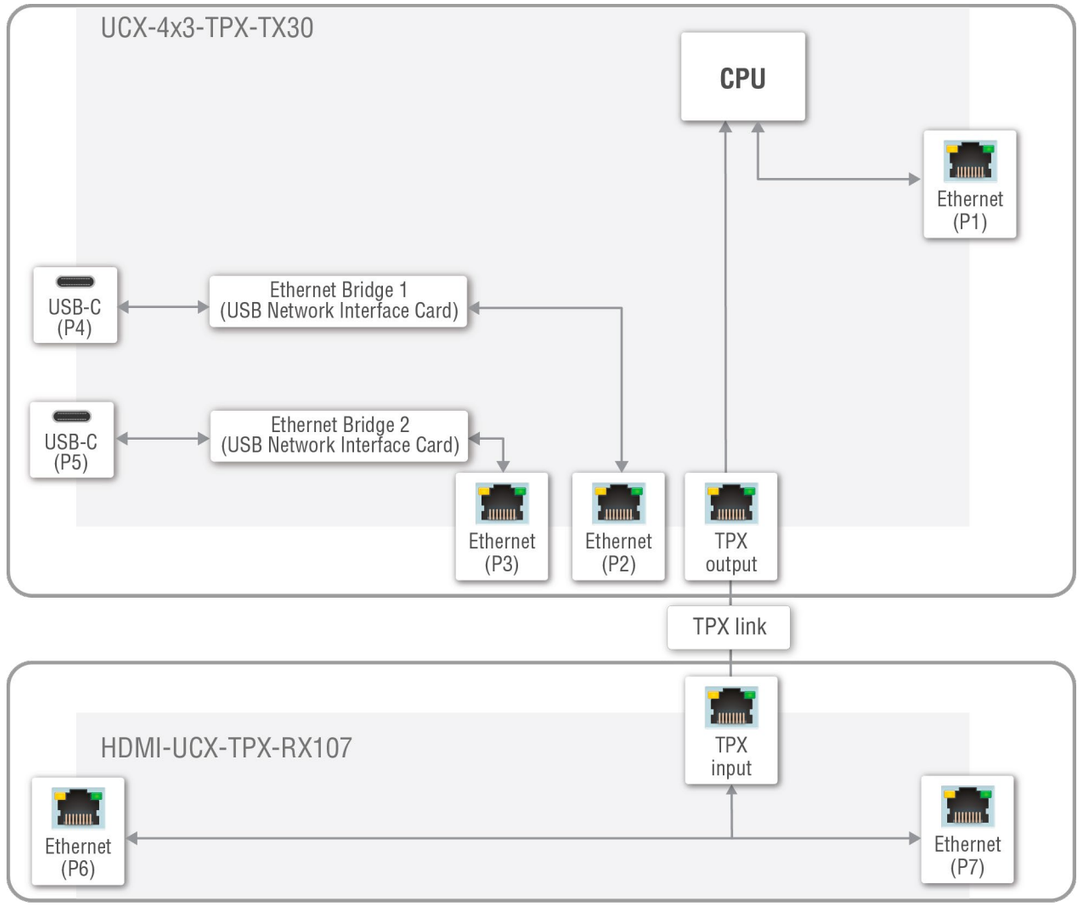

Dedicated VLAN preset with UCX-4x3-TPX-TX30 and HDMI-UCX-TPX-RX107

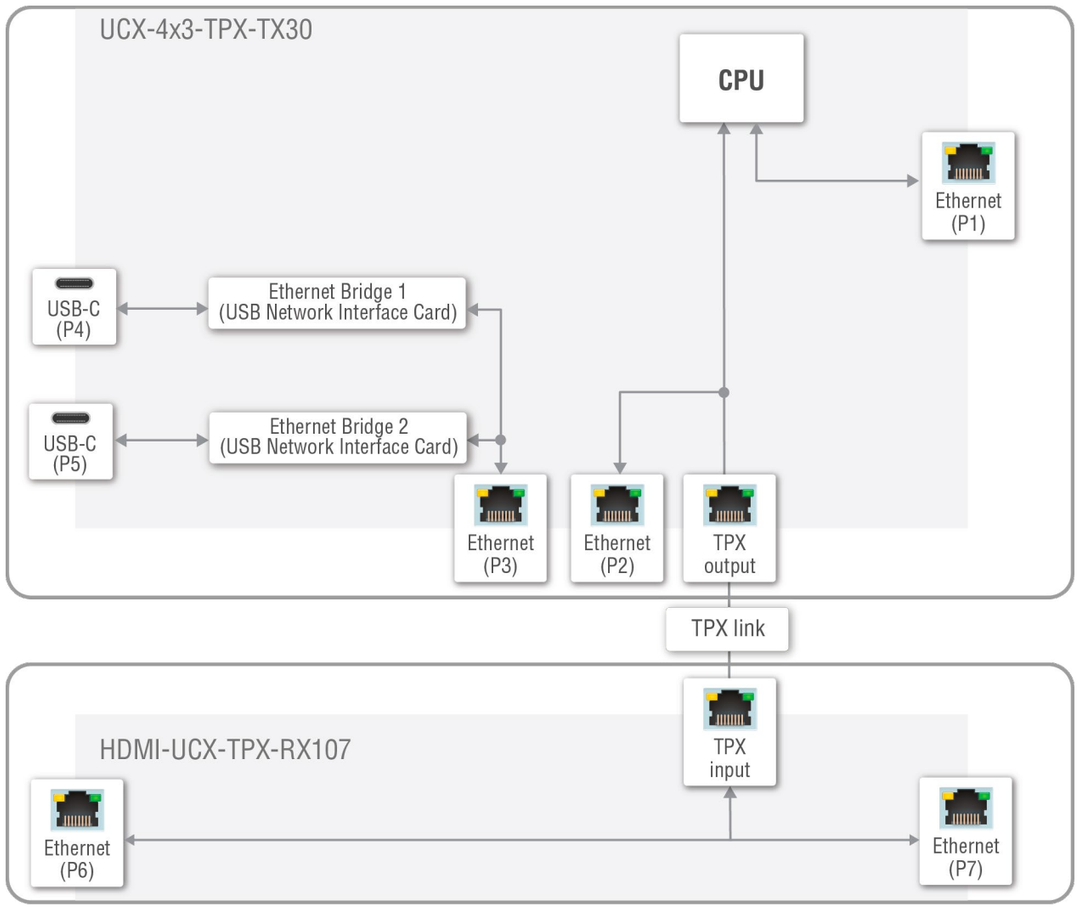

Separated BYOD VLAN preset with UCX-4x3-TPX-TX30 and HDMI-UCX-TPX-RX107

Management Network

DEFINITION: Management network is a special VLAN Membership setting that creates a secure connection between a single Ethernet port and the CPU for controlling and updating purposes. This network is separated from all other networks and has its own static MAC address to avoid mix-up between different networks.

Management network is a special VLAN setting for secure connection to the CPU and for supporting 802.1x authentication. This VLAN separates corporate network from all AV networks, creating a secure environment.

VLAN ID 1000 is reserved for Management, which can be set via LDC (VLAN Membership), REST API (Enabling the Management Network on an Ethernet Port) and LW3 (Enabling the Management Network on an Ethernet Port) as seen below.

INFO: The CPU will appear with the **Main_2** MAC address within the Management network.

INFO: Management network can be set on HDMI-UCX-TPX-RX107 models through connection to the TX.

ATTENTION: Please be aware that Management network is only available for **UCX-TPX transmitter (TX), UCX-TPN transmitter (TX)** models, **HDMI-UCX-TPX-RX107** and **UCX-3x3-TPX-RX20**. It cannot be utilized in a network topology that contains devices different from these, as **other extenders do not support Management network**.

Setting Up the Management Network

Before setting up the Management network, you need to make sure it will have an IP address that you can reach. **By default**, it is set to **DHCP**, so if you have a DHCP server, you can skip ahead to Step 3.

However, without a DHCP server, you need to enable and set a static IP address before you enable the Management network (see Step 1 and 2).

These settings currently can only be done via REST API or LW3 commands.

Step 1. To enable Static IP, do the following:

REST API	LW3
➜ request-line: POST http://<ip_address>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/Enabled ➜ body: true	▸ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.Enabled=true

Step 2. To set the static IP address and gateway, do the following:

REST API	LW3
➜ request-line: POST http://<ip_address>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredIpAddress ➜ body: <configured_ip_address>	▸ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredIpAddress=<configured_ip_address>
➜ request-line: POST http://<ip_address>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredGatewayAddress ➜ body: <configured_gateway>	▸ SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredGatewayAddress=<configured_gateway>

Step 3. Finally, enable Management network/set Management ID on the desired port:

REST API	LW3
➜ request-line: POST http://<ip_address>/api/V1/MEDIA/ETHERNET/<ethernet_port>/VlanMembership ➜ body: 1000	▸ SET /V1/MEDIA/ETHERNET/<ethernet_port>.VlanMembership=1000

Alternately, enabling Management network is possible in LDC, by choosing it from the dropdown menu in the **Control > Ethernet > VLAN Membership** setting.



DIFFERENCE: Setting the Management VLAN ID for HDMI-UCX-TPX-RX107 is currently only possible via REST API or LW3.

ATTENTION: Please make sure there is only **one** port in the Management network per extender.

5.10.1. Network Separation

INFO: Multiple MAC addresses are used to make separating the networks and avoiding issues desribed in this section easier. The Default/AV network and the Management network operates under different MAC addresses.

The matrix switcher supports two VLANs: the Default/AV network and the Management network. However, due to a topology limitation, **prior to FW version v1.16.0**, both VLANs may operate under the same MAC address. This setup can lead to connectivity issues such as:

- Packet Misrouting: Network traffic may be sent to the incorrect VLAN.
- Loop and Congestion: Duplicate MAC addresses can cause loops or broadcast storms.
- Device Inaccessibility: Difficulty in managing devices or maintaining network reliability.

To ensure stable operation and avoid connectivity conflicts, follow this practice:

On the switcher, disable any ports or VLANs that are not actively in use. This reduces the chance of unintended traffic crossing between VLANs.

INFO: The illustrations have been simplified for easier understanding. Please see the full port layouts in the Ethernet Interface section.

5.10.2. Including the Receivers in VLAN Management

INFO: VLAN management can be set in HDMI-UCX-TPX-RX107 receiversthrough connection to the TX. Connection over either **Management** or **Default** networks allows for controlled RX traffic handling and access to TX-hosted applications from the RX side. This removes the need for additional cabling and using more complicated setups, while maintaining security.

By setting the same network on the chosen Ethernet port of the TX and the RX, a secure interface is created that allows connection between the devices connected to the endpoints, while ensuring no one can listen in from outside of the connection. Please make sure that only the desired Ethernet ports have the same VLAN ID.

You can set the VLAN Membership of the ports on the LDC UI to Default, or Isolated LAN 1-7, or you can set the VLAN ID (1-4094) via Advanced view, REST API or LW3 protocols.

The TPX ports are not part of the VLAN, they just act as the bridge between the Ethernet ports and pass data.


INFO: There is no AutoIP available in the separated network, only Static or DHCP IP address.

802.1x Availability

802.1x authentication can include HDMI-UCX-TPX-RX107 models as well. For proper operation, please make sure to only allow authentication on one Ethernet port, which is also in the Management network.

Update Restrictions - UCX-TPX-TX with UCX-3x3-TPX-RX20

The endpoints are connected to each other through the Default/AV network, and either of them can be connected to the Management network, **but only one at a time**. In this case, remotely updating the endpoint **not** connected to the Management network is not possible - a physical connection to the remote endpoint is required for the update, similarly to the previous case.

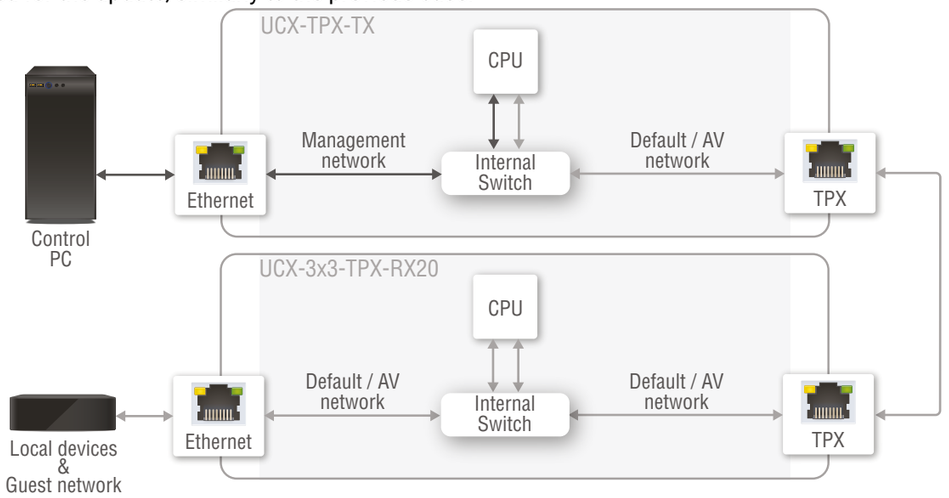


5.11. WebSocket Service (WS, WSS)

UCX series switcher transmitter provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands.

The UCX series switcher transmitter can manage 18 connected clients in total simultaneously for WS (80), WSS (443) and LW3 (6107) ports.

The WebSocket connection is built up by HTTP handshake. After the connection is established, communication switches to a bi-directional WebSocket protocol for LW3 communication.

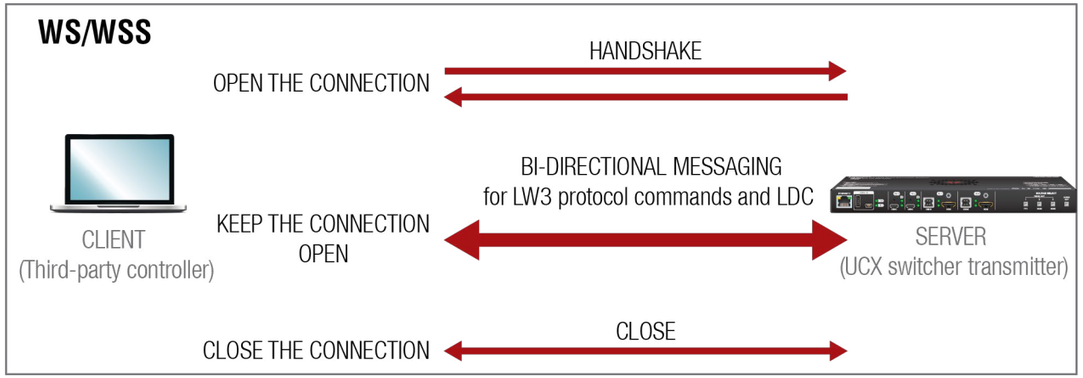

The main difference between HTTP and WS communication process is that HTTP closes the connection between the client and the server after one request-response pair, while WebSocket keeps the connection open. This feature allows real-time communication such as **controlling the device with LW3 protocol commands**. The WS functions are also available via WebSocket Secure (WSS).


5.12. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the **Tools** button in the bottom left corner of the Device Discovery window of the LDC and choosing the Bulk Management option.

See the Bulk Device Management section for more details.


5.12.1. Network Settings

This function makes it possible to change and adjust the network settings of several devices at once (unique settings for each device), without having to set them at each device one by one. A .csv file can be created containing the list and desired settings of the devices and it can be uploaded into the LDC to be applied to the devices quickly.

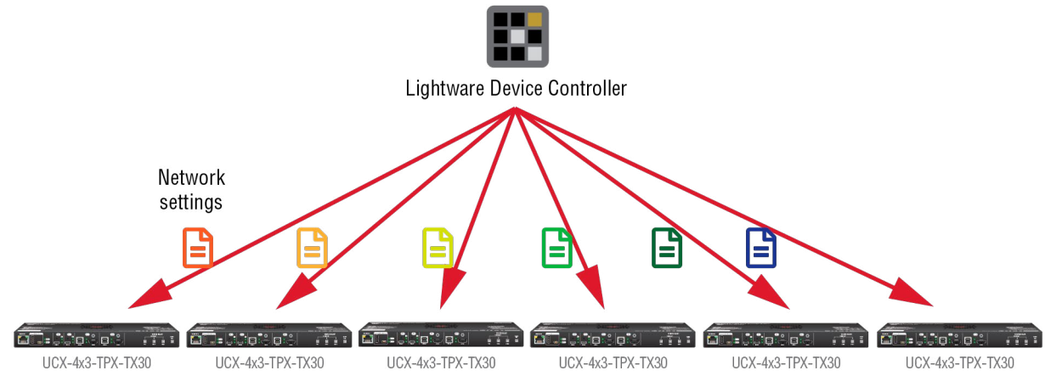

5.12.2. Device Configuration

Here you can choose the devices that need to be configured, and upload a previously saved configuration to all of them at once. This is a helpful tool for quick and easy reconfiguration of the devices after a firmware update. This function allows uploading configurations to devices with the same firmware version, without changing their network settings.

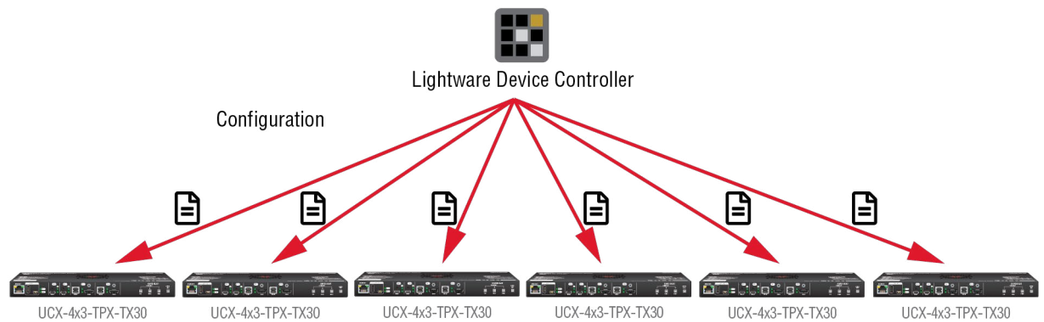


5.13. Serial Interface

Serial data communication can be established via the local RS-232 port (Phoenix® connector).

Summary of Serial Ports

	RS-232
UCX-4x3-TPX-TX30	2x
UCX-2x1-TPX-TX30	1x

5.13.1. Serial Port Diagram

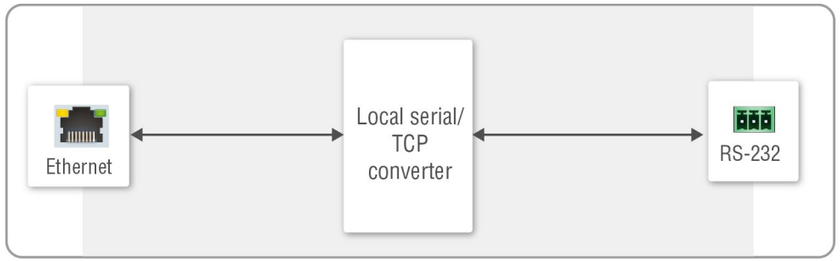

The UCX switcher extenders work as an RS-232 bi-directional converter. The TCP signal is converted to RS-232 data and vice versa. TCP/IP port numbers are defined for serial ports (8001, 8002) for this purpose. If a command is coming from the Ethernet interface that is addressed to the port no. 8001, it will be transmitted to the Tx pin of the local RS-232 port (P1). That works in the opposite direction too, and the method is the same on the serial interface of the Ethernet port as well, but the serial message will be transmitted to all opened TCP sockets (if the TCP connection closed meanwhile, the message will not be transmitted). It can handle a maximum of 20 connections at the same time.

Disabling Serial over IP function disconnects the Serial/TCP converter from the Ethernet layer and the serial data won't be transmitted to the Ethernet network. This setting is available in the Lightware Device Controller software (in the Settings menu, Network tab) or with REST API command (Enabling/Disabling the Network Service Port).

The extenders can manage a maximum of 20 connected clients at the same time for each serial port.

Message Sending Function


Message sending function allows RS-232 command sending to a third-party (or a Lightware) device from the UCX-TPX-TX30 series. Any format is acceptable (text, binary, hexadecimal,etc.), maximum message size is 100Kb. Escaping is unnecessary.

Serial message sending is possible by using HTTP Post with Lightware REST API.

➔ header: POST·http://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/send
➔ body: <message>

<serial_port> is P1 or P2.


The MP1 (CPU) is available over REST API interface. The MP1 (CPU) sends the message via the serial port to a third-party (or a Lightware) device. This is a one-way communication, the response will not be interpreted by the CPU. Consider using Serial over IP function instead of listening to a serial device.

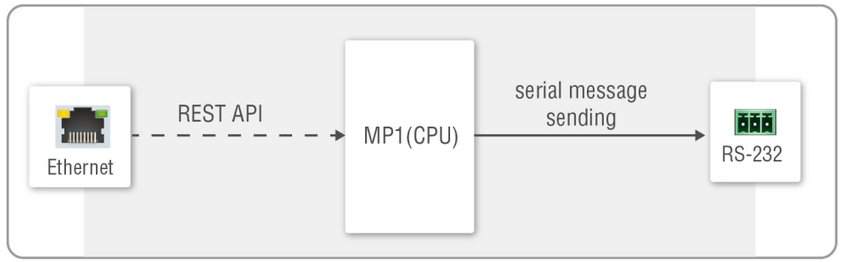

For more details about the Lightware REST API, see the Lightware REST API Reference chapter.

INFO: Taurus can receive a serial message in a special way. When a message is sent from the Taurus, the response from the connected device is accepted within 100 ms. The communication is closed after that time interval.

Serial Options - Example

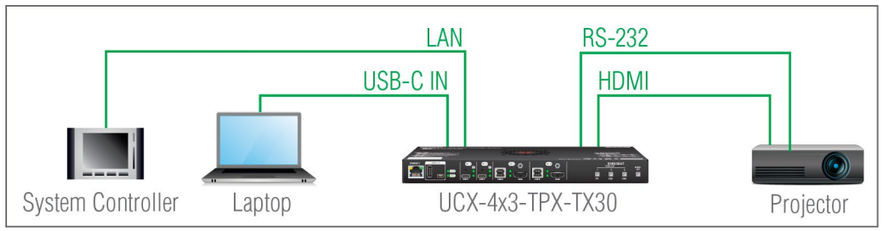

External Controller Concept


The projector is turned on and off by the external System Controller. The **System controller** has an internal REST API client, which is connected to the UCX switcher transmitter. It sends a HTTP POST to the **UCX-4x3-TPX-TX30**. The **Switcher transmitter** sends a serial message over the P1 port to the **Projector**.

Security: When interpreting of the response from the projector is necessary, serial over IP port (8001 or 8002) can be enabled, in this case, the 8001 or 8002 ports are available from other devices too, and it makes the system unsecured.

5.14. GPIO Interface

The General Purpose Input/Output (GPIO) port is a multifunctional input/output interface to control the switcher transmitter or third-party devices and peripherals. You can establish the connection between the controller/controllable device and the switcher transmitter via the 8-pole Phoenix connector. The direction of the six pins is configurable independently from each other.

GPIO Options - Example

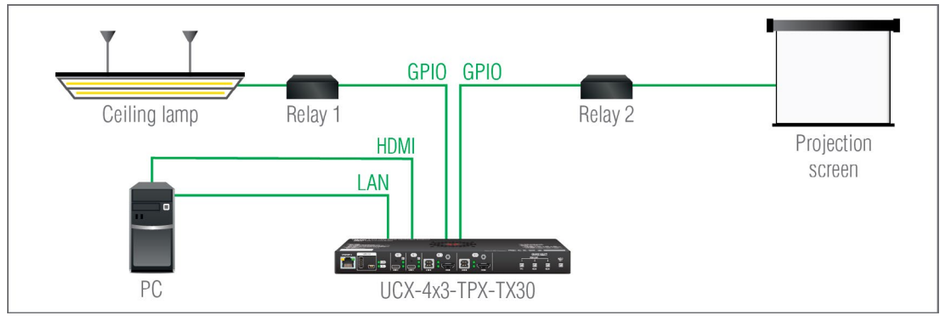

The ceiling lamp is turned off by Relay 1 and the projection screen is rolled down by Relay 2. Both relays are controlled by the GPIO port.


When the PC starts to play the video presentation, the signal is received over the HDMI input, so the GPIO pins send a signal to Relay 1 to open, which results in the lights being turned off. Furthermore, the GPIO pins also send a signal to Relay 2 to close and the projection screen is rolled down. When the presentation ends, signal ceases on the HDMI input, so the GPIO pins send a signal to Relay 1 to close, which results in the lights being turned on, and send a signal to Relay 2 to open, so the projection screen returns to its enclosure.

ATTENTION: Please always check the electrical parameters of the devices that you want to control. The maximum current of one GPIO pin is 30 mA, the maximum total current for the six pins is 180 mA.

5.15. OCS Interface

OCS Application Example

When the occupancy sensor detects people in the meeting room, the transmitter turns on the ceiling lamp.

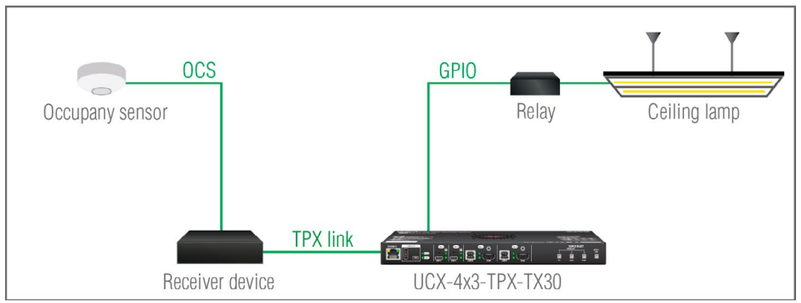

5.16. Further Built-in Features

5.16.1. Device Cloning – Configuration Backup and Restore



The device (configuration) cloning of UCX-TPX-TX30 series switcher transmitters is a simple method that eliminates the need to repeatedly configure certain devices to have identical (non-factory) settings. If the devices are installed in the same type of system multiple times, then it is enough to set up only one device to fit the user's needs and then copy those settings to the others, thus saving time and resources.

Cloning is possible between devices using the same firmware version. All LW3 settings and the WelcomeScreen Image will be saved.

Please note that the clone file can be downloaded and uploaded via HTTP or HTTPS, so 80 or 433 port has to be enabled.

See more information about the settings in the Clone configuration section.

5.16.2. SNMP Monitoring

Enterprise IT teams work in SolarWinds and SNMP dashboards, not LDC and WebLDC. Prior to the feature, UCX devices were practically invisible to these systems, making monitoring them difficult and cumbersome.

This feature allows IT administrators to monitor UCX-TPX-TX30 series extenders and access device and system health, as well as network interface status information without having to use specific API interfaces. SNMP managers (e.g. SolarWinds) are already used for network monitoring, and UCX devices are now compatible with such solutions.

UCX-TPX-TX30 extenders are only compatible with SNMPv3 version. Requests from previous versions of the protocol are not recognized.

If the extender is in Transparent VLAN setup, the SNMP service uses the Default interface. If Management network is active, the SNMP service uses the Management interface.

SNMP monitoring is disabled by default, it can be enabled in the following ways:

- Lightware REST API HTTP messages (Enabling/Disabling SNMP Monitoring)
- LW3 command (Enabling/Disabling SNMP Monitoring)

Lightware SNMP API

Variant Independent Objects

The SNMP objects listed in this section are available on all devices.

The SNMP deamon provides metrics, status updates and other data by default. From the available default information, we are interested in **CPU** and **Memory** details:

Service	SNMP Object	OID	Description
Memory usage	memAvailReal	1.3.6.1.4.1.2021.4.6.0	Free RAM memory in kilobytes
CPU usage	hrProcessorLoad	.1.3.6.1.2.1.25.3.3.1.2.x	CPU usage in percentage
Host name	sysName	1.3.6.1.2.1.1.5.0	Host Name

INFO: **x** is the index of the desired CPU. It is possible that there are multiple CPUs, and that the index of the CPU starts at a seemingly random number. For this reason, it is recommended to use snmpwalk on .1.3.6.1.2.1.25.3.3.1.2 to list all available CPUs.

To provide custom information, the SNMP daemon or agent will be extended with specific LWR responses:

Service	SNMP Object Name	OID	Description
Device Label	deviceLabel	.1.3.6.1.4.1.66014.1.1.1	Device label
Serial number	serialNumber	.1.3.6.1.4.1.66014.1.1.2	Serial number
Temperature	cpuTemperature	.1.3.6.1.4.1.66014.1.1.3	CPU temperature
Health status	healthStatus	.1.3.6.1.4.1.66014.1.1.4	Motherboard health status
Ethernet port up/down	p*LinkStatus	.1.3.6.1.4.1.66014.1.2.*	Link status of an ethernet port (i.e., V1/MEDIA/ETHERNET/p*.LinkUp)

INFO: The asterisk (*) indicates the port index (1-based).

5.16.3. Remote System Logging

This feature allows system logs to be sent to an external log collector for remote analysis purposes. This makes supervising and troubleshooting the devices easier and more comfortable.

Logs may be sent using either TCP, UDP or TLS. In case of TLS only encrypted forwarding is provided, but no certificate validation is performed (anonymous TLS).

The following steps need to be taken to set up remote system logging:

Step 1. Set the destination hostname or IP address where the logs should be sent to

- Lightware REST API HTTP messages (Setting the Remote Server Address)
- LW3 command (Setting the Remote Server Address)

Step 2. Set the network protocol used for forwarding

- Lightware REST API HTTP post (Setting the Protocol for the Remote System Logging)
- LW3 protocol command (Setting the Protocol for the Remote System Logging)

Step 3. Set the format of the logs

- Lightware REST API HTTP post (Setting the Format of the Remote System Logging)
- LW3 protocol command (Setting the Format of the Remote System Logging)

Step 4. Set the port number on the remote host to send log messages to

- Lightware REST API HTTP post (Setting the Port for Remote System Logging)
- LW3 protocol command (Setting the Port for Remote System Logging)

Step 5. Enable remote system logging

- Lightware REST API HTTP post (Enabling Remote System Logging)
- LW3 protocol command (Enabling Remote System Logging)

6

Software Control Options

UCX-TPX-TX30 devices allow setting all the parameters via a user-friendly interface. Open a web browser (Google Chrome or Mozilla Firefox is highly recommended) and connect to the device to access the parameters and settings. The other option is to use the Lightware Device Controller (LDC) software and connect to the device without a web browser. The features are described in the coming sections.

- Software Control Modes 56
- Using the Built-in Web 57
- Install and Update the LDC 58
- Running the LDC 58
- Establishing the Connection 59
- Bulk Device Management 60
- Video & Audio Crosspoint 62
- Port Properties Window 63
- CEC Tool 69
- USB Crosspoint 70
- EDID Menu 72
- Control Menu 75
- Settings Menu 78
- Advanced View Window 85

6.1. Software Control Modes


The device can be controlled in the following ways:

- Using the **built-in web page**,
- Using the **Lightware Device Controller (LDC)** software,
- Sending **REST API commands** (see the Lightware REST API Reference chapter), or
- Sending **LW3 commands** (see the LW3 Programmers' Reference chapter).


Built-in web page vs. LDC

The LDC and the built-in web page shows the same content, but there are some minor differences:

Function	Built-in Web	LDC
Platform	A Web browser running under Windows, macOS or Android	Windows, mac OS
Installation	Web browser needed only	Required
Device discovery	-	✔
Logout	✔	-

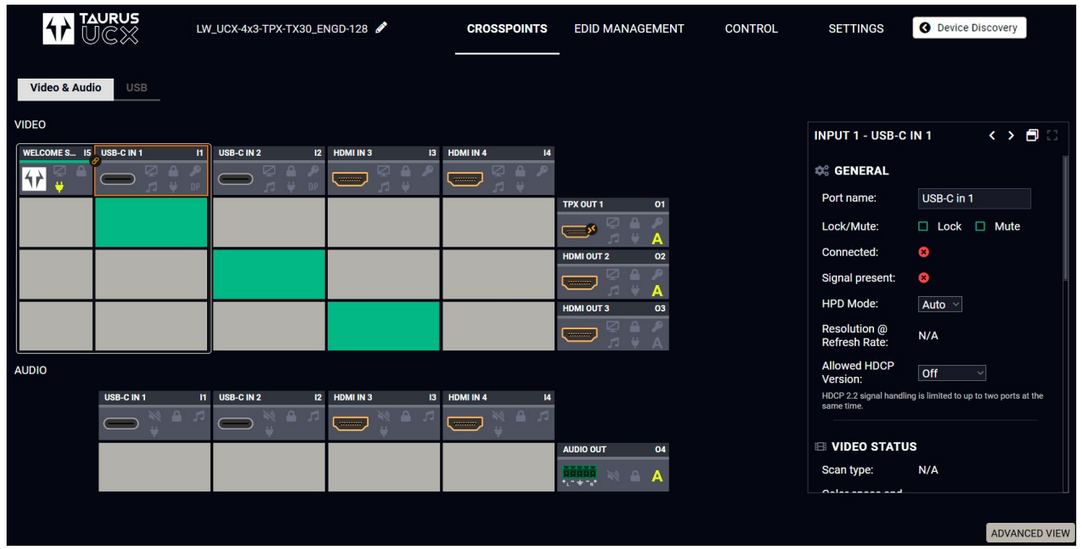

The Main window – displayed in LDC

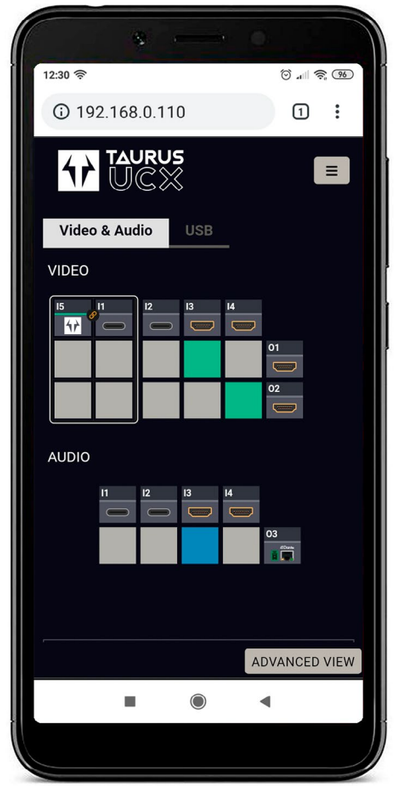

The Main Window - Displayed on a Smartphone

6.2. Using the Built-in Web

UCX-TPX-TX30 devices can easily be controlled and configured without downloading and installing LDC, by utilizing the built-in web.

Connecting to the device is possible by typing its IP address into the URL of the browser.


The layout of the built-in web is generally the same as the LDC, with a few differences:

- There is no **Device Discovery** button.
- There is a **Logout** button.

INFO: The **Logout** button will only appear if the device has a password and the user is logged in

ATTENTION: The maximum length of a single session is **120 minutes**. If this time is up, you will be logged out, and the device will only be available upon logging in again.

ATTENTION: In case of **30 minutes** of inactivity the session will expire. The system will remind you in a pop-up window if the currrent session is about to expire five minutes before the time limit. If the reminder receives no answer, the session will restart and you will be forced to log out.

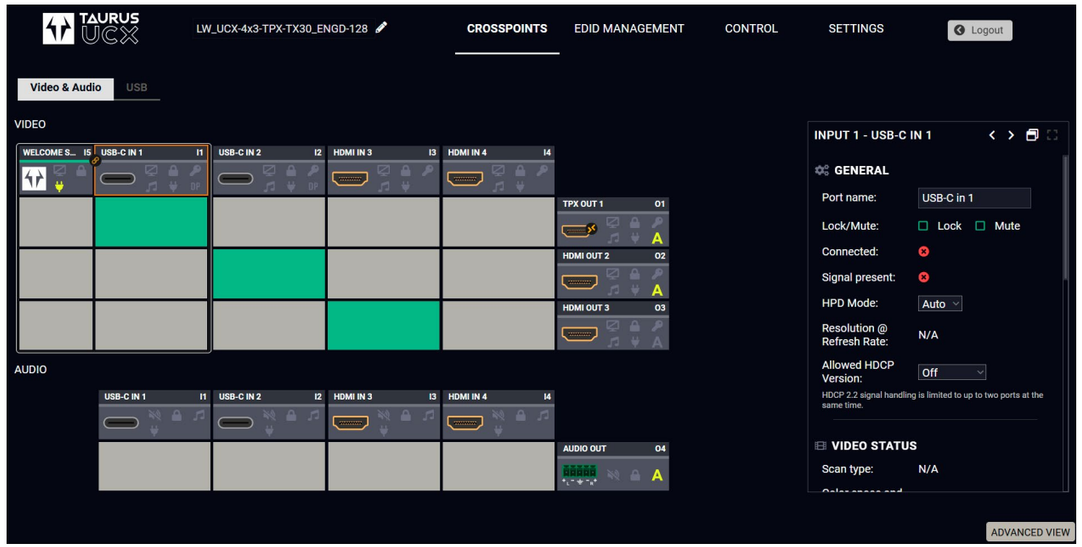

The Logout button appears in the upper right corner upon login

6.3. Install and Update the LDC

INFO: After the installation, the Windows and the Mac applications have the same look and functionality. This type of the installer is equal with the Normal install in case of Windows and results in an updatable version with the same attributes.

Installation for Windows OS

Run the installer. If the User Account Control drops a pop-up message, click **Yes**.

During the installation you will be prompted to select the type of the installation: **normal** and the **snapshot** install:

Normal install	Snapshot install
Available for Windows and macOS	Available for Windows
The installer can update only this instance	Cannot be updated
Only one updatable instance can exist for all users	More than one different version can be installed for all users

Comparison of installation types

ATTENTION: Using the Normal install as the default choice is highly recommended.

Installation for macOS

Mount the DMG file by double clicking on it, and drag the LDC icon over the Applications icon to copy the program into the Applications folder. If you want to copy the LDC into another location, just drag the icon over the desired folder.


Updating of LDC

Step 1. Run the application.

The **Device Discovery** window appears automatically, and the program checks the available updates on Lightware's website and opens the update window if LDC updates are found.


The current and the update version numbers can be seen at the top of the window and they are shown in this window even with the snapshot install.

The **Update** window can also be opened by clicking the **About icon** and the **Update** button.

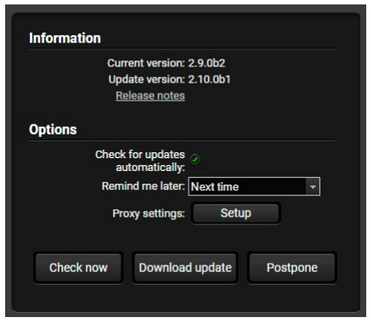

Step 2. Set the desired update setting in the **Options** section.

- If you do not want to check for the updates automatically, uncheck **the circle** that contains the green tick.
- If you want to postpone the update, a reminder can be set with different delays from the **drop down list**.
- If the proxy settings traverse the update process, set the proper values, then click on the **OK** button.

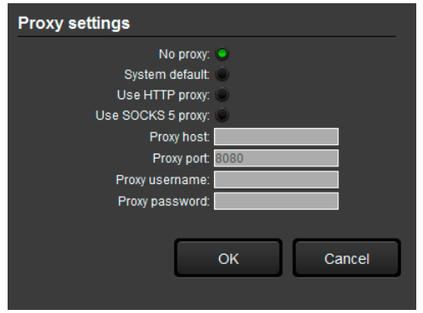

Step 3. Click on the **Download update** button to start the updating.

The updates can be checked manually by clicking on the **Check now** button.

6.4. Running the LDC

The common way to start the software is to double-click on the LDC icon.

Adjusting the Zoom

It is possible to use command line to set the LDC window size to a preferred resolution.

The window can be zoomed to a specific value to fit to the resolution of the desktop (higher/lower). '1' is the default value (100%).

Format: `LightwareDeviceController -z <magnifying_value>`


Example: `LightwareDeviceController -z 1.2`

ATTENTION: The last set value is stored and applied when LDC is started without a parameter.

6.5. Establishing the Connection

Step 1. Connect the device to a computer via Ethernet.

Step 2. Run the controller software; device discovery window appears automatically.

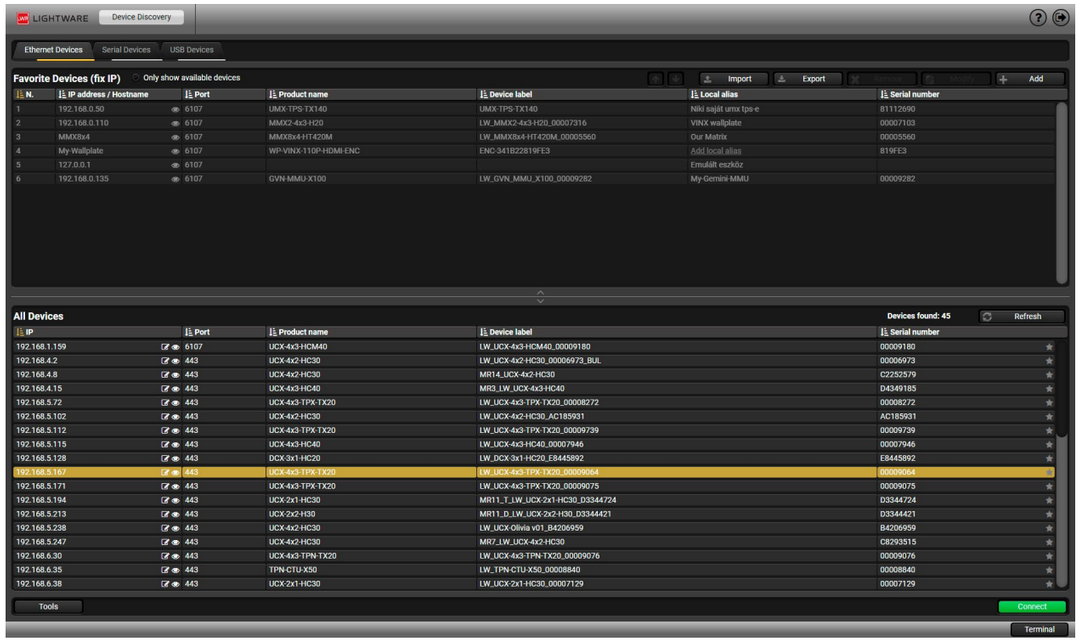

Device discovery window in LDC

The Ethernet tab consists of two lists. **All devices** list contains all Lightware devices that are available in the connected network. However, there is no need to browse all the available devices as you can expand the list of **Favorite devices with** any Lightware device that is connected via Ethernet by any of the following ways:


- Mark the desired device with the ★ symbol in the **All Devices** list,
- Press the **Add** button and add the device in the appearing window, or
- **Import** the list of favorite devices that was **exported** previously.

When both the 6107 and 80 ports are disabled, only the secure 443 port remains open, the UCX switcher appears in the all devices list with 443 port.

INFO: When several ports are enabled, the device will appear in the list with the most secure one available: 6107 < 80 < 443 (with 6107 as the least and 443 as the most secure).

ATTENTION: When the host is connected to two networks (default and management) with different network cards, UCX-TPX-TX30 devices advertise themselves over both. However, LDC only lists them with the IP address on the network that responds first. Currently it is undeterminable which IP address will be listed.

Add New Favorite Device

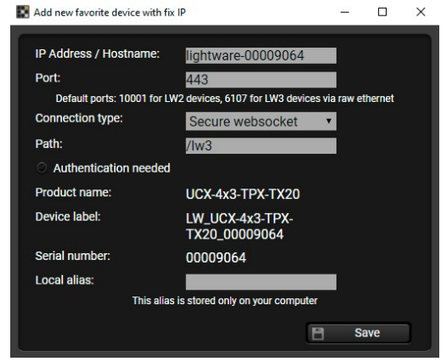

Press the **Add** button; in the appearing window you can enter the **IP address**. The **hostname** of the desired device can be used instead, if it is supported. That allows setting a unique name to identify the device in a network. If the host name is saved in this window and the IP address is changing, the device will still be available and connectible.

ATTENTION: The hostname connection-feature does not work when the target device is accessed over VPN.

See more information about the host name property in the Setting the Host name section.

Import/Export the List of Favorite Devices

The list of favorite devices can be exported/imported by the dedicated buttons (saved as *.JSON file). The list can be imported later (in another computer, too), but please note that the current list will be overwritten by the imported list.

Changing the IP Address



To modify the IP address settings quickly, it is not necessary to enter the device's settings/network menu, you can set them by clicking the pencil icon beside the IP address.


You can see the new settings only in this window. The device needs a few seconds to apply the new settings. #ipaddress

Identifying the Device

Clicking on the icon results in the blinking of the status LEDs for 10 seconds. The feature helps to find the device itself physically.

6.6. Bulk Device Management


It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the Tools button in the bottom left corner of the Device Discovery window and choosing the Bulk Management option.

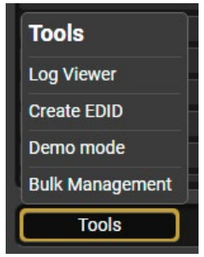

6.6.1. Network Settings

It is possible to set the network settings of several devices at once by using a .csv file that contains the list of the devices that we need to configure, then uploading it into the LDC.

Please note that if the data in the file is missing or incorrect, then the discovery of the affected device will fail and an '**Invalid data**' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is '**Duplicated**'.

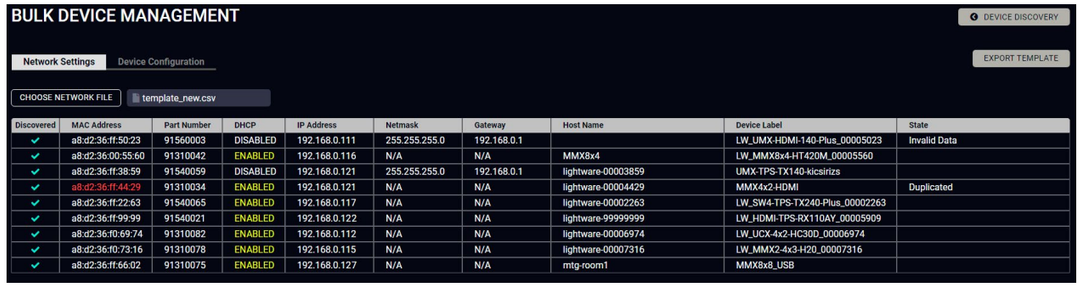

MACADDRESS	PARTNUMBER	DHCP	IP	NETMASK	GATEWAY	HOSTNAME	DEVICELABEL
a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	255.255.255.0	192.168.0.1	lightware-00005023	LW_UMX-HDMI-140-Plus_00005023
a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	255.255.255.0	192.168.0.1	MMX8x4	LW_MMX8x4-HT420M_00005560
a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	255.255.255.0	192.168.0.1	lightware-00003859	UMX-TPS-TX140-kicsirizs
a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.120	255.255.255.0	192.168.0.1	lightware-00004429	MMX4x2-HDMI
a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	255.255.255.0	192.168.0.1	lightware-00002263	LW_SW4-TPS-TX240-Plus_00002263
a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	255.255.255.0	192.168.0.1	lightware-99999999	LW_HDMI-TPS-RX110AY_00005909
a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	255.255.255.0	192.168.0.1	lightware-00006974	LW_UCX-4x2-HC30D_00006974
a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	255.255.255.0	192.168.0.1	lightware-00007316	LW_MMX2-4x3-H20_00007316
a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	255.255.255.0	192.168.0.1	mtg-room1	MMX8x8_USB

Changing the network settings can be done in a few easy steps:

Step 1. First alter the settings you need to change in the .csv file that contains the devices. You can use a template file accessible via the **Export template** button and saving the file to your computer, then filling it out with the parameters of the devices. The file contains the MAC address, Partnumber, DHCP status, IP address, Netmask, Gateway, Hostname and Device label of each device.

Step 2. Upload the .csv file into the LDC by pressing the **Choose network file** button and browsing the file in the pop-up window. This will result in a list of the devices appearing on the screen.

Step 3. Finally, press the **Apply settings** button to execute the changes. This might take up to a minute to finish.




Message	DHCP enabled	DHCP disabled	Device discovered
All Done	Successful procedure		✔
Partly Done	Failure setting the Host name and/or the Device label		✘
Unavailable device	Host name **and** Device label missing	IP address, Network, **and/or** Gateway missing	✘
Failed	Host name **and** Device label incorrect	IP address, Network **and** Gateway incorrect	✔
IP mismatch	-	Host name **and** Device label incorrect	✘

ATTENTION: The '**Failed**' and '**IP mismatch**' status indicators are not common, they appear when the multicast and/or the port used for LMDMP connection is disabled, or if the firmware version of the device is below the recommended (see the pop-up window when opening the Bulk Management or the beginning of this chapter).

6.6.2. Device Configuration

DIFFERENCE: From v2.6.4 LDC version it is possible to upload configurations to devices protected by a password as well.

Here you can choose the devices that need to be configured and upload a previously saved configuration to all of them at once. This is a helpful tool for quick and easy reconfiguration of the devices after a firmware update. This function allows uploading configurations to devices with the same firmware version, without changing their network settings.

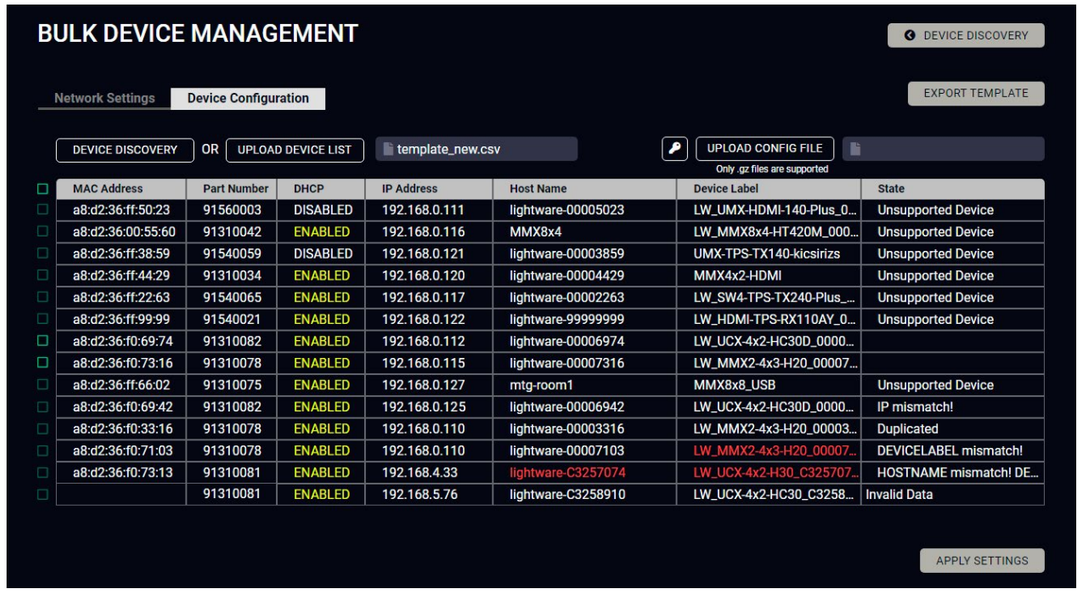

Please note that if the data in the .csv file is missing or incorrect, then the discovery of the affected device will fail and an '**Invalid data**' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is '**Duplicated**', or if the IP address is incorrect, '**IP mismatch!**'. '**Hostname mismatch!**' or '**Device label mismatch!**' appears if the respective values are incorrect.

Changing the configuration of the devices can be done in a few easy steps.

Step 1. Set the desired configurations in one of the devices, then clone your configuration in the **Settings** menu, under the **System** tab. Click on the **Download clone file** button in the right, set the file name in the pop-up window and press **Save**. Please note that this file is not available for offline editing.

Step 2. Go back to the Device Discovery screen of the LDC, click on the **Tools** button in the bottom left corner and select the **Bulk Management** option.


Step 3. Select the Device Configuration tab, then press the black **Device discovery** button for the LDC to list all compatible devices, or upload a device list that has been created beforehand. For such a file, you can use a template by clicking on the **Export template** button and saving it to your computer, see in the previous section. You can upload this file into the LDC by clicking on the **Upload device list** button, browsing the desired file and pressing the **Open** button.

Step 4. Once uploaded, you can further select devices from the list to be configured or you can change settings in all of them by ticking the box next to the head of the list.

Step 5. To change the configuration of the devices, you need to upload a configuration file previously saved from a device with the same firmware version via the **Upload config file** button. Browse the file in the pop-up window and press **Open**.

Step 6. In order to upload a configuration to a device that has authentication, it is necessary to fill out the credentials. This can be done via the **Credential Details** button (key icon in case of a smaller window). LDC will attempt uploading the configuration over HTTPS first, if that fails, it will attempt it over HTTP.

Step 7. Click on the **Apply settings** button in the lower right corner to start the reconfiguration procedure.

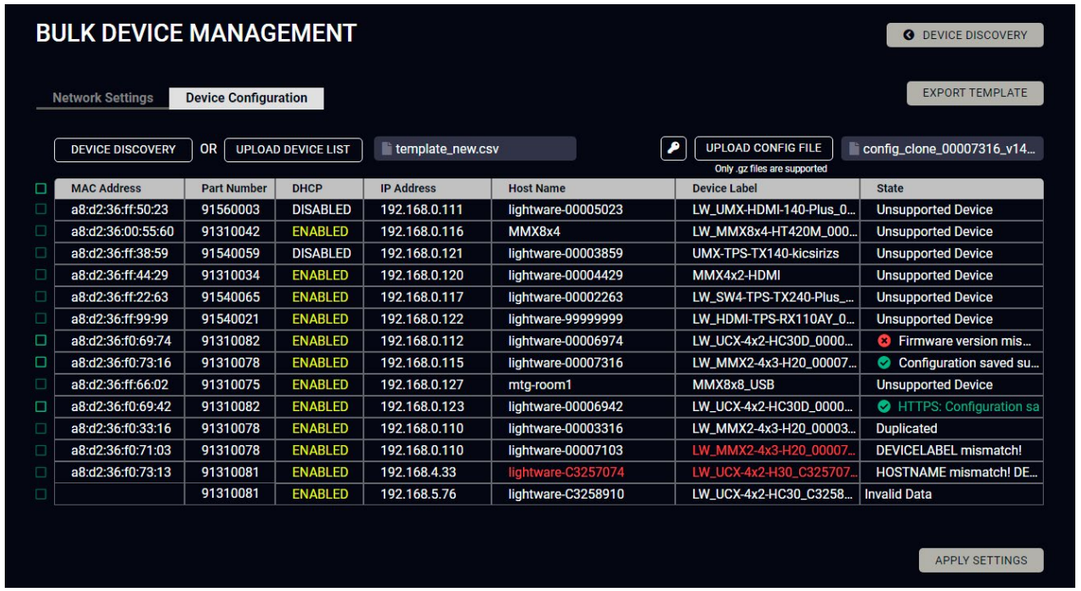

The list will be updated when the configuration procedure is finished, where in case of success, the '**Configuration saved successfully**' message will be displayed in the State column.

Please note that a configuration can only be applied to a device with the same firmware version, otherwise the '**Firmware version mismatch**' error message will appear under the State column.

If the configuration is applied to a different variant, the '**Variant mismatch**' error message will appear.


If the network settings are incorrect, applying the configuration will fail, and the message '**Incorrect network settings**' will appear under the State column.

For more details about saving a configuration, see the Clone configuration section.

If a device that is in the list is not connected to the network or its IP address is incorrect, the software will fail to detect it, and will display a '**Failed to fetch**' message in the State column when applying settings.

6.7. Video & Audio Crosspoint

#crosspoint #switch

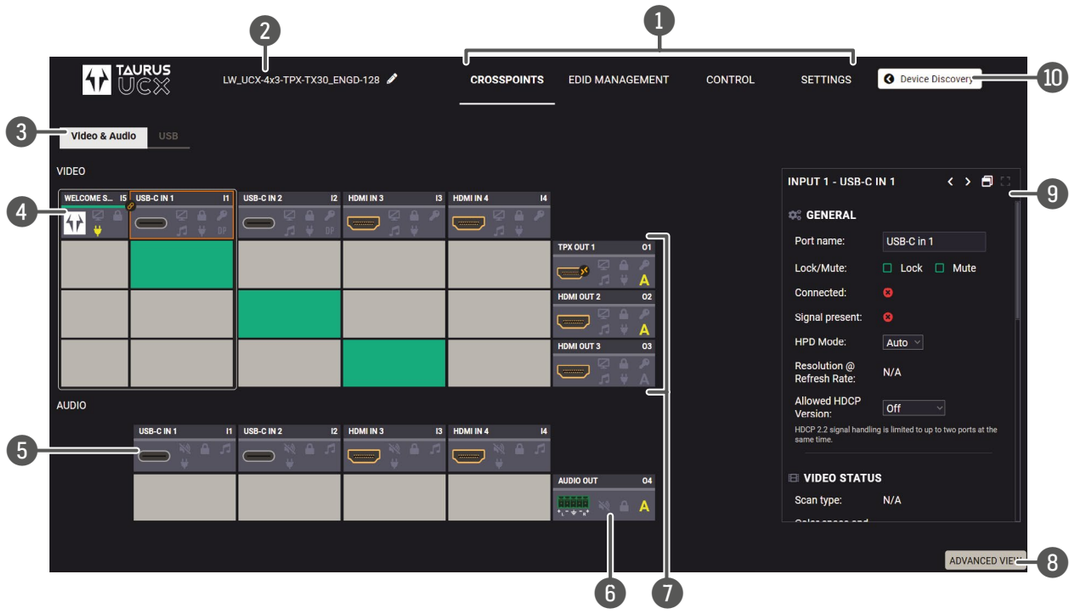


1	**Main menu**	The available menu items are displayed. The active one is shown underlined in white.
2	**Information ribbon**	The label shows the device label, which can be edited in the Settings menu - TX Status tab.
3	**Submenu selector**	The audio and video crosspoint menu and the USB crosspoint menu are available under the two tabs.
4	**Video input ports**	Each tile represents a video input port: Welcome Screen, USB-C Inputs, HDMI Video Inputs. The tile below the port shows the current crosspoint setting; if the port is switched to the output, the color of the tile is green, otherwise grey. Clicking on the tile opens the input properties window.
5	**Audio input ports**	Each tile represents an audio input port. All of them are logical audio ports, they mean the de-embedded audio channel of the selected USB-C/HDMI inputs. For more details, see Embedded Audio Input.
6	**Audio output port**	Analog audio output port; clicking on the O2 (UCX-2x1TPX-TX30)/O4 (UCX-4x3-TPX-TX30) tile opens the Analog Audio Output window.
7	**Video output ports**	AVX and HDMI video output ports; clicking on the tile opens the HDMI Video Output port properties window.
8	**Advanced view**	Displaying the Advanced View Window, showing the Terminal window and the LW3 protocol tree.
9	**Properties window**	Settings and status information of the selected panel are displayed in this section. Clicking on the icon ⧉ opens the properties section in a new window.
10	**Navigation button**	The device discovery window can be displayed by clicking on this button.

ATTENTION: Video crosspoint has a limitation: I1 and I3/I5* ports are not available at the same time, only one of them can be selected to any output. The **Busy** label on the crosspoint tile refers to the limitation. When I3/I5* is selected for the video source, the de-embedded audio of the I1 is not available because of the video crosspoint limitation. For more details about it, see the port diagram in the Audio Interface section.

* **I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30** model.

6.7.1. Port Tiles

The colors of the port tiles and the displayed icons represent different states and information:

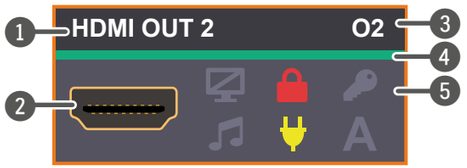

1. Port name
2. Port symbol
3. Port number
4. Signal present indicator
   green: present
   grey: not present
5. State indicators

State Indicators *#lock #unlock #mute #unmute*


The following icons display different states of the port/signal:

Icon is grey	Description	Icon is highlighted	Description
	Port is unmuted		Port is muted
	Port is unlocked		Port is locked
	Signal is not encrypted with HDCP	2.2	Signal is encrypted with HDCP (the HDCP version is displayed)
	Embedded audio is not present		Embedded audio is present
	There is no connected device		The device is connected
DP	No USB Host connected or DP Alt mode is not supported by USB Host	DP	DP Alternate mode successfully entered
		DP	Unable to enter DP Alternate mode
A	Autoselect is disabled	A	Autoselect is enabled
	Audio is unmuted		Audio is muted
	Charging function is inactive		Charges the connected device

6.8. Port Properties Window

Clicking on the port tile opens the Port properties window. This section shows the available settings and status information by port types. *#lock #unlock #mute #unmute*

6.8.1. Welcome Screen

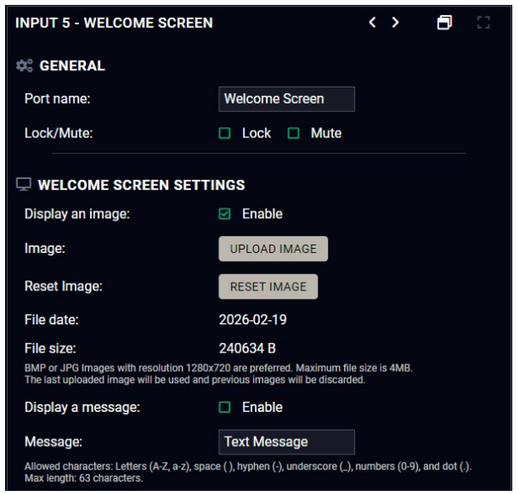

Welcome screen is an internal source, which can be customized – see more information in the Welcome Screen section. *#welcomescreen*

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

Mute *#mute #unmute*

The port can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

Welcome Screen Settings

Display Welcome Screen Image

Add a tick to **Display Welcome Screen Image** to enable the appearance of the internal image.

Upload Image

Click on the **Upload Image** button to browse jpg or bmp file to customize the welcome screen picture. Recommended resolution: 1280x720 pixel, maximum file size is 4MB.

ATTENTION: Uploading a new image will overwrite the previous one.

Reset Image

Clicking on the **reset image** button restores the factory default state.

Display Welcome Screen Message


Add a tick to **Display Welcome Screen Message** to enable the appearance of the text message.

Welcome Screen Message

The following characters are allowed: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), space ( ) and dot (.). Max length: 63 characters.

6.8.2. USB-C Inputs

Clicking on the USB-C video input port icon opens the Port properties window. The most important information and settings are available from the panel.

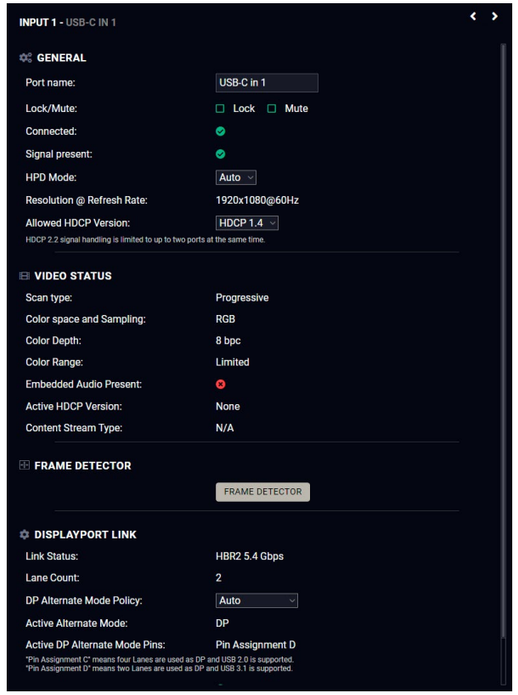

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

Mute *#mute #unmute*

The incoming signal can be muted/unmuted by adding a tick. If the port is muted, no signal is transmitted from the input port.

HPD Mode

Hot Plug Detection function can be set here. Using Auto mode is highly recommended.

Status information

Connected / Signal Presence / Resolution

Allowed HDCP Version *#hdcp*

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

- **Off:** The connected source will detect that the switcher is not HDCP-compliant and turn off authentication if the content allows it.
- **HDCP 1.4:** The connected source will detect that the switcher is compliant with HDCP 1.4, but not compliant with HDCP 2.2.
- **HDCP 2.2:** The connected source will detect that the switcher is compliant with HDCP 2.2.

Video Status

This section gives a feedback about the current video stream:

Frame detector

For more details, see the Frame Detector section.

DisplayPort Link

INFO: The USB-C source sends Displayport video signal, so the video setting options of the USB-C port are similar to the DisplayPort. The UCX switcher transmitter converts DP signal to HDMI internally.

DP Alternate Mode Policy


- **Auto:** Taurus offers both operation modes described below. A BYOD device can choose between the two. 4 lane DP Alt mode operation (4K@60) is not guaranteed.
- **Prefer 4 lane video:** 4 Lane Video setting.
- **Prefer 2 lane video:** 2 Lane Video setting. It is used in case the 4 Lane mode is not supported.

Restart Link Training *#linktraining*

Link training is a process where the source (PC, laptop, media server) and the sink (switcher transmitter) agree on a data rate, lane count and electrical parameters. The successful link training is a pre-requisite of the video transmission. If the quality of the USB cable is insufficient to reliably handle higher data rates, link training will result in a lower data rate, where stable connection between the source and the switcher can be maintained.

Clicking on the **Restart Link Training** button starts to build up the connection again between the switcher and the source (it happens automatically when the source is connected). It is equal to unplugging and reconnecting the Type-C connector.

6.8.3. HDMI Video Input

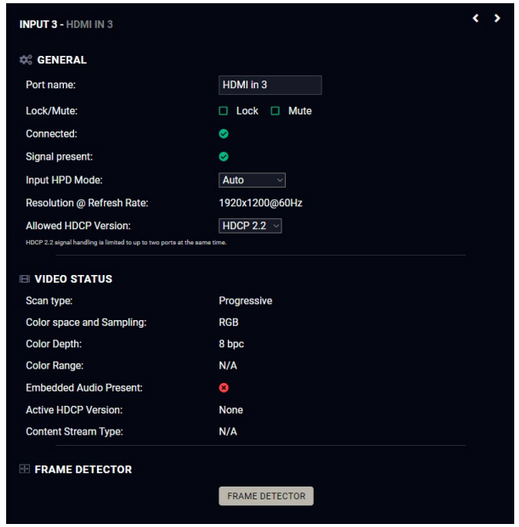

Clicking on the HDMI video input port icon opens the Port properties window. The most important information and settings are available from the panel.

Available settings and tools

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

INFO: When the locked input is switched to the output, the crosspoint state can not be changed and all inputs are locked in that line.

Mute *#mute #unmute*

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

Allow HDCP Version *#hdcp*

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.


- **Off:** The connected source will detect that the switcher transmitter is not HDCP-compliant and turn off authentication if the content allows it.
- **HDCP 1.4:** The connected source will detect that the switcher transmitter is compliant with HDCP 1.4, but not compliant with HDCP 2.2.
- **HDCP 2.2:** The connected source will detect that the switcher transmitter is compliant with HDCP 2.2.

Frame detector

For more details, see the Frame Detector section.

6.8.4. TPX Output

Clicking on the TPX video output port icon opens the Port properties window. The most important information and settings are available from the panel

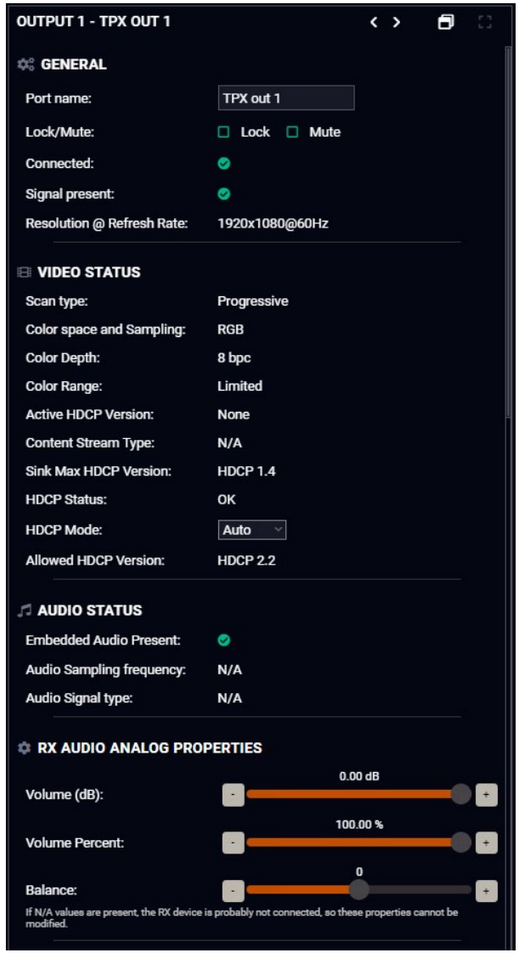

Available settings and tools

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

> INFO: When the locked input is switched to the output, the crosspoint state can not be changed and all inputs are locked in that line.

Mute *#mute #unmute*

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

HDCP Mode *#hdcp*

- **HDCP mode**: Auto / Always - The transmitter forces the source to send the signal without encryption if the content allows when Auto mode is selected; *#signaltype #hdcp*

RX Audio Analog Properties

- **Volume**: from 100 to 0%, in step 1% (0 dB to -95.625 dB, in step 0.375 dB (default is 0 dB));
- **Balance**: from -100 to +100, in step 1 (default is 0 = center).

Output Options

Output 5V Enable


- Auto / On / Off - The setting lets the source and the sink devices be connected – independently of the transmitted signal.

Output Signal Type

- Auto / DVI - The outgoing signal format can be selected from a drop-down menu.

Embedded Audio Mute

Add a tick to turn off the embedded audio.

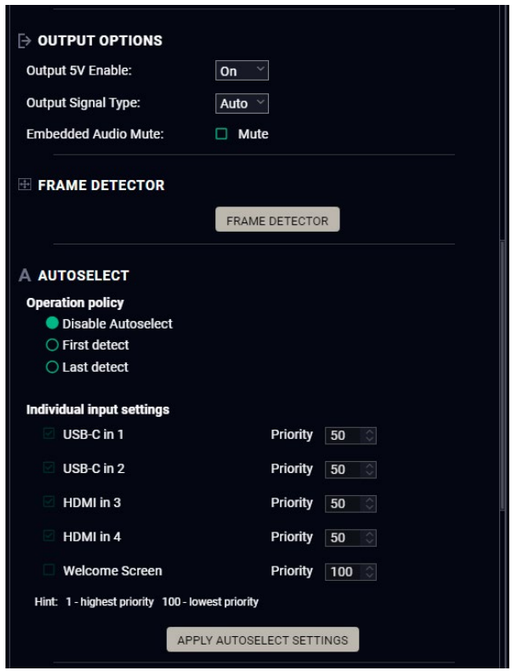

Frame detector

For more details, see the Frame Detector section.

Autoselect

Autoselect feature makes the switching of an input to an output without human intervention possible. The crosspoint state changes based on the active input signals.

Three operation policies can be set: *#autoselect #videoautoselect*

Disable autoselect: crosspoint state change happens manually.

First detect: selected input port is kept connected to the output as long as it has an active signal.

Last detect mode: it is always the last attached input that is selected to be transmitted.

Individual input settings: it is always the highest priority active input that is selected to be transmitted (1- highest priority, 100- lowest priority).

Pay attention to the following settings for the proper operation of the Autoselect function:

- Be sure that all priority values are filled in;
- Be sure that all inputs are enabled with the green tick on the right side;
- Always click on the **Apply autoselect settings** button after the changes to launch the new settings.

See more details about the feature in the The Autoselect Feature section.

6.8.5. HDMI Video Output

Available settings and tools

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*


The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

Mute *#mute #unmute*

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

HDCP Mode *#hdcp*

- **HDCP mode**: Auto / Always - The transmitter forces the source to send the signal without encryption if the content allows when Auto mode is selected; *#signaltype #hdcp*

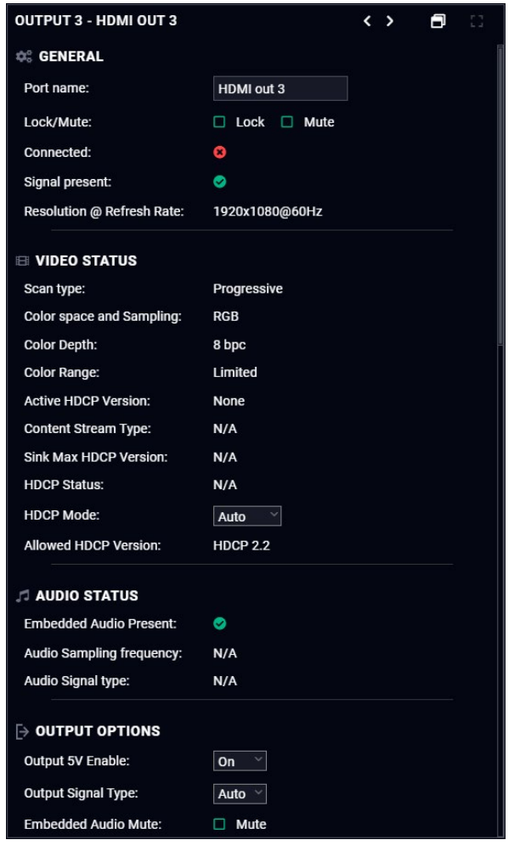

Output Options

Output 5V Enable

- Auto / On / Off - The setting lets the source and the sink devices be connected – independently of the transmitted signal.

Output Signal Type

- Auto / DVI - The outgoing signal format can be selected from a drop-down menu.

Embedded Audio Mute

Add a tick to turn off the embedded audio.

Frame detector

For more details, see the Frame Detector section.

Autoselect

Autoselect feature makes the switching of an input to an output without human intervention possible. The crosspoint state changes based on the active input signals.


Three operation policies can be set: *#autoselect # videoautoselect*

Disable autoselect: crosspoint state change happens manually.

First detect: selected input port is kept connected to the output as long as it has an active signal.

Last detect mode: it is always the last attached input that is selected to be transmitted.

Individual input settings: it is always the highest priority active input that is selected to be transmitted (1- highest priority, 100- lowest priority).

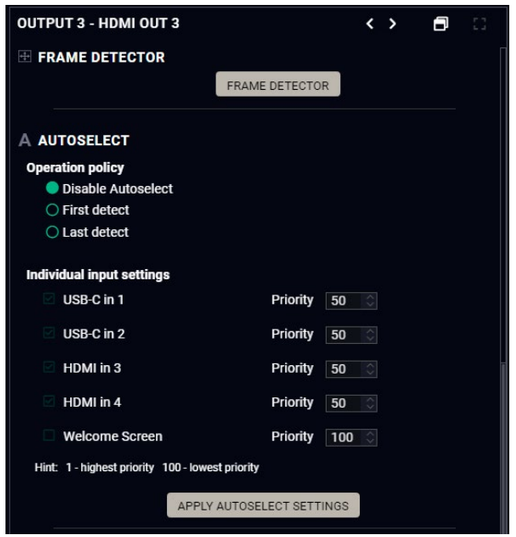

Pay attention to the following settings for the proper operation of the Autoselect function:

- Be sure that all priority values are filled in;
- Be sure that all inputs are enabled with the green tick on the right side;
- Always click on the **Apply autoselect settings** button after the changes to launch the new settings.

See more details about the feature in the The Autoselect Feature section.

6.8.6. Embedded Audio Input



Available settings

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.


Mute *#mute #unmute*

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no audio signal is transmitted from the input port.

> **ATTENTION:** Video crosspoint has a limitation: I1 and I3/I5* ports are not available at the same time, only one of them can be selected to any output. When I3/I5* is selected for video source, the de-embedded audio of the I1 is not available because of the video crosspoint limitation. For more details about it, see the port diagram in the Audio Interface section.

*** I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30** model.

6.8.7. Analog Audio Output

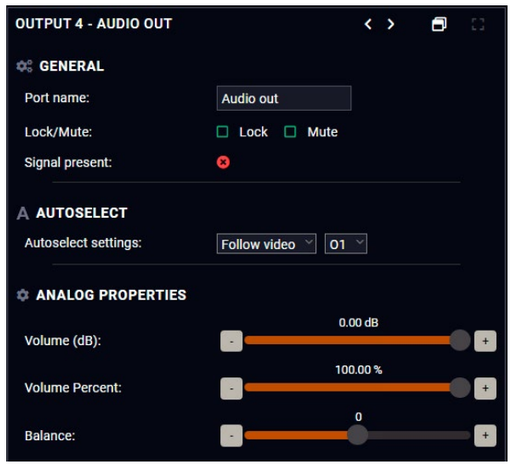

Available settings: *#analogaudio #volume #balance*

- Port name
- Mute/unmute the port;
- Lock/unlock the port;
- Autoselect settings: off / follow video (O1 or O2). Follow video option means that the audio of the selected video input will be switched to the analog audio output. When the video crosspoint changes, audio crosspoint follows it.
- Volume: from 100 to 0%, in step 1% (0 dB to -95.625 dB, in step 0.375 dB (default is 0 dB));
- Balance: from -100 to +100, in step 1 (default is 0 = center).

6.8.8. Frame Detector

The ports can show detailed information about the signal like full size and active video resolution. This feature is a good troubleshooter if compatibility problems occur during system installation. To access this function, open the port properties window and click on the **Frame detector** button. *#framedetector*



Frame Detector Window

Lightware's Frame Detector function works like a signal analyzer and makes it possible to determine the exact video format that is present on the port, thus helps identify many problems. E.g. actual timing parameters may differ from the expected and this may cause some displays to drop the picture.

Frame Detector measures detailed timings on the video signals just like a built-in oscilloscope, but it is much easier to use. The actual display area shows the active video size (light grey). Dark grey area of the full frame is the blanking interval, which can contain the info frames and embedded audio data for HDMI signals. Shown values are measured directly on the signal and not retrieved only from the HDMI info frames.

It is possible to download the results by clicking on the **Export Data to CSV** button.

Automatic scrolling can be toggled by clicking on the **Autoscroll** checkbox in the lower right corner. It is enabled by default.

6.9. CEC Tool

The device is able to send Consumer Electronics Control (CEC) commands via the HDMI outputs. This feature exists to remote control the sink device. CEC is a bi-directional communication via the HDMI cable.
#cec

ATTENTION: Make sure that the controlled unit is CEC-capable and this function is enabled.

INFO: UCX-TPX-TX30 series devices are only capable of sending CEC commands, but not of receiving them.




1	**Drop-down command list**	Containing the basic CEC commands, most of them are displayed on the graphical interface too (on the left side). Click on the **Send** button to send the command.
2	**Custom command textbox**	The text field is for sending hexadecimal commands in the indicated format to the source. Click on the **Send** button to send the command.
3	**Received Command box**	Displays all the sent CEC commands (in red) and the received answers (in blue) with a timestamp.
4	**Clear button**	Click on the **Clear** button to erase the content of the terminal window.
5	**CEC command button panel**	This panel provides the quick and easy management of CEC commands. These buttons are pre-programmed with basic functions and send commands towards the sink. The communication is displayed in the Received Command box. For the list of the commands, see the CEC Command Sending section. Both the layout and functionality are similar to the design of a remote control.


It can occur that the third-party device can receive, but not execute the command, because it is not supported by the product. Check the accepted commands in the documentation of the device.

6.10. USB Crosspoint

In the USB crosspoint tab, the connection between the upstream ports (USB-C and USB-B ports) and the USB hub (USB-A and USB-C ports) can be set. *#usb #usbc*

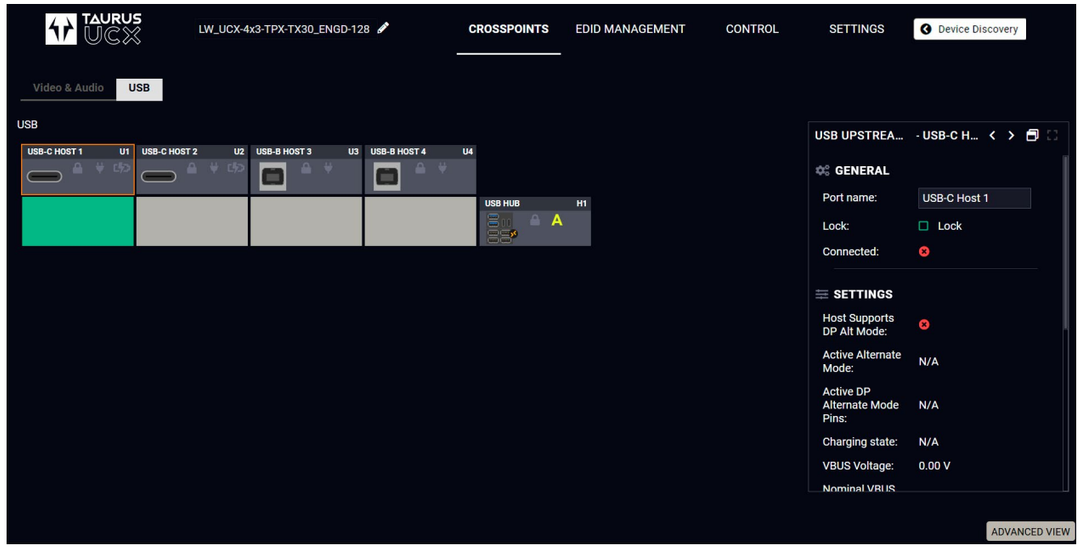

6.10.1. USB-C Port Properties

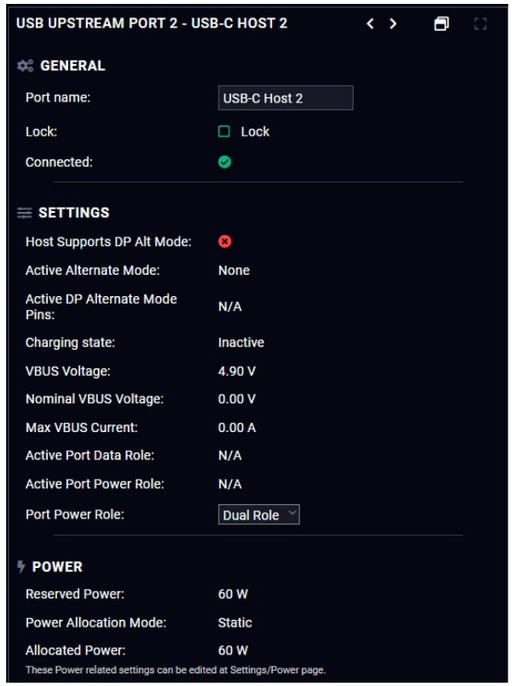

Available settings and tools

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, and the crosspoint state of this port cannot be changed.

Settings

DP Alternate Mode Policy

This is equal to the DP Alternate Mode Policy setting on the USB-C video port. *#dpaltmode #alternatemode #displayportalternatemode*

Power Role

Dual role: The switcher transmitter can be source (and sends power to the connected device) or sink (the switcher transmitter does not send power, real power consumption does not happen) depending on the connected device.

INFO: Using **Dual role** setting is highly recommended, the other options are mainly for troubleshooting.

Source: When the connected device is a sink (e.g. smart phone or a dual-role laptop), the switcher transmitter charges it via the USB-C port.

Sink: When the power role of the connected device is source-only (e.g. PC), the switcher has to change its power role (sink or dual-role) to build up the connection. Real power consumption does not happen.

6.10.2. USB-B Port Properties



Available settings and tools *#usb #usbc*


Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

6.10.3. USB Hub Properties

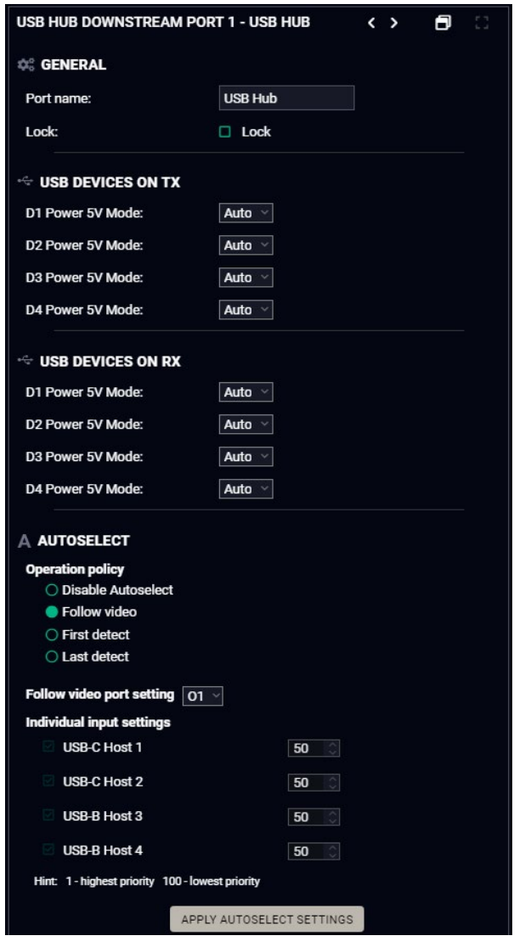

Available settings and tools

General

Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 63 characters.

Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

USB Devices

The power 5V mode can be set for each port from the drop-down menu: When the option is **Off,** the switcher transmitter does not send the device 5V over the USB-A / USB-C port. Using **Auto** mode is recommended.

Autoselect *#autoselect # usbautoselect*

For more details about this feature, see the Frame detector section.


Autoselect settings: Disable autoselect / Follow video / First detect / Last detect mode / Individual input settings

Follow video (O1 or O2): Follow O2 means the same computer will be the video source for O2 output and the USB Host of all USB downstream devices.

Video and USB ports either have a common USB Type-C connector for each port, or an HDMI and USB-B are clearly marked to belong together as one port.

6.11. EDID Menu

Advanced EDID Management can be accessed by selecting the EDID menu. There are two panels: the left one contains Source EDIDs, the right one contains Destination places where the EDIDs can be emulated or copied to.

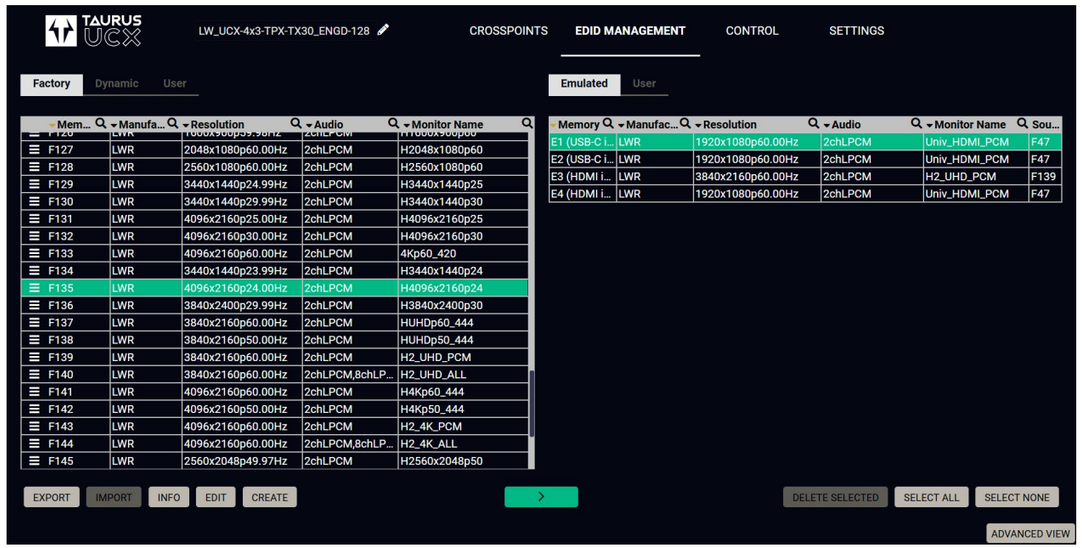

EDID Menu

Control Buttons

EXPORT	Exporting an EDID (save to a file)	>	Transfer button: executing EDID emulation or copying
IMPORT	Importing an EDID (load from a file)	DELETE SELECTED	Deleting EDID (from User memory)
INFO	Display EDID Summary window	SELECT ALL	Selecting all memory places in the right panel
EDIT	Opening Advanced EDID Editor with the selected EDID	SELECT NONE	Selecting none of the memory places in the right panel
CREATE	Opening Easy EDID Creator		

#edid

6.11.1. EDID Operations

Changing the Emulated EDID

Step 1. Choose the desired **EDID list** on the source panel and select an **EDID**.

Step 2. Press the **Emulated** button on the top of the Destination panel.

Step 3. Select the desired **port** on the right panel (one or more ports can be selected); the EDID(s) will be highlighted in yellow.

Step 4. Press the **Transfer** button to change the emulated EDID.

Learning an EDID

The process is the same as changing the emulated EDID; the only difference is the Destination panel: press the **User** button. Thus, one or more EDIDs can be copied into the user memory either from the factory memory or from a connected sink (Dynamic).

Exporting an EDID

A source EDID can be downloaded as a file (*.bin, *.dat or *.edid) to the computer.

Step 1. Select the desired **EDID** from the Source panel (line will be highlighted in yellow).

Step 2. Press the **Export** button to open the dialog box and save the file to the computer.

Importing an EDID

A previously saved EDID (*.bin, *.dat or *.edid file) can be uploaded to the user memory: IMPORT

Step 1. Press the **User** button on the top of the Source panel and select a **memory** slot.

Step 2. Press the **Import** button below the Source panel.

Step 3. Browse the file in the opening window, then press the **Open** button. The browsed EDID is imported into the selected User memory.

ATTENTION: The imported EDID overwrites the selected memory place even if it is not empty.

Deleting EDID(s)

The EDID(s) from User memory can be deleted as follows: DELETE SELECTED


Step 1. Press the **User** button on the top of the Destination panel.

Step 2. Select the desired **memory** slot(s); one or more can be selected (“Select All” and “Select None” buttons can be used). The EDID(s) will be highlighted in yellow.

Step 3. Press the **Delete selected** button to delete the EDID(s).

6.11.2. EDID Summary Window


Select an EDID from the Source panel and press the **Info** button to display the EDID summary. INFO

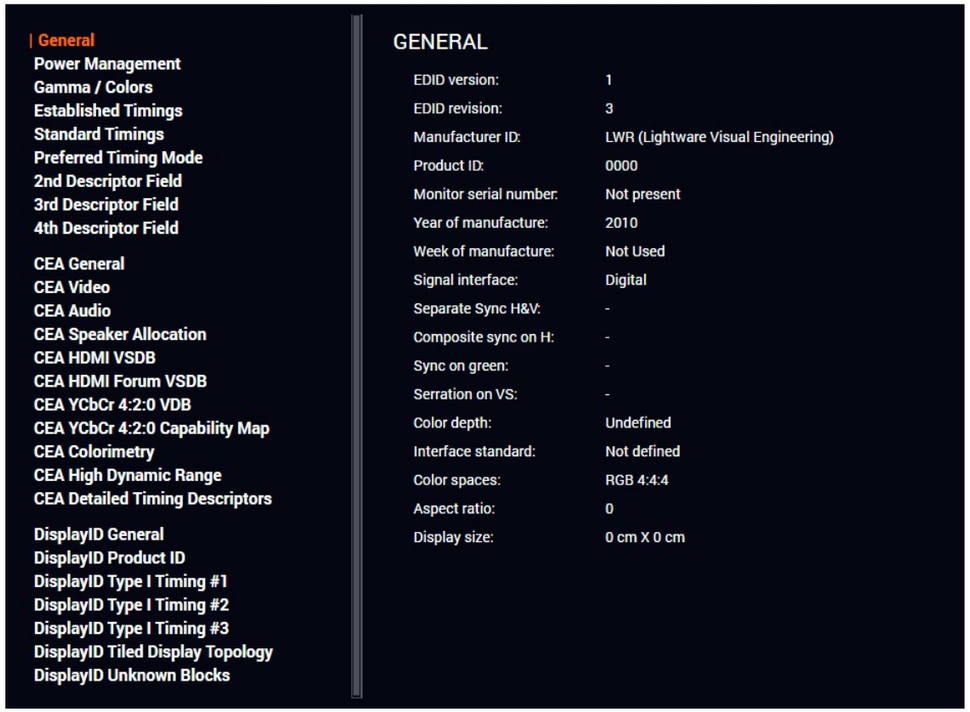

EDID Summary Window

6.11.3. Editing an EDID

Select an EDID from the Source panel and press the **Edit** button to display the Advanced EDID Editor window. The editor can read and write all descriptors that are defined in the standards, including the additional CEA extensions. Any EDID from the device's memory or a saved EDID file can be loaded into the editor. The software resolves the raw EDID and displays it as readable information to the user. All descriptors can be edited, saved in an EDID file, or uploaded to the User memory. For more details about EDID Editor, please visit our website (www.lightware.com) and download the EDID Editor Application note. EDIT

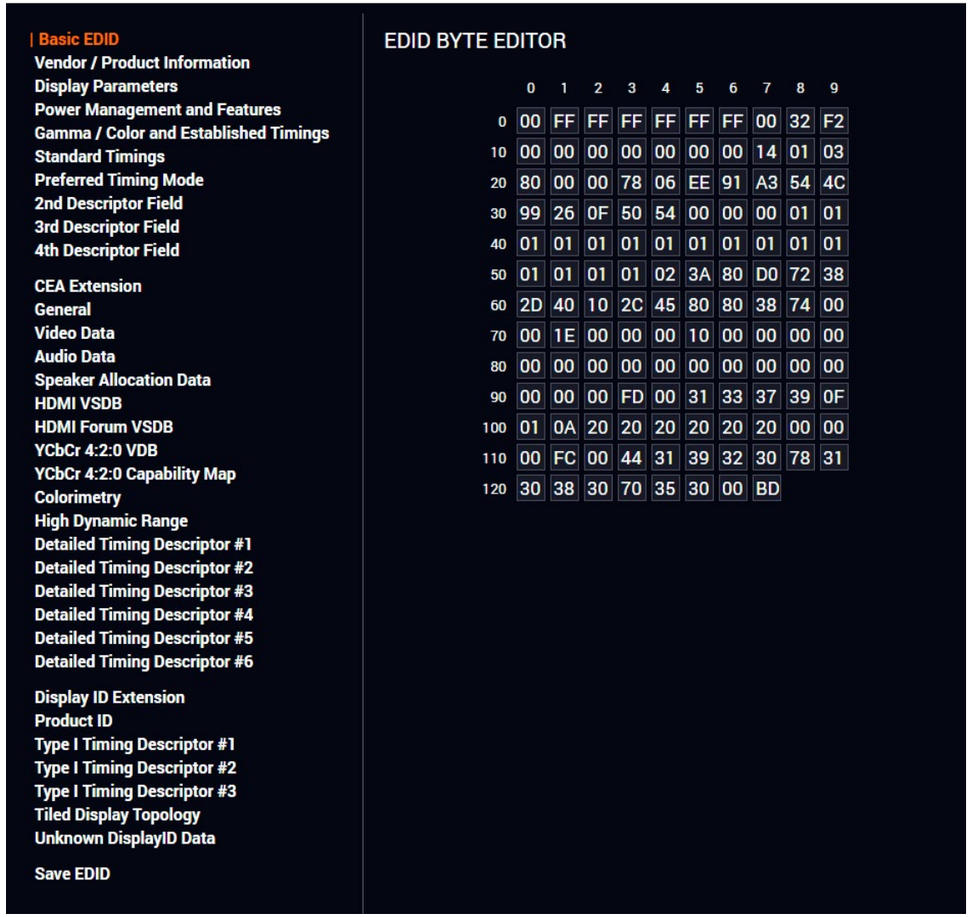


EDID Editor Window

6.11.4. Creating an EDID - Easy EDID Creator

CREATE


Since the Advanced EDID Creator mentioned above needs more complex knowledge about EDID, Lightware introduced a wizard-like interface for fast and easy EDID creation. With Easy EDID Creator, it is possible to create custom EDIDs in four simple steps. By clicking on the **Create** button below the Source panel, **Easy EDID Creator** is opened in a new window. For more details about the EDID Editor, please visit our website (www.lightware.com) and download the EDID Editor Application note.

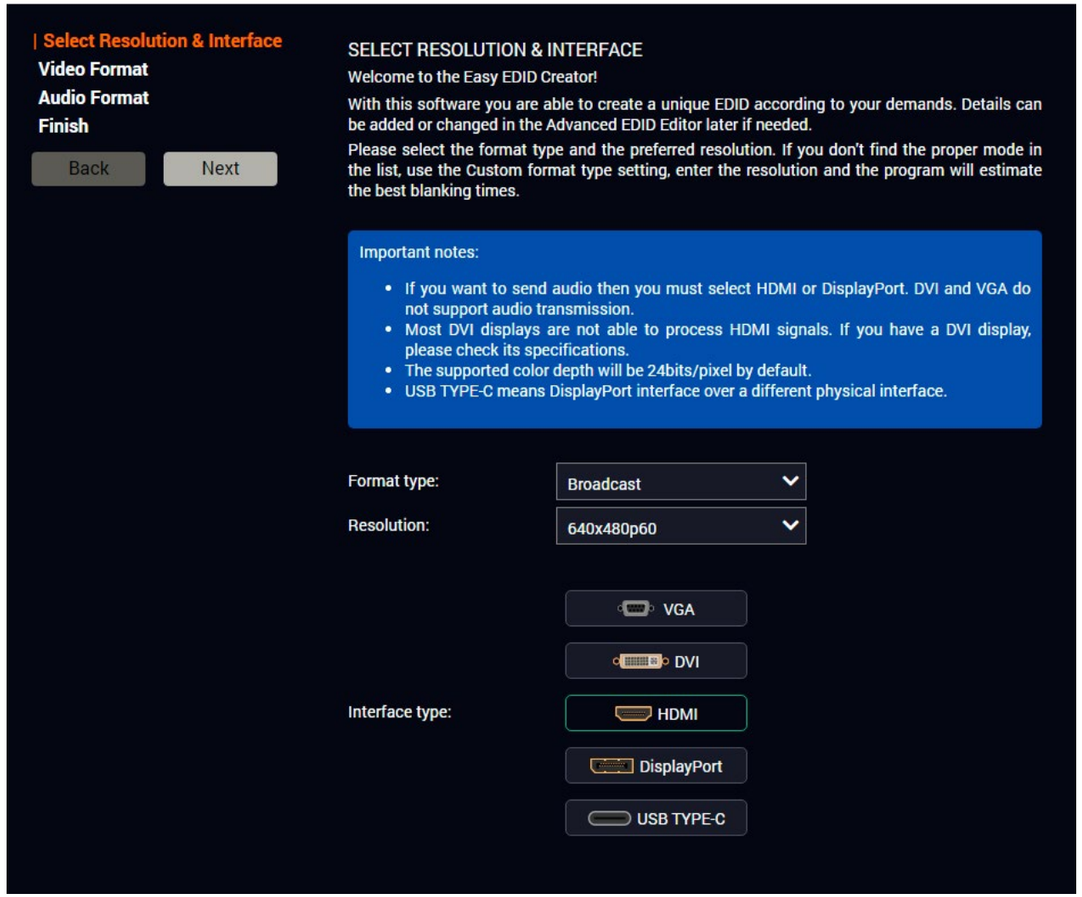

EDID Creator Window

6.12. Control Menu

6.12.1. Ethernet

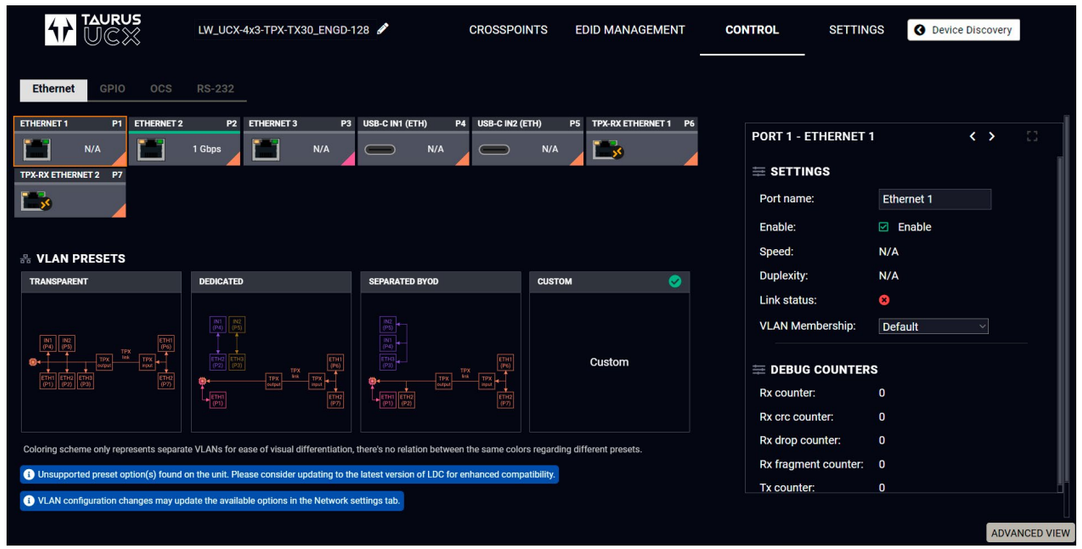

Ethernet tab in Control menu

Several ports are displayed in the Ethernet settings: Three of them belong to the RJ45 Ethernet connectors. You can check the status of the Ethernet line by each port: the speed and the duplexity of the connection. Two are for configuring the Ethernet layer in the USB-C ports. The remaining two ports appear only in case the connected RX is HDMI-UCX-TPX-RX107, and they are for checking the status of the Ethernet connectors of the RX.

The following settings are available for each port:

- Rename the port,
- Enable / disable the port;
- VLAN membership.

VLAN Membership

The VLAN membership setting offers isolated networks for the chosen ports that are independent from the management network and even each other. There are several presets available that can be seen on the tab, illustrated for better understanding. In case the VLAN setting differs from all of the first three presets, the VLAN preset will be **Custom**. The VLAN presets will be further refined in later firmware versions.

> INFO: VLAN separation settings and Management network can be set on the HDMI-UCX-TPX-RX107 models through connection to the TX.


Setting the Management network VLAN ID (1000) on HDMI-UCX-TPX-RX107 is currently only available via REST API and LW3.

Management VLAN


Management VLAN is a special setting allowing connection only to the CPU for control and update purposes. The **VLAN Membership ID 1000** is reserved for Management VLAN.

6.12.2. GPIO

The GPIO port has 6 pins that operate at TTL digital signal levels and can be controlled by LDC or protocol commands. Select a GPIO pin under the Port settings section; the settings (pin direction and input level) are displayed on the port tiles as well. #gpio

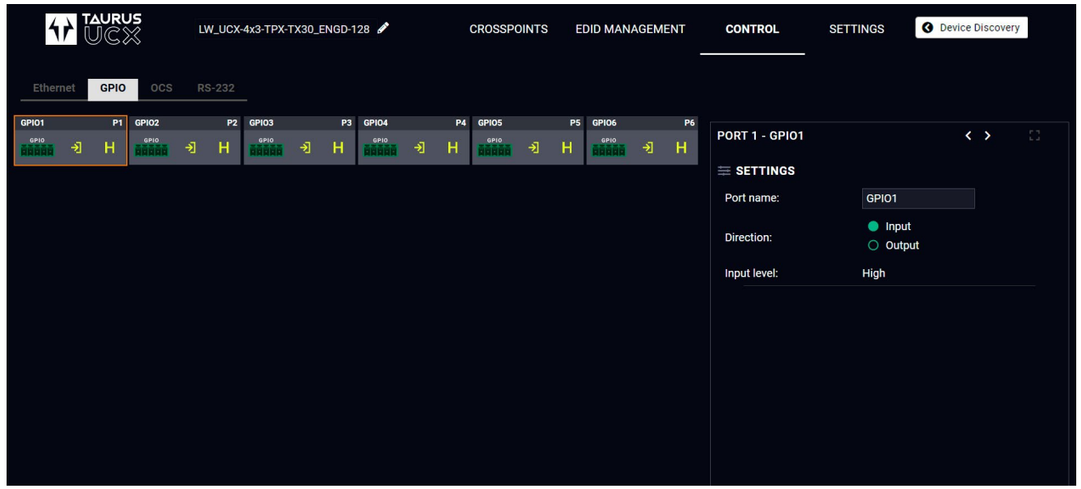

INFO: Output level can be set only if the pin direction is set to Output. In case of input direction, the output level setting and the **Toggle** button is not available.

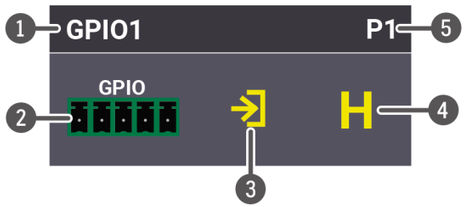

1. GPIO pin name
2. GPIO Port symbol
3. Pin direction:
   - Input
   - Output
4. Level indicator:
   - **L:** Low
   - **H:** High
5. GPIO Port number


Interval

Interval section is designed for setting the chosen GPIO pin to the specified level for a specified time. Configure the **Duration** time and the **Logic level** of the desired value. Confirm by clicking on the **Set interval** button.

6.12.3. OCS - Occupancy Sensor

DIFFERENCE: The UCX-4x3-TPX-TX30 and UCX-2x1-TPX-TX30 models do not have an OCS port, however, they can control the OCS port of the HDMI-UCX-TPX-RX107 model.

The OCS sensor has 3 pins, where the first pin is a 24V logic input. The default state is high. Different type of sensors exist: some send high level, some send low level to this input when the room is occupied. Active-high or active-low logic might be configured for this port in LDC to support them.

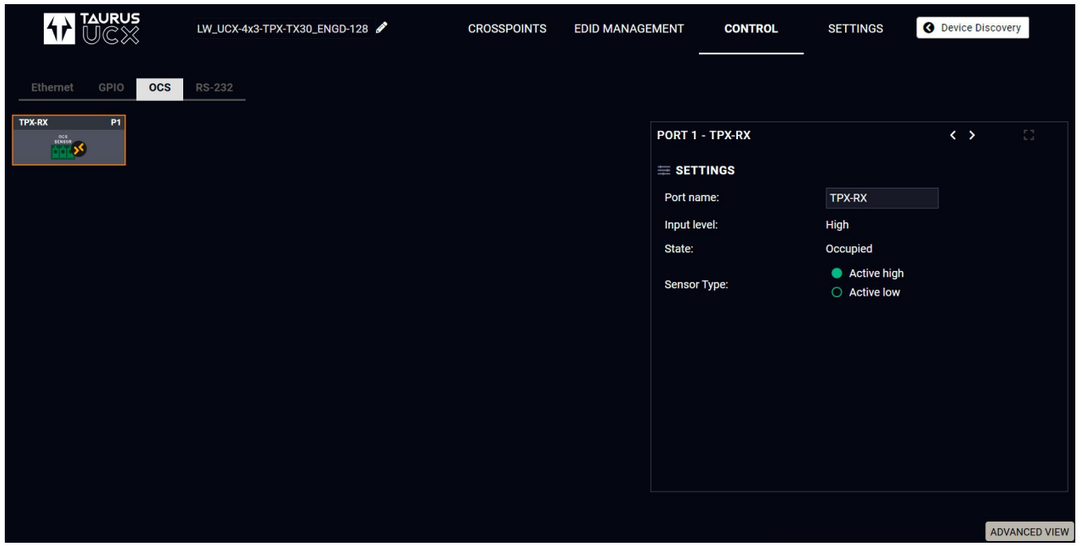


Input level refers to the current input signal level of the first pin.

State value can be free or occupied, depending on the Sensor type setting and the Input level (e.g. when the sensor type is Active high and the input value is high, the state reports 'Occupied').

Sensor type can be active high/active low, and this defines whether the low or high input level means the occupancy.

#ocs

6.12.4. RS-232

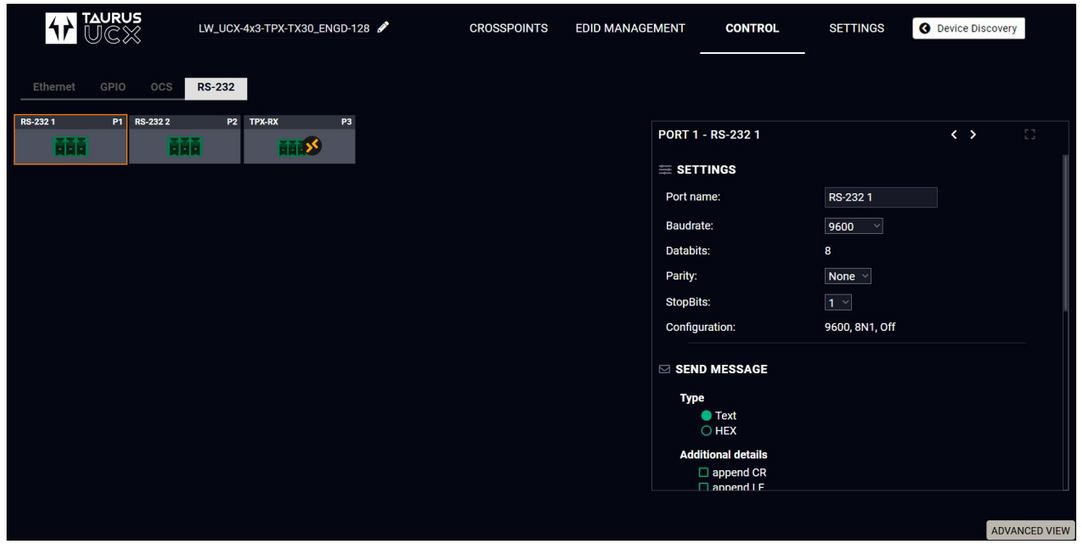


RS-232 tab in Control menu

The following settings and functions are available: *#rs-232 #serial*

- **Baud rate**: 9600, 14400, 19200, 38400, 57600, 115200;
- **Data bits:** 8;
- **Parity**: None, Odd, or Even; *#rs232*

Send Message Section


The serial message sending is achieved by Lightware REST API, and it can be in text or hexadecimal format. The CR/LF (Carriage Return/Line Feed) can be enabled optionally.

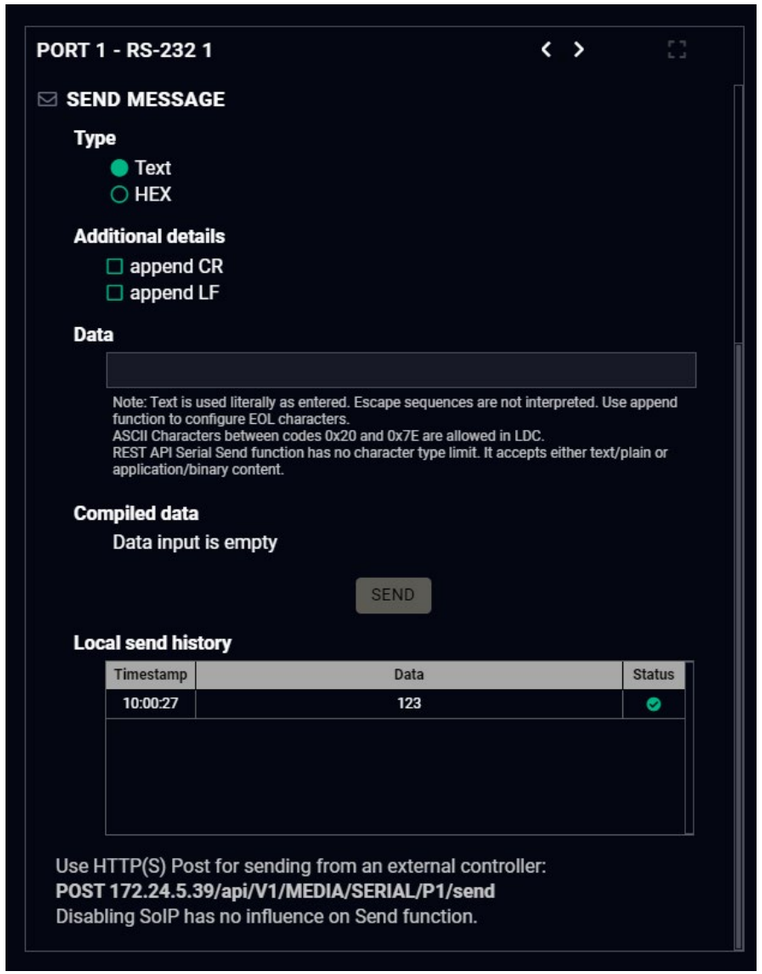

6.13. Settings Menu

6.13.1. TX Status

#devicelabel #label #producttype #firmwareversion #status #serialnumber

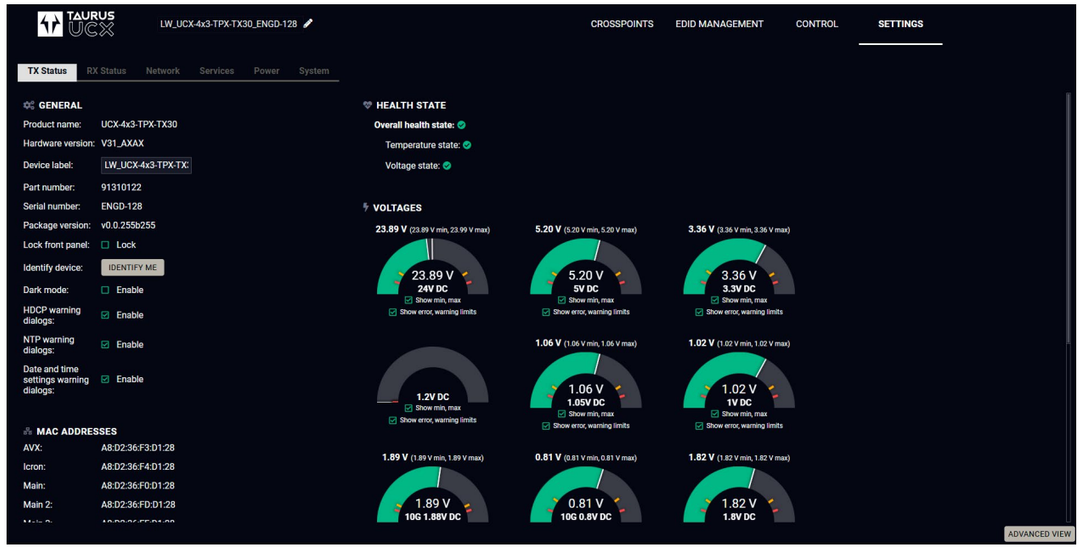

TX Status tab in the Settings menu

The most important hardware and software related information can be found on this tab: hardware and firmware version, serial numbers, MAC addresses, temperatures, and voltage information. Device label can be changed to a unique description by the **Set** button. #buttonlock #lockbutton

You can disable the functionality of the front panel buttons by marking the Lock front panel option. This is same method of the control lock enabled by the front panel buttons. See the details in the Control Lock section.


Clicking on the **Identify me** button results in the blinking of the status and crosspoint LEDs in green for 10 seconds. The feature helps to identify the device itself in the rack shelf.

Dark mode enable: When Dark mode is enabled, all LEDs on the unit are switched off (after 60 seconds by default) if no buttons are pressed. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. #darkmode

TPX link status can also be seen.

6.13.2. RX Status

DIFFERENCE: This tab is only available when the receiver is HDMI-UCX-TPX-RX107.

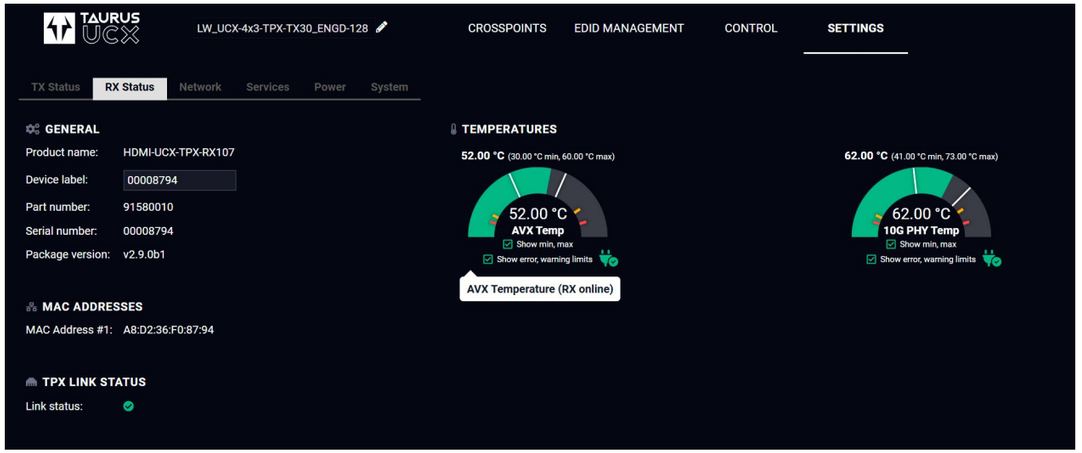

RX Status tab in the Settings menu

The most important software related information can be found on this tab: firmware version, serial numbers, MAC address and temperatures. Device label can be changed to a unique description by the **Set** button.

TPX link status can also be seen.


MAC Addresses

Here you can see a list of MAC addresses that are assigned to the device.

- Main: This is the MAC address of the CPU in Default network setting.
- Main_2: This is the MAC address of the CPU in Management network setting.
- Main_3: This is the MAC address of the CPU for future uses.
- Main_4: This is the MAC address of the CPU for future uses.
- AVX: This is the MAC address of the TPX port.
- Intel: This is the MAC address of the Intel chip.
- USB Type C Port 1: This is the MAC address of the IN1 USB-C port.
- USB Type C Port 2: This is the MAC address of the IN2 USB-C port..

MAC addresses will be provided at the manufacturing stage and can be accessed via a QR code on the device, as well as in LDC and the LW3.

6.13.3. Network

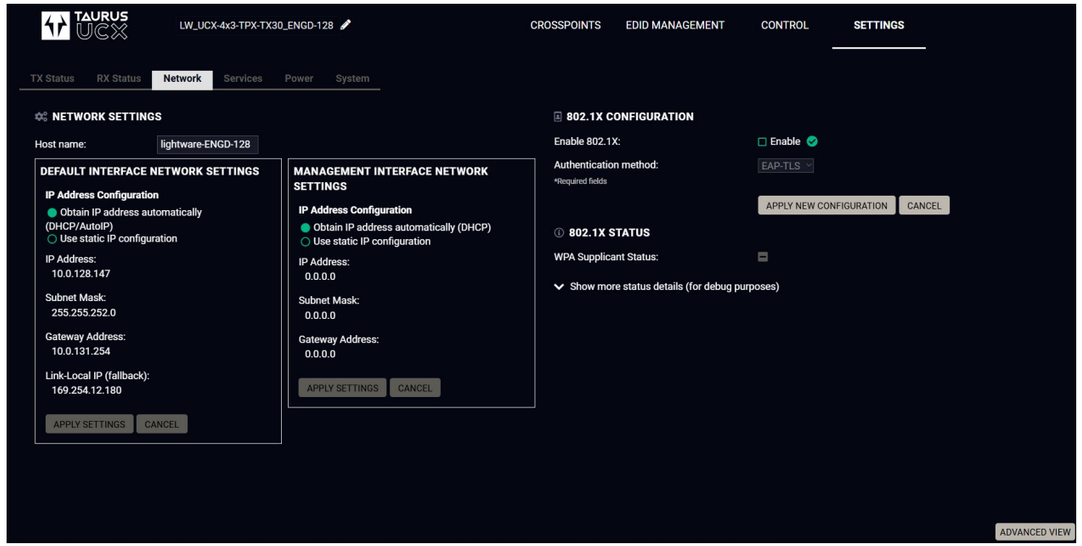

Network tab in Settings menu

Network Settings

IP address and DHCP settings can be set on this tab. Always press the **Apply settings** button to save changes.

When the host name is modified, clicking on the **Restart http(s) services** button is also needed.

INFO: A new certificate is generated after the hostname changing.

When Management network is enabled, both the Default and Management network settings can be seen and adjusted on this tab. If Management network is disabled, only the Default network settings will be visible.

When Management network is enabled, it becomes the primary network.

INFO: DHCP and Static IP settings cannot be viewed at once for the same network.

Preconfiguration of any network on this page is not possible - configuring only becomes available once the network is activated.

If the Default interface is assigned the same domain as the Management interface, a notification will appear to change the settings appropriately. As long as there are conflicts, network settings cannot be saved.

If the two interfaces get their addresses from different DHCP servers, the FW will prevent conflict automatically.


6.13.4. 802.1x Configuration

Authentication Process


You will find the 802.1x authentication section in the right.

You can enable authentication by ticking in the Enable box. Once 802.1x authentication is enabled, you can see the authentication method **EAP-TLS**.

With EAP-TLS, you will need an Identity, CA and Client certificates, a Client Private Key, and a password for the Key.

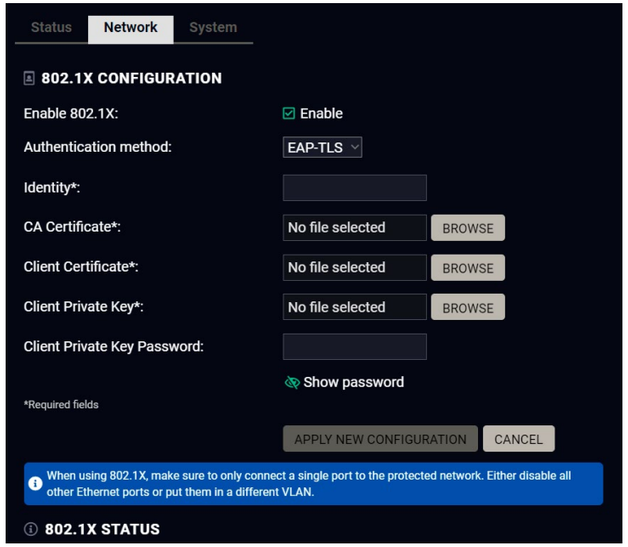


After entering every necessary information, click on the **Apply new configuration** button, and the authentication process starts.

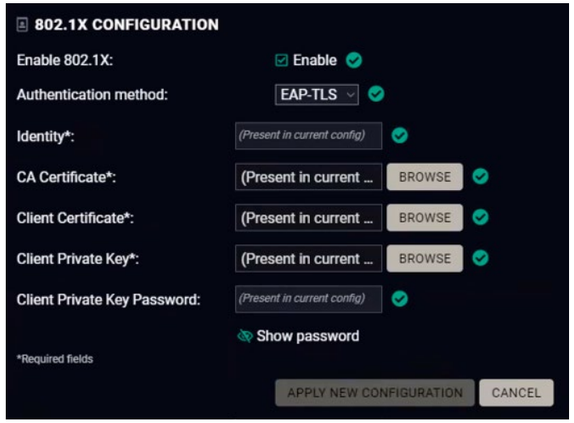

If every component is correct, the device will gain access to the secure LAN.

ATTENTION: 802.1x will only work properly, if there is **exactly one** port in the Management VLAN. The authentication can still be turned on when several or none of the ports are in the Management VLAN, however, it will not operate properly.

6.13.5. Services

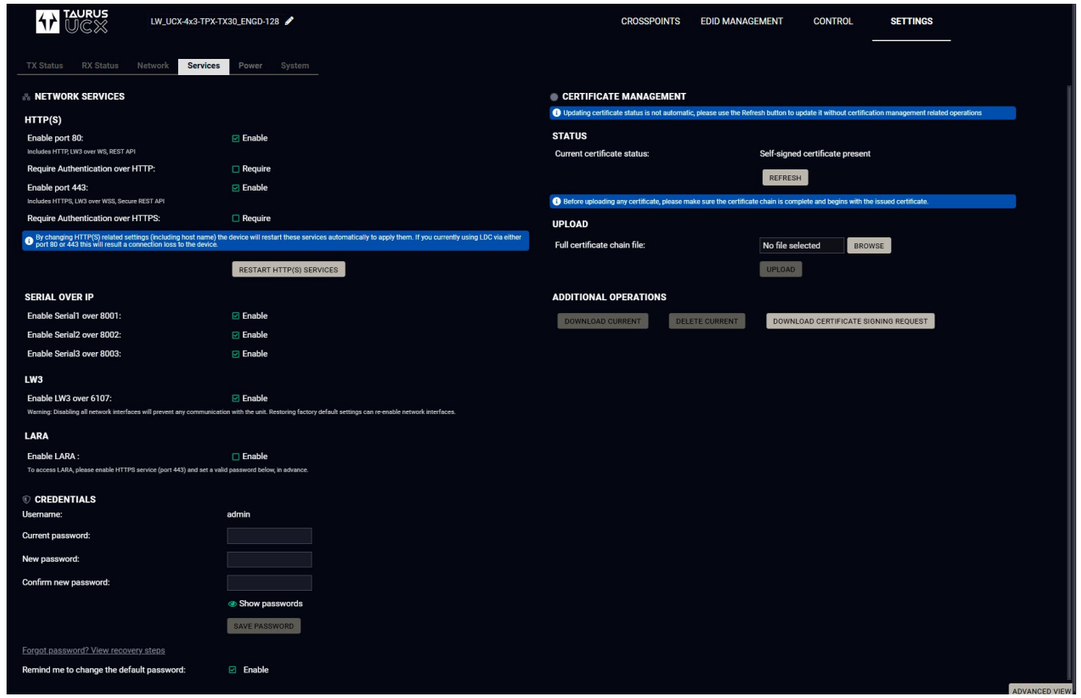

Network Services

HTTP/HTTPS

UCX-TPX-TX30 series switcher transmitter provides HTTP/HTTPS server services on its 80 and 443 ports to make it accessible over WebSocket (WS), LW3 protocol, using Lightware Device Controller and REST API for device control (see the detailed list about the additional available features in the summary table of the Lightware Advanced Room Automation (LARA) section).

HTTPS protocol encrypts the transferred data to keep it protected. For more details about the HTTPS, see the The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP. section.*#portblock #network #http #https*

- **Enable/Disable HTTP/ HTTPS port:** To ensure the secure data traffic, the HTTP port (80) can be disabled, and the all the information can be transferred via HTTPS (443 port).

  80 or 443 port is necessary to upload/download WelcomeScreen image, log and clone files so one of them should be opened to reach these functions.

INFO: HTTP is disabled by default.

ATTENTION: Please ensure proper UCX time and date setting in UCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

- **Require Authentication over HTTP/HTTPS:** authentication helps limit the access to the device by setting a username (admin) and a password. For more details, see the Basic Network Security section. No password is set by default, the authentication can be enabled after setting a password.
- **Restart HTTP(S) Services** is required after the authentication settings changed.

Serial over IP

The signal route of the serial-IP transmission can be broken by disabling the serial over 8001 or 8002 port. For more details about the RS-232, see the Serial Interface section.

LW3

Enable LW3 over 6107: LW3 protocol commands, Ligthware Device Controller software.

WARNING! The Lightware Device Controller software operates on 6107 port, when it is disabled, the UCX-TPX series switcher transmitter can be controlled only with protocol commands via http(s). Reset to Factory Default Settings can re-enable the network interfaces.

LARA

LARA can be enabled by ticking in the box after enabling HTTPS and setting a password, which can be done below.

Credentials

ATTENTION: A random-generated factory default password is applied to the device. After logging in, you will be prompted to change the password.

INFO: Password history is maintained in authentication, not allowing for the last 10 passwords to be set again.

The authentication password can be set here for HTTP/HTTPS ports. UTF-8 characters are allowed. Min length: 10 characters, max length: 100 characters. The password string can not be queried. *#password*

ATTENTION: If a wrong password is entered during login five times in a row, all login attempts are denied for 15 minutes.

New Password

INFO: The old password is also required when changing the password.

ATTENTION: Authentication feature in UCX-TPX-TX30 series is not equal to the Cleartext login feature in the Advanced Control Pack in the TPS family extenders.

Certificate Management

You can upload certificates signed by the Certificate Authority (CA) to provide secure connection to the devices with the webLDC.

To download a Certificate Signing Request (CSR), follow these steps:

Step 1. Navigate to the Settings menu, Services tab and click on the **Certificate Signing Request** button.


Step 2. Enter the data required for the authentication process. It is important to provide all information related to your organization, because it will be used to verify your identity.

Step 3. Once all the necessary data has been entered, the file can be downloaded via the button in the bottom, and sent for signing.

Step 4. When the CA signs the certificate, it will create a .pem file, which then can be uploaded onto the device.

Step 5. After uploading, press the **Refresh** button in the Certificate Management section and the signed certificate shall be active.

Please be aware that the certificate will use the device's own private key and will not work for any other device. Each device must have its own certification.

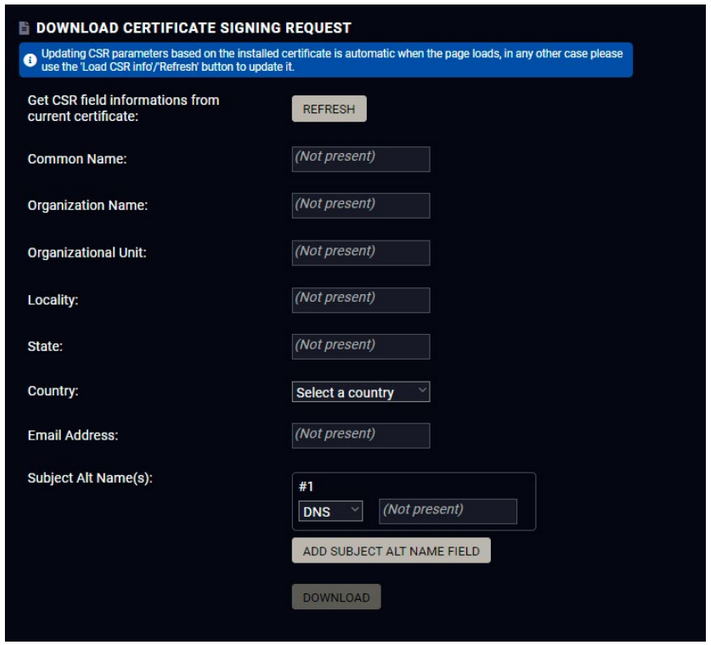

The certificate signing request form

Information	Description	Example
Common Name	The domain name you wish to secure.	www.example.com
Organization Name	The legal name of the company or organization, any suffix included.	Lightware Visual Engineering PLC
Organizational Unit	The name of the internal organizational department/ division.	IT
Locality	The name of the city, town, village etc. of the organization.	Budapest
State	Province, region, county or state, not abbreviated.	Pest county
Country	The country of the organization can be chose from the drop-down menu.	Hungary
Email Address	The contact address of the certificate administrator or the IT department of the company.	example@lightware.com


In the Subject Alt Name(s) field you can enter additional information for more hosts to be certified with one SSL file. The information type can be chosen from the drop down menu. You can have several Subject Alt Name fields.



You can enter the following information in the Subject Alt Name field:

- DNS
- IP address
- E-mail address
- URI
- RID

6.13.6. Power

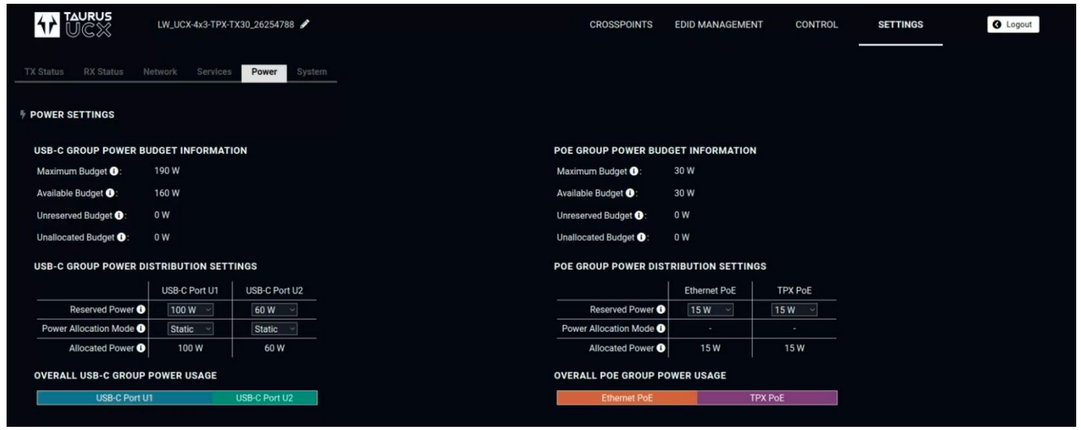

Power tab in the Settings menu

On this tab you can set the power output by each capable port.

Power Budget Information

- **Total Power Budget**: you can see the full amount of power available for output.
- **Unreserved Power Budget**: you can see the amount of power that remains after the amount has been set on all ports.
- **Unallocated Power Budget**: you can see the amount of power that remains available in case one of the Power Allocation Mode on a port is set to Auto. If needed, this power amount will be automatically provided for the port.

Power Distribution Settings

In this table you can quickly and efficiently set the power capabilities of each port.

- **Reserved Power**: You can choose a minimum amount of power to be output on the port from a drop-down menu.
- **Power Allocation Mode**: You can set whether the port shall be capable of outputting more than the minimum amount set in the line above. In case of **Static**, the port will output the set amount. In case of **Auto**, the port may use any unallocated power in addition to the given minimum to supply to the device connected to it if needed.
- **Allocated Power**: total amount of power output by the port.

Enabling 100W power to first connected device

In order for a USB-C port to be able to supply 100W, the amount of reserved power must be sufficient. If the user wants to allocate 100W to the first connected device, regardless of which USB-C port it is connected to, the setting must be arranged as follows:

PoE On

Step 1. Make sure that **Power Allocation Mode** for all ports is **Static**.
Step 2. Choose **30W** of **Reserved Power** for the TPX PoE or Ethernet PoE column, or **15W** for both ports.
Step 3. Set the **Reserved Power** for both USB-C ports to **15W**.
Step 4. Turn **Power Allocation Mode** to **Auto** for the USB-C ports.

This will enable the transmitter so supply the first connected device with up to 100W, while the other port will be able to supply 60W.

PoE Off

Step 1. Make sure that **Power Allocation Mode** for all ports is **Static**.
Step 2. Choose **0W** of **Reserved Power** for the TPX PoE and Ethernet PoE column.
Step 3. Set the **Reserved Power** for both USB-C ports to **15W**.
Step 4. Turn **Power Allocation Mode** to **Auto** for the USB-C ports.

This will enable the transmitter so supply the first connected device with up to 100W, while the other port will be able to supply 90W.

Setting the Power Output of the Ethernet 3 Port

PoE On: Choose **30W** of **Reserved Power** for the Ethernet PoE column.

This will enable the transmitter to supply the connected device (e.g. touchpad) with 30W on its **Ethernet 3** RJ45 port.

PoE Off: Choose **0W** of **Reserved Power** for the Ethernet PoE column.

This will disable the power output on the **Ethernet 3** RJ45 port.

Setting the Power Output of the TPX Output Port

PoE On: Choose **30W** of **Reserved Power** for the TPX PoE column.


This will enable the transmitter to supply the connected receiver with 30W on its **TPX** RJ45 port.

PoE Off: Choose **0W** of **Reserved Power** for the TPX PoE column.

This will disable the power output on the **TPX** RJ45 port.

> **ATTENTION:** It is not possible to supply 30W over one PoE-capable port and still be able to use PoE on the other. You can either use one port with PoE+ (30W), or both ports with 15W of Reserved Power each.

6.13.7. System

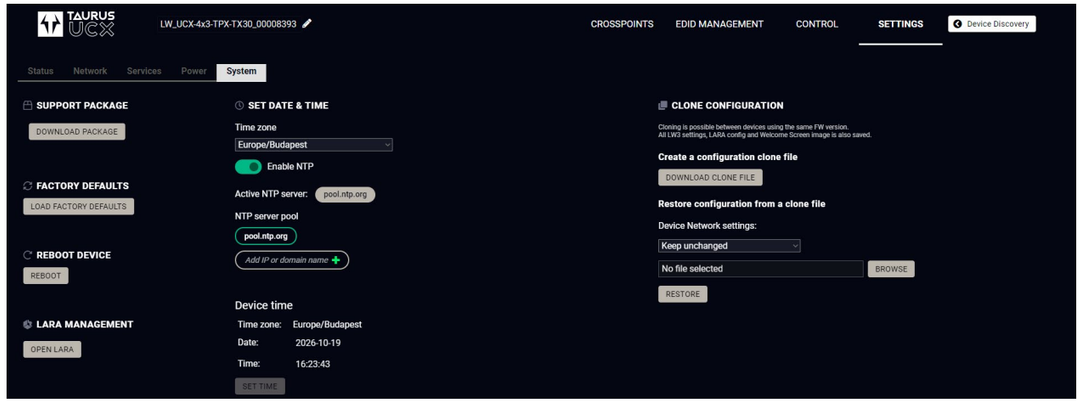

System tab in Settings menu

The following functions are available under the System tab:

- **Support package** - saving a log file of the device, helps during the troubleshooting process
- **Load factory defaults** - recalling factory default settings and values. All factory default settings are listed in the Content of the Backup File section.
- **Reboot** - rebooting the system.
- **Set time** - (internal clock) of the switcher, which is used for logging events.
- Pressing the **Sync with Computer** button is a quick and easy way to set the time. *#factory #log #systemlog #reboot #restart*

ATTENTION: Please ensure proper UCX time and date setting in UCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

Set Date & Time

INFO: To adjust time and date settings, you must authenticate the device first, if authentication is enabled.

To enable Network Time Protocol (NTP), the device must be able to reach an NTP server either online or a local server.

Manual time and date setting is available when NTP is disabled.

LARA management

The LARA interface can be opened by clicking on the Open LARA button.

Clone configuration

Clone configuration makes saving all the LW3 settings, custom scripts and welcome screen image and uploading them to another device possible.

ATTENTION: Please note that clone configuration function operates properly when the same firmware version is installed on the devices.

ATTENTION: If the device that the clone configuration is created on is password protected, the devices where this file is uploaded will also ask for a password. However, as passwords are not saved in the configuration file, the password is reset to **admin**.

Create a configuration clone file

Click on the **Download Clone File** button to save the setting to the computer.

Restore a configuration from a clone file

Step 1. Choose the desired network setting from the drop down menu:

- Keep unchanged.
- Restore from clone file (hostname will change, because the hostname property is also cloned from the original device and it can affect the generated certificates of the 443 port).
- Set to DHCP mode.
- Set to custom non-DHCP mode (in this case additional settings required: IP Address, Subnet Mask, Gateway Address).


INFO: The network settings relates to Static or DHCP setting/ IP address/ Subnet mask/ Gateway address and the hostname property. Network service settings (enable http(s) ports, authentication etc.) will be always restored.

Step 2. Click on the **Select file** button to browse a clone file from the PC.

Step 3. The cloning process will start by clicking on the **Restore** button.

See the entire list of the saved data in the backup file in the Content of the Backup File section.

6.14. Advanced View Window

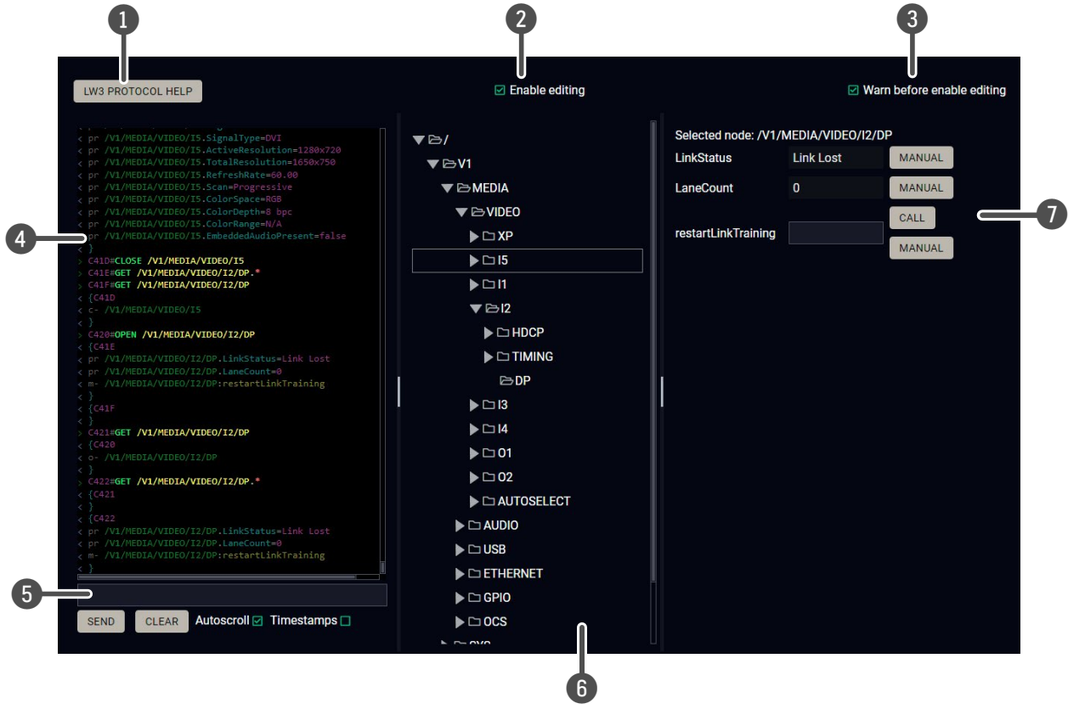

1. **LW3 protocol help** — Pushing the button results in a help window opening, which describes the most important information about LW3 protocol commands in HTML format.
2. **Edit mode** — The default appearance is the read-only mode. If you want to modify the values or parameters, tick the option. You will be prompted to confirm your selection.
3. **Warning mode** — If this is checked, a warning window pops up when you enable Edit mode.
4. **Terminal window** — Commands and responses with time and date are listed in this window. Sent command starts with '>' character, received response starts with '<' character. The color of each item depends on the type of the command and response. The content of the window can be emptied by the **Clear** button. If the **Autoscroll** option is ticked, the list is scrolled automatically when a new line is added.
5. **Command line** — Type the desired command and execute it by the **Send** button. Clear all current commands and responses in the Terminal window by the **Clear** button.
6. **Protocol tree** — LW3 protocol tree; select an item to see its content.
7. **Node list** — Correspondent parameters and nodes are shown that are connected to the selected item in the protocol tree.

#advancedview
#terminal

Manual button: Manual (short description) of the node can be called and displayed in the terminal window.

Set button: Saves the value/parameter typed in the textbox.

Call button: Calls the method, e.g. reloads factory default settings.

7

Lightware REST API Reference

The device can be controlled through standard HTTP(S) requests to ensure the control functions from web browsers or terminal program.

- Overview 87
- Instructions for the Terminal Application Usage 87
- Protocol Rules 90
- REST API Security 92
- System Commands 92
- Video Port Settings - General 97
- Welcome Screen Settings 101
- Video Port Settings - USB-C Related Commands 102
- CEC Command Sending 103
- Audio Port Settings 104
- USB Port Settings 108
- USB Port Settings - USB-C Related Commands 111
- EDID Management 113
- Ethernet Port Configuration 115
- Network Security 117
- Serial Port Configuration 120
- Serial Port Messaging 122
- GPIO Port Configuration 122
- OCS Port Configuration 123
- Updating the Device via REST API 124
- Lightware REST API Quick Summary 129

7.1. Overview

The Lightware REST API is designed to provide a platform-free interface, where the UCX series switcher transmitter can be controlled by HTTP requests. REST API is a software architectural style based on HTTP protocol, so it can be used via web browser, Node.js, terminal programs.

The UCX-TPX series device provides a REST API server where most of the LW3 commands are available (for more details, see the Lightware REST API vs. LW3 Protocol section).


Lightware devices can be controlled with LW3 protocol commands (for more details, see the LW3 Programmers' Reference). LW3 protocol consists of read-only, read-write properties and methods, which operate in the same way as REST API GET/POST methods. This is not a new protocol, the LW3 tree structure became available via HTTP(s).

7.2. Instructions for the Terminal Application Usage

7.2.1. Web Browser Plugins


REST API interface can be easily accessed via a web browser's plugin, see the two examples below:

Mozilla Firefox - RESTED

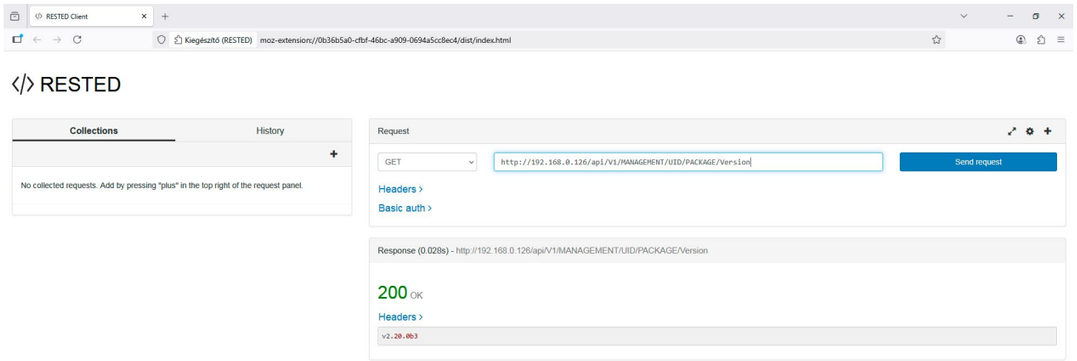

RESTED plugin for Mozilla Firefox


Google Chrome - Yet Another REST Client

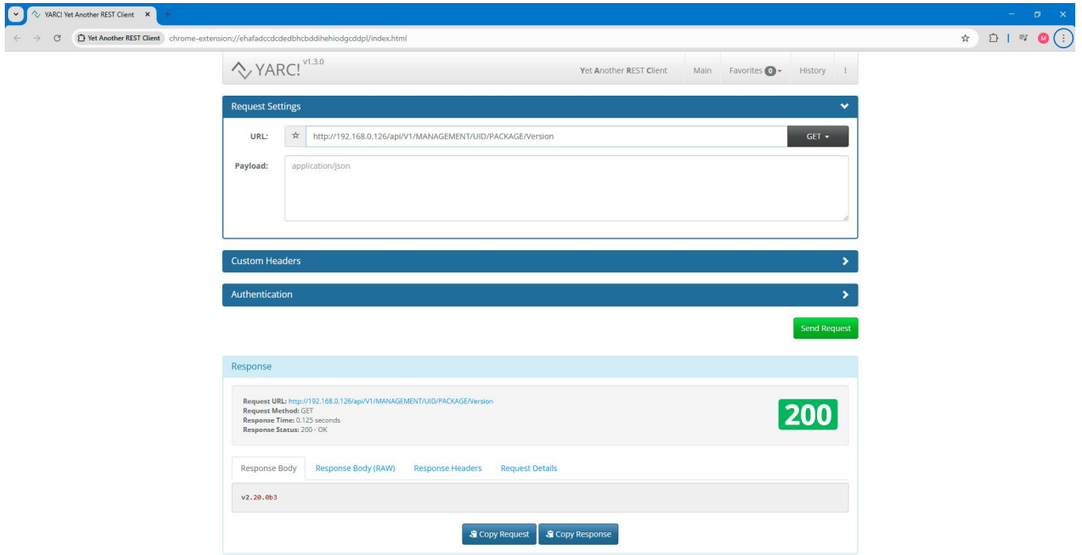

Yet Another REST Client for Google Chrome

7.2.2. Third-party API Platform

Postman is one of the numerous applications that can be used for sending REST API requests.

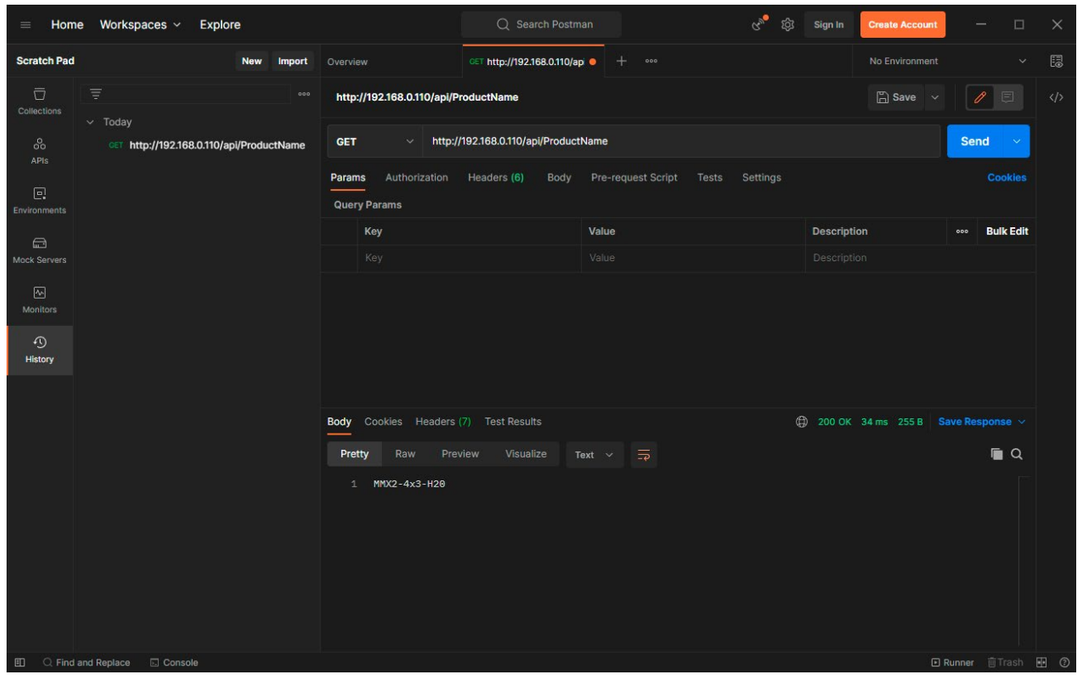

Postman – for REST API Usage

7.2.3. Terminal Application

The REST API requests can be applied to the switcher transmitter using a terminal application. You need to install one of them on your control device, for example, Putty, CLI or Curl. *#terminal*


Curl

Curl is a command line tool that can also connect to the Taurus REST SERVER and display communication in a terminal window. It supports data transferring with HTTP and HTTPS standards and handles the basic authentication (username and password) in Windows® and Linux operating systems. Multi-line commands are also accepted, so a script can be stored in a .txt file for future reference.

Check if the Curl package is installed on your system. Type into your console: `curl.` When the answer is `'curl: try 'curl --help' for more information'`, curl is installed.

Some web browser plugins (e.g. REST Client) display the curl version of the sent request.

Once the terminal window is opened, you can enter the commands. Some typical examples are listed in the following section.

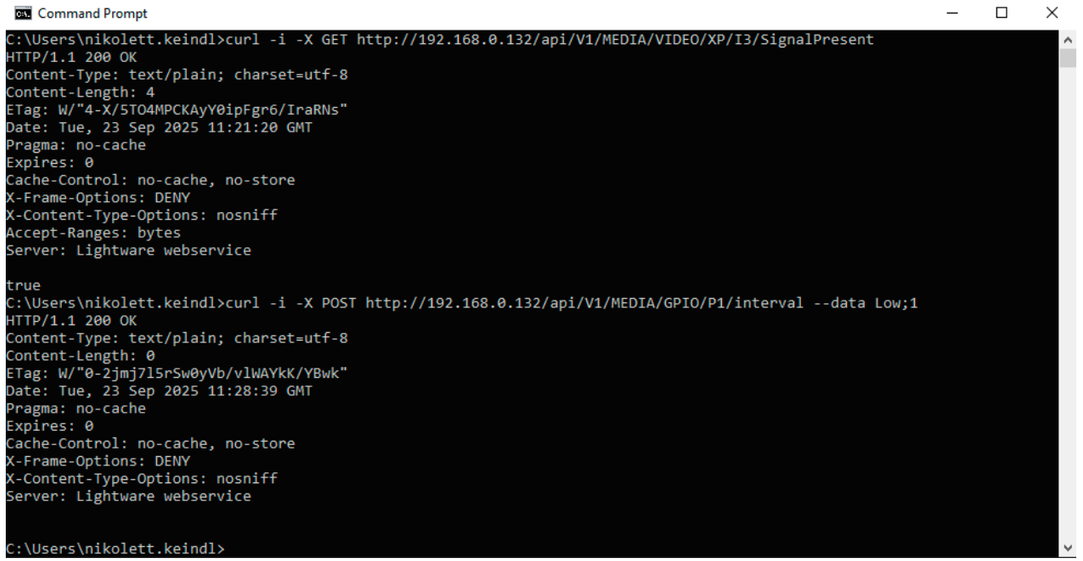

REST API communication in a command line window

GET Command Example

Query the Signal Presence

curl -i -X GET <ip>/api/<NodePath>/<PropertyName>

```
C:\Users\nikolett.keindl>curl -i -X GET http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I3/SignalPresent
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 4
ETag: W/"4-X/5TO4MPCKAyY0ipFgr6/IraRNs"
Date: Tue, 23 Sep 2026 11:21:20 GMT
Pragma: no-cache
Expires: 0
Cache-Control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Accept-Ranges: bytes
Server: Lightware webservice

true
```

POST Command Example 1.

Set the Mute State

curl -X POST -i <ip>/api/<NodePath>/<PropertyName> --data <value>

```
C:\Users\nikolett.keindl>curl -X POST -i http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I3/Mute --data true
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 4
ETag: W/"4-X/5TO4MPCKAyY0ipFgr6/IraRNs"
Date: Tue, 23 Sep 2026 12:28:12 GMT
Pragma: no-cache
Expires: 0
Cache-Control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Server: Lightware webservice

true
```

POST Command Example 2.

Switch Video Crosspoint

curl -X POST -i <ip>/api/<NodePath>/<PropertyName> --data <value>

```
C:\Users\nikolett.keindl>curl -X POST -i http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch --data I2:O1
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 0
ETag: W/"0-2jmj7l5rSw0yVb/vlWAYkK/YBwk"
Date: Tue, 23 Sep 2026 12:29:17 GMT
Pragma: no-cache
Expires: 0
Cache-Control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Server: Lightware webservice
```

POST Command with Basic Authentication Example

Switch Video Crosspoint

curl --user <username>:<password> -X POST -i <ip>/api/<NodePath>/<PropertyName> --data <value>

```
C:\Users\nikolett.keindl>curl --user admin:1234567890 -X POST -H -i http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/
switch --data I2:O1
```

HTTPS Command Example 2.


Switch Video Crosspoint

curl -X POST -k -i <ip>/api/<NodePath>/<PropertyName> --data <value>

```
C:\Users\nikolett.keindl>curl -X POST -k -i https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch --data I2:O1
HTTP/1.1 200 OK
Content-Type: text/plain; charset=utf-8
Content-Length: 0
ETag: W/"0-2jmj7l5rSw0yVb/vlWAYkK/YBwk"
Date: Tue, 23 Sep 2026 12:38:03 GMT
Pragma: no-cache
Expires: 0
Cache-Control: no-cache, no-store
X-Frame-Options: DENY
X-Content-Type-Options: nosniff
Strict-Transport-Security: max-age=31536000; includeSubDomains
Server: Lightware webservice
```

7.3. Protocol Rules

7.3.1. Command Structure Example

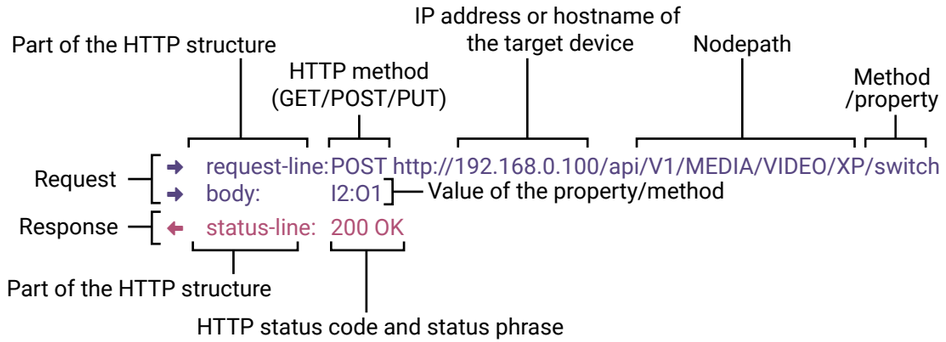

The examples below show how to apply the REST API in different environments:

Curl in Command Line Terminal

➜ curl -X POST -i http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch --data I2:O1

REST API Client in Mozilla

Method: POST
URL: http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch
Body content type: text/plain
Body: I2:O1

7.3.2. General Rules

- All names and parameters are case-insensitive.
- The methods, nodes and properties are separated by a slash ('/') character.
- The node name consists of letters of the English alphabet and numbers.
- All properties and methods are available HTTP(S) below /api as an URL.
- The HTTP server is available on port 80, the HTTPS server is available on port 443.
- GET / PUT/ POST methods are supported.
- The request-line contains the IP address (or hostname) and the nodepath.
- Arguments and property values should be given in the HTTP request's body as a plain text.
- REST API - LW3 converter does escaping automatically.
- The node paths describe the exact location of the node, listing each parent node up to the root.
- The supported HTTP protocol: standard HTTP/1.1
- There is no maxiumum size or character length of the request.

7.3.3. Legend for the Control Commands

Command and Response – Example

➜ request-line: GET·<ip>/api/V1/MEDIA/VIDEO/<in>/SignalPresent

🡄 body: <status code>

Format	Description
<ip>	IP address or hostname of the target device
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Variable defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. **I2;I4;I5** or **F27:E1;F47:E2**
➜	Sent request
🡄	Received response
·	Space character

Further, not listed <parameters> are defined at each command.

7.3.4. Lightware REST API vs. LW3 Protocol

All methods and properties of the LW3 tree structure appear below /api as a HTTP(s) URL. The separator character is always a slash ('/') character instead of point ('.') and colon (':'). The URL is case-insensitive.

Example

The LW3 property:
/V1/MEDIA/VIDEO/I2.ActiveResolution

Available in REST API:
192.168.0.100/api/V1/MEDIA/VIDEO/I1/ActiveResolution
192.168.0.100/API/v1/media/video/i1/activeresolution

The following features are implemented only in REST API, but not in LW3 protocol:

- Sending a message via RS-232

The most important commands are listed in this chapter. Other commands can be inferred by the LW3 tree structure, where the read-only (eg. **pr** /V1/MEDIA/VIDEO/I5.Connected) and read-write properties (**pw** /V1/MEDIA/VIDEO/I5.Name) can be listed. For more details about the LW3 tree structure, see the LW3 Programmers' Reference section or the Advanced View Window.

7.3.5. Method Types

GET Method

GET method can be used to get the value of a property. It works the same way as the LW3 GET command.

PUT/ POST Method

In this case, POST and PUT are equivalent, they are for modifying read-write properties and invoking methods. They replace the LW3 SET and CALL commands.

7.3.6. Supported Commands

Querying property value (GET)

The requested value is in the body of the response.

Protocol	Command
REST API	➔ request-line: GET·<ip>/api/<NODEPATH>/<PropertyName>
Example	➔ request-line: GET http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/SignalPresent
LW3	▸ GET·/<NODEPATH>.<PropertyName>
Example	▸ GET /V1/MEDIA/VIDEO/XP/I2.SignalPresent

Setting property value (SET)

The desired property value should be given as a plain text in the body of the request. The new value is in the body of the response.

Protocol	Command
REST API	➔ request-line: POST·<ip>/api/<NODEPATH>/<PropertyName> ➔ body: <new_value>
Example	➔ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/Mute ➔ body: false
LW3	▸ SET·/<NODEPATH>.<PropertyName>=<new_value>
Example	▸ SET /V1/MEDIA/VIDEO/XP/I2.Mute=false

Invoking method (CALL)

The argument should be given in the body of the request.

Protocol	Command
REST API	➔ request-line: POST·<ip>/api/<NODEPATH>/<methodName> ➔ body: <new_value>
Example	➔ request-line: POST http://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch ➔ body: I5:O1
LW3	▸ CALL·/<NODEPATH>:<methodName>(<value>)
Example	▸ CALL /V1/MEDIA/VIDEO/XP:switch(I5:O1)

7.3.7. Not Supported Commands

Querying node (GET)

Protocol	Command	Note
REST API	Not supported	404 error code
LW3	▸ GET·/<NODEPATH>	
Example	▸ GET /V1/MEDIA/VIDEO	

Subscribing to a node (OPEN)

Protocol	Command	Note
REST API	Not interpreted	Not supported
LW3	▸ OPEN·/<NODEPATH>	
Example	▸ OPEN /V1/MEDIA/VIDEO	

Unsubscribing from a Node (CLOSE)

Protocol	Command	Note
REST API	Not interpreted	Not supported
LW3	▸ CLOSE·/<NODEPATH>	
Example	▸ CLOSE /V1/MEDIA/VIDEO	

7.3.8. Status Codes, Error Messages

The standard HTTP response codes are defined to supply information about the response and the executed command like:

Error code		Description
200	OK	Standard response for successful HTTP request.
401	Unauthorized	
405	Method Not Allowed	A request method is not supported for the requested resource. This is the error code when trying to modify a read-only property.
404	Not Found	Invalid nodepath or property name.
406	Not Acceptable	LW3 server error response for POST and PUT method, equals the following LW3 error codes: **pE:** an error for the property **mE:** an error for a method
500	Internal Server Error	All other errors (Lw3ErrorCodes_InternalError).

7.3.9. Polling

Subscription and unsubscription features are not supported, they can be substituted with polling. It means that a custom user script sends a request for a detected property from time to time.

7.4. REST API Security

The REST API is designed with two security features: **Authentication** and **Encryption.** Both of them are optional and can be used independently of each other.

7.4.1. Authentication

Basic access authentication is designed to limit user access for the REST API server. It requires user authentication by using a password (username is fixed).

Follow the instructions below to set the password:

Step 1. Set the password.

➡ request-line: POST·<ip>/api/V1/MANAGEMENT/NETWORK/AUTHENTICATION/setPassword
➡ body: <new_password>

Step 2. Enable the basic authentication on the chosen port (HTTP: 80 or HTTPS: 443).

➡ request-line: POST·<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/AuthenticationEnabled
➡ body: true

Step 3. Restart network services.

➡ request-line: POST·<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/restart

ATTENTION: The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP.

For more details, see the Basic Authentication section.

7.4.2. Encryption (HTTPS)

There is no encryption when the REST API communication happens via HTTP, because the HTTP protocol is not encrypted. The REST API server is available via HTTPS on the 443 port. To avoid the data interception (e.g. stealing the password) HTTP should be disabled and HTTPS protocol should be used instead.

ATTENTION: Please ensure proper UCX time and date setting in UCX, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

HTTPS does not guarantee that the communication is secure. Make sure that the client communicates with the server directly, without any third-party element in the communication route (Man-in-the-middle attack).

For more details, see the The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP. section.

7.5. System Commands

7.5.1. Setting the Device Label

INFO: The device label can be changed to a custom text in the TX Status tab of the LDC software.

Request and Response *#devicelabel #label*

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/LABEL/DeviceLabel
➡ body: <custom_name>

⬅ status-line: 200·OK
⬅ body: <custom_name>

The Device Label can be 49 characters long and ASCII characters are allowed. Longer names are truncated.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/LABEL/DeviceLabel
➡ body: UCXroom

⬅ status-line: 200 OK
⬅ body: UCXroom

7.5.2. Resetting the Device

The device can be restarted – the current connections will be terminated.

Request and Response *#reboot #restart*

➡ request-line: POST·https://<ip>/api/V1/SYS/DEVICES/<TX/RX>/restart

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/SYS/DEVICES/TX/restart

⬅ status-line: 200 OK

7.5.3. Restoring the Factory Default Settings

Request and Response

➡ request-line: POST·https://<ip>/api/V1/SYS/DEVICES/<TX/RX>/factoryDefaults

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/SYS/DEVICES/TX/factoryDefaults

⬅ status-line: 200 OK

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the Factory Default Settings section. *#factory*

7.5.4. Querying the Firmware Package Version

Request and Response *#firmwareversion*

➡ request-line: GET·https://<ip>/api/V1/MANAGEMENT/UID/PACKAGE/Version

⬅ status-line: 200·OK
⬅ body: <firmware_version>

Example

➡ request-line: GET https://192.168.0.100/api/V1/MANAGEMENT/UID/PACKAGE/Version

⬅ status-line: 200 OK
⬅ body: 1.0.0b2

7.5.5. Control Lock

Enable/disable the operation of the front panel buttons.

Request and Response *#lockbutton* *#buttonlock*

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/UI/ControlLock
➡ body: <lock_status>

⬅ status-line: 200·OK
⬅ body: <lock_status>

Parameters

Parameter	Parameter description	Values	Value description
<lock_status>	Front panel button locking status	**None**	**None:** all functions of the front panel button are enabled.
		locked	The front panel buttons are locked, and can be unlocked by a button combination (Control Lock).
		force locked	The front panel buttons are locked and cannot be unlocked by a button combination, only in LDC (on the TX Status tab) or using the LW3 command (or REST API).

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UI/ControlLock
➡ body: force locked

⬅ status-line: 200 OK
⬅ body: Force locked

7.5.6. Setting the Current Time

Request and Response *#time*

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/DATETIME/setTime
➡ body: <current_time>

⬅ status-line: 200·OK
⬅ body: OK

Parameters

Parameter	Value	Value Description
<current_time>	**e.g. 2026-09-06T14:47:25**	The new router time in ISO 8601 date time format.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/DATETIME/setTime
➡ body: 2026-09-06T14:47:25

⬅ status-line: 200 OK
⬅ body: OK

7.5.7. Identifying the Device

Calling the method makes the status LEDs blink for 10 seconds. The feature helps find the device physically.

Request and Response *#identifyme*

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/UI/identifyMe

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UI/identifyMe

⬅ status-line: 200 OK

7.5.8. Toggling the Dark Mode Setting

The LEDs of the device can be switched off if their light could be annoying. In Dark mode all the LEDs are switched off, except the LEDs of the RJ45 connectors (Ethernet and TPX out). *#darkmode*

Request and Response

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Enable
➜ body: <mode_state>

➜ status-line: 200 OK
➜ body: <mode_state>

Parameters

Parameter	Value	Value Description
<mode_state>	**true** or **1**	Dark mode is enabled.
	false or **0**	Dark mode is disabled.

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UI/DARKMODE/Enable
➜ body: true

➜ status-line: 200 OK
➜ body: true

7.5.9. Setting the Delay of the Dark Mode

The Dark mode can be enabled right away, or after a certain time. Thus, the mode is enabled if no buttons are pressed for a while. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. The delay time can be set with this command.

Request and Response

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Delay
➜ body: <delay_time>

➜ status-line: 200 OK
➜ body: <delay_time>

Parameters

Parameter	Value	Value Description
<delay_time>	**e.g. 60**	The delay of Dark mode activating/deactivating in seconds. Default is **60**. If the value is 0, no delay is applied and enabling/disabling Dark mode takes immediate effect.

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UI/DARKMODE/Delay
➜ body: 10

➜ status-line: 200 OK
➜ body: 10

7.5.10. Enabling Remote System Logging

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Enabled
➡ body: <status>

⬅ status-line: 200 OK
⬅ body: <status>

Parameters

Parameter	Value	Value Description
<status>	**true**	The remote system logging is enabled.
	false	The remote system logging is disabled.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/Enabled
➡ body: true

⬅ status-line: 200 OK
⬅ body: true

7.5.11. Setting the Remote Server Address

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/ServerAddress
➡ body: <server_address>

⬅ status-line: 200 OK
⬅ body: <server_address>

Parameters

Parameter	Value	Value Description
<server_address>	**e.g. mycompany.com (domain) 192.168.0.1 (IPv4)**	The server domain name (RFC1035) or IP address (IPv4) where the logs should be sent to.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/ServerAddress
➡ body: 192.168.0.1

⬅ status-line: 200 OK
⬅ body: 192.168.0.1

7.5.12. Setting the Protocol for the Remote System Logging

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Protocol
➡ body: <protocol>

⬅ status-line: 200 OK
⬅ body: <protocol>

Parameters

Parameter	Value	Value Description
<protocol>	**TCP**	The logs are forwarded using TCP protocol.
	UDP	The logs are forwarded using UDP protocol.
	TLS	The logs are forwarded using TLS protocol.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/Protocol
➡ body: TLS

⬅ status-line: 200 OK
⬅ body: TLS

7.5.13. Setting the Format of the Remote System Logging

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/SyslogFormat
➡ body: <format>

⬅ status-line: 200 OK
⬅ body: <format>

Parameters

Parameter	Value	Value Description
<format>	**RFC3164**	This is a simplified format for human readability.
	RFC5424	This is an all-encompassing format for analitical systems.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/SyslogFormat
➡ body: RFC3164

⬅ status-line: 200 OK
⬅ body: RFC3164

7.5.14. Setting the Port for Remote System Logging

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/PortNumber
➡ body: <port_number>

⬅ status-line: 200 OK
⬅ body: <port_number>

Parameters

Parameter	Value	Value Description
<port_number>	**1-65535**	The port number on the remote host to send log messages to.

INFO: The port number cannot be set to 0.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/LOG/REMOTE/PortNumber
➡ body: 6514

⬅ status-line: 200 OK
⬅ body: 6514

7.5.15. Enabling/Disabling SNMP Monitoring

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/Enabled
➡ body: <status>

⬅ status-line: 200 OK
⬅ body: <status>

Parameters

Parameter	Value	Value Description
<status>	**true**	The SNMP monitoring is enabled.
	false	The SNMP monitoring is disabled.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/Enabled
➡ body: true

⬅ status-line: 200 OK
⬅ body: true

7.5.16. Setting the Device Location

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/SysLocation
➡ body: <location>

⬅ status-line: 200 OK
⬅ body: <location>

Parameters

Parameter	Value	Value Description
<location>	**e.g. Room 306**	The physical or logical location of the device. The string might contain letters of the English alphabet (A-Z, a-z), numbers (0-9), space ( ), period (.), underscore (_) and hyphen (-).

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/SysLocation
➡ body: Room 306

⬅ status-line: 200 OK
⬅ body: Room 306

7.5.17. Setting the SNMP Authentication

This command allows setting the authentication and privacy type, as well as credentials for SNMPv3 to be able to access the device in a secure manner.

Request and Response

➡ request-line: POST https://<ip>/api/MANAGEMENT/NETWORK/SERVICES/SNMP/setPassphrases
➡ content-type: application/json
➡ body: {"auth": "<auth_pw>", "priv": "<priv_pw>", "authType": "<auth_type>", "privType": "<priv_type>"}

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Value	Value Description
<auth_pw>	**e.g. ExampleAuthPw**	Specifies the authentication passphrase. Minimum eight characters long.
<priv_pw>	**e.g. ExamplePrivPw**	Specifies the privacy passphrase. Minimum eight characters long.
<auth_type>	**SHA-512** **SHA-384** **SHA-256** **SHA-224**	Specifies the authentication type. Optional parameter. Default is **SHA-224**.
<priv_type>	**DES** **AES**	Specifies the privacy type. Optional parameter. Default is **AES**.
<standard_response>	**200 OK**	Password changed successfully.
	400 Bad Request	Password changing failed. Possible reasons: - Request is not valid JSON. - Missing content type. - Content type is not **application/json**. - Password is shorter than **8 characters**. - **authType** or **privType** does not match any of their values.
	500 Internal Error	Unexpected errors

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/setPassphrases
➡ content-type: application/json
➡ body: {"auth": "ExampleAuthPw", "priv": "ExamplePrivPw", "authType": "SHA-384", "privType": "AES"}

⬅ status-line: 200 OK
⬅ body: SNMP passwords changed

7.6. Video Port Settings - General

7.6.1. Switching the Video Input

Request and Response

➡ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/XP/switch
➡ body: <in>:<out>

⬅ status-line: 200 OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch
➡ body: I5:O1

⬅ status-line: 200 OK

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

ATTENTION: Video crosspoint has a limitation: I1 and I3-I5* ports are not available at the same time, only one of them can be selected to any output. When one of the outputs is switched to I1 or I3-I5*, the other output can not be switched to I1 or I3-I5*. In this case the switch command returns an error message.

* **I3** in case of **UCX-2x1-TPX-TX30** model and **I5** in case of **UCX-4x3-TPX-TX30** model.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/O1/ConnectedSource
⬅ body: I5
➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/O2/ConnectedSource
⬅ body: I5
➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switch
➡ body: I1:O1
⬅ header: 405 Method Not Allowed

7.6.2. Switching an Input to All Outputs

Request and Response

➡ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/XP/switchAll
➡ body: <in>

⬅ status-line: 200 OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/switchAll
➡ body: I1

⬅ status-line: 200 OK

7.6.3. Locking the Video Port

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Lock
➡ body: <locked_state>

⬅ status-line: 200 OK
⬅ body: <locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<locked_state>	Locked state	**true**	The port is locked
		false	The port is unlocked

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/Lock
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.6.4. Muting the Video Port

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Mute
➡ body: <muted_state>

⬅ status-line: 200 OK
⬅ body: <muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	**true**	The port is locked.
		false	The port is unlocked.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I2/Mute
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.6.5. Setting the Autoselect Policy

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/Policy
➡ body: <autoselect_mode>

⬅ status-line: 200 OK
⬅ body: <autoselect_mode>

Parameters

Parameter	Parameter description	Values	Value description
<autoselect_mode>	The autoselect policy	**Off**	The autoselect function is disabled.
		Last Detect	It is always the last attached input that is automatically switched to the output.
		First Detect	The first active video input is selected.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/AUTOSELECT/O2/Policy
➡ body: First detect

⬅ status-line: 200 OK
⬅ body: First detect

7.6.6. Changing the Autoselect-Included Input Ports

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Included
➡ body: <state>

⬅ status-line: 200 OK
⬅ body: <state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	The chosen input is ignored in the autoselect process or not.	**true**	The port is included in autoselect.
		false	The autoselect function ignores that port.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/AUTOSELECT/O2/I1/Included
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.6.7. Changing the Input Port Priority

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Priority
➡ body: <prio_num>

⬅ status-line: 200 OK
⬅ body: <prio_num>

Parameters

Parameter	Value	Value Description
<prio_num>	**1-100**	The priority number of the input port in relation to the output port. Equal numbers are allowed.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/AUTOSELECT/O2/I2/Priority
➡ body: 51

⬅ status-line: 200 OK
⬅ body: 51

7.6.8. Querying the Connected Source

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/ConnectedSource

⬅ status-line: 200·OK
⬅ body: <in>

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/O2/ConnectedSource

⬅ status-line: 200 OK
⬅ body: I1

7.6.9. Querying the Connected Destinations

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/XP/<in>/ConnectedDestinations

⬅ status-line: 200·OK
⬅ body: ["<out1>";"<out1>"]

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/I3/ConnectedDestinations

⬅ status-line: 200 OK
⬅ body: ["O1","O2"]

7.6.10. Querying the Input Switching Capability

Video crosspoint has a limitation: I1 or I3/I5* ports can not be selected to any output at the same time. **Busy** value of the switchable property refers to the limitation.

* **I3** in case of **UCX-2x1-TPX-TX30** model and **I5** in case of **UCX-4x3-TPX-TX30** model.

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE/<in>

⬅ status-line: 200·OK
⬅ body: <switchable_state>

Parameters

Parameter	Parameter description	Values	Value description
<switchable_state>	The chosen input is can be switched to the output or not.	**OK**	The connection of the chosen input and output is allowed.
		Busy	The chosen input can not be switched to the output.
		Locked	The chosen input can not be switched to the output, because the input is locked.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/XP/O2/SWITCHABLE/I1

⬅ status-line: 200 OK
⬅ body: Busy

7.6.11. Querying the Video Signal Presence

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/<port>/SignalPresent

⬅ status-line: 200·OK
⬅ body: <state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	This property gives a feedback about the current signal presence of the port.	**true**	The video signal is present.
		false	The video signal is not present.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/I1/SignalPresent

⬅ status-line: 200 OK
⬅ body: true

7.6.12. HDCP Setting (Input Port)

HDCP capability can be set on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the HDCP Management section.

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

Request and Response *#hdcp*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<in>/HDCP/AllowedHdcpVersion
➡ body: <allowed_hdcp>

⬅ status-line: 200 OK
⬅ body: <allowed_hdcp>

Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The input port reports the HDCP capability.	**HDCP 1.4** **HDCP 2.2** **Off**	The input port reports HDCP 1.4 capability. The input port reports HDCP 2.2 capability. The input port reports non-HDCP compliance.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/I1/HDCP/AllowedHdcpVersion
➡ body: HDCP 1.4

⬅ status-line: 200 OK
⬅ body: HDCP 1.4

7.6.13. HdcpMode

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the HDCP Management section.

Request and Response *#hdcp*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<out>/HdcpMode
➡ body: <hdcp_mode>

⬅ status-line: 200 OK
⬅ body: <hdcp_mode>

Parameters

Parameter	Parameter description	Values	Value description
<hdcp_mode>	HDCP encryption setting on the output port	**Auto**	The encryption is enabled on the output port if the signal on the input port is encrypted.
		Always	The outgoing signal is HDCP-encrypted.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/O1/HDCP/HdcpMode
➡ body: Auto

⬅ status-line: 200 OK
⬅ body: Auto

7.6.14. Querying the Embedded Audio Presence

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioPresent

⬅ status-line: 200·OK
⬅ body: <embedded_state>

Parameters

Parameter	Parameter description	Values	Value description
<embedded_state>	It shows if the video contains audio or not.	**true**	There is embedded audio in the video signal.
		false	There is no embedded audio in the video signal.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/VIDEO/I2/EmbeddedAudioPresent

⬅ status-line: 200 OK
⬅ body: true

7.6.15. Muting the Embedded Audio

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioMute
➡ body: <mute_state>

⬅ status-line: 200 OK
⬅ body: <mute_state>

Parameters

Parameter	Parameter description	Values	Value description
<mute_state>	It shows if the embedded audio is muted or not.	**true**	The embedded audio is muted.
		false	The embedded audio is unmuted.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/O1/EmbeddedAudioMute
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.6.16. Setting the Output Signal Type

Request and Response *#signaltype*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<out>/OutputSignalType
➡ body: <signal_type>

⬅ status-line: 200 OK
⬅ body: <signal_type>

Parameters

Parameter	Parameter description	Values	Value description
<signal_type>	Signal type setting	**Auto**	The outgoing signal type is HDMI.
		DVI	The outgoing signal type is DVI.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/O1/OutputSignalType
➡ body: Auto

⬅ status-line: 200 OK
⬅ body: Auto

7.6.17. Turning on Output 5V

The 5V power towards the sink can be enabled or disabled as follows:

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<out>/Output5VMode
➡ body: <5V_pwr>

⬅ status-line: 200 OK
⬅ body: <5V_pwr>

Parameters

Parameter	Parameter description	Value	Value description
<5V_pwr>	5V power towards the sink	**On**	Enable 5V power on HDMI port
		Off	Disable 5V power on HDMI port

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/O1/Output5VMode
➡ body: On

⬅ status-line: 200 OK
⬅ body: On

7.7. Welcome Screen Settings

For details about the Welcome screen feature, please see the Welcome Screen section.

7.7.1. Displaying the Welcome Screen Image

Request and Response *#welcomescreen*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/ImageEnabled
➡ body: <image_state>

⬅ status: 200 OK
⬅ body: <image_state>

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30
<image_state>		**true**	The welcome screen image is displayed.
		false	The welcome screen image is not displayed.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/I5/WELCOMESCREEN/ImageEnabled
➡ body: true

⬅ status-line: 200 OK
⬅ body: true

7.7.2. Displaying the Welcome Screen Text

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/MessageEnabled
➡ body: <text_state>

⬅ status-line: 200 OK
⬅ body: <text_state>

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30
<text_state>		**true**	The welcome screen text is displayed.
		false	The welcome screen text is not displayed.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/I5/WELCOMESCREEN/MessageEnabled
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.7.3. Setting the Welcome Screen Text

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/MessageText
➡ body: <text>

⬅ status-line: 200 OK
⬅ body: <text>

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30
<text>	Text to appear on the welcome screen		It may consist of letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), space ( ) and dot (.). Max length: 63 characters. Longer text is truncated.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/I5/WELCOMESCREEN/MessageText
➡ body: helloworld

⬅ status-line: 200 OK
⬅ body: helloworld

7.7.4. Resetting the Welcome Screen Image

This command restores the original welcome screen image.

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/resetImage

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/I5/WELCOMESCREEN/resetImage
⬅ status-line: 200 OK

7.8. Video Port Settings - USB-C Related Commands

7.8.1. Restarting the Link Training

This method is equal to pulling the USB-C connector out and plugging it in again.

Request and Response *#linktraining*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<in>/DP/restartLinkTraining

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/I1/DP/restartLinkTraining
⬅ status-line: 200 OK

7.9. CEC Command Sending

The device is able to send Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication via the HDMI cable.

ATTENTION: To have a successful CEC command processing, the connected HDMI device must support CEC. #cec

7.9.1. Simple CEC Code Sending

This command is for sending simple CEC commands to the connected sink device. In this case the <command> is sent in a CEC frame without any opcode. The command also allows sending many commands at once.

The commands can be sent by the following two formats – defined in the header:

- **text/plain**: hexa strings (as seen in the example)
- **application/octet-stream**: binary data that allows sending a file with the desired codes

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/send
➡ body: <command>·

⬅ status-line: 200 OK
⬅ body: <response>

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	**O1-O3**	Video output port number
<command> *	Two-digit-long hexa code to control the sink device	**04**	Power on
		0D	Power off
		36	Standby
		821000	Select input 1
		822000	Select input 2
		823000	Select input 3

* The supported list of <commands> depends on the connected sink device.

The <response> can be:

<response>	HTTP code	Result
ACK	200	The transmission is successful
NACK	444	The command is not accepted
Timeout	408	Timeout
Internal Error	500	Other error

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/O1/CEC/send
➡ body: 04

⬅ status-line: 200 OK
⬅ body: ACK

7.9.2. Remote Control Code Sending

This command is for sending the so-called 'push-button-commands'. There is a range within the CEC commands for this purpose, e.g. volume up/down. With this method one <command> is put between the 0x44 and 0x45 opcodes in the background.

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/sendUserControlClick
➡ body: <command>·

⬅ status-line: 200 OK
⬅ body: <response>

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	**O1-O3**	Video output port number
<command> *	Two-digit-long hexa code to control the sink device	**6D**	Power on
		6C	Power off

* The supported list of <commands> depends on the connected sink device.

The <response> can be the same as written at the previous command.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/VIDEO/O1/CEC/sendUserControlClick
➡ body: 6D

⬅ status-line: 200 OK
⬅ body: ACK

7.10. Audio Port Settings

INFO: Audio port numbers may differ depending on the model. For more information, see the Port Numbering section.

7.10.1. Switching the Audio Input

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/XP/switch
➡ body: <audio_in>:<audio_out>·

⬅ status-line: 200 OK
⬅ body: <audio_in>:<audio_out>

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	**I1-I4**	Audio input port number
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/XP/switch
➡ body: I2:O4

⬅ status-line: 200 OK
⬅ body: I2:O4

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

ATTENTION: When I3/I5* is selected for video source, the de-embedded audio of the I1 is not available, because the video crosspoint has a limitation: I1 and I3/I5* ports are not available at the same time, only one of them can be selected to any output. For more details about it, see the port diagram in the Audio Interface section.

* **I3** in case of **UCX-2x1-TPX-TX30** model and **I5** in case of **UCX-4x3-TPX-TX30** model.

7.10.2. Querying the Connected Source

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_out>/ConnectedSource

⬅ status-line: 200·OK
⬅ body: <audio_in>

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	**I1-I4**	Audio input port number
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/AUDIO/XP/O4/ConnectedSource

⬅ status-line: 200 OK
⬅ body: I2

7.10.3. Querying the Connected Destinations

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_in>/ConnectedDestinations

⬅ status-line: 200·OK
⬅ body: <audio_out>

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	**I1-I4**	Audio input port number
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/AUDIO/XP/I3/ConnectedDestinations

⬅ status-line: 200 OK
⬅ body: O4

7.10.4. Setting the Autoselect Operation Mode

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>/Policy
➡ body: <op_mode>

⬅ status-line: 200 OK
⬅ body: <op_mode>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<op_mode>	Operation mode	**Follow video**	Follows the video crosspoint state automatically.
		Off	Autoselect function is disabled.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/AUTOSELECT/O4/Policy
➡ body: Follow video

⬅ status-line: 200 OK
⬅ body: Follow video

7.10.5. Setting the Followed Video Port to Autoselect

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>/VideoFollowPort
➡ body: <out>

⬅ status-line: 200 OK
⬅ body: <out>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/AUTOSELECT/O4/VideoFollowPort
➡ body: O1

⬅ status-line: 200 OK
⬅ body: O1

7.10.6. Locking the Audio Port

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Lock
➡ body: <locked_state>

⬅ status-line: 200 OK
⬅ body: <locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	**I1-I4** **O2, O4**	Audio input port number Analog audio output port number
<locked_state>	Locked state	**true** **false**	The port is locked The port is unlocked

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/XP/I2/Lock
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.10.7. Muting the Audio Port 1.

INFO: Suspends the connection of the chosen port (no signal is forwarded).

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Mute
➡ body: <muted_state>

⬅ status-line: 200 OK
⬅ body: <muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	**I1-I4** **O2, O4**	Audio input port number Analog audio output port number
<muted_state>	Muted state	**true** **false**	The port is muted. The port is unmuted.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/XP/I2/Mute
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

INFO: All inputs and analog output ports have a mute property in the audio XP (e.g. http://<ip>/api/V1/MEDIA/AUDIO/XP/I1.Mute). Outputs have a separate mute function within the port node as well:

- https://<ip>/api/V1/MEDIA/VIDEO/XP/O1.EmbeddedAudioMute
- https://<ip>/api/V1/MEDIA/VIDEO/XP/O2.EmbeddedAudioMute
- https://<ip>/api/V1/MEDIA/AUDIO/O3.Mute

7.10.8. Muting the Audio Port 2.

INFO: The volume of the analog audio output is set to low.

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/Mute
➡ body: <muted_state>

⬅ status-line: 200 OK
⬅ body: <muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio port	**O2, O4**	Analog audio output port number
<muted_state>	Muted state	**true** **false**	The port is muted. The port is unmuted.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/O4/Mute
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.10.9. Querying the Audio Signal Presence

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/AUDIO/<audio_port>/SignalPresent

⬅ status-line: 200·OK
⬅ body: <signal_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	**I1-I4** **O2, O4**	Audio input port number Audio output port number
<signal_state>	Signal presence	**true** **false**	The audio signal is present. No audio signal is present.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/AUDIO/I1/SignalPresent

⬅ status-line: 200 OK
⬅ body: false

7.10.10. Analog Audio Output Volume (dB) Setting

Request and Response *#analogaudio #volume*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/VolumedB
➡ body: <level>

⬅ status-line: 200 OK
⬅ body: <level>

Parameter

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<level>	Sets the output volume (attenuation) in step of -0.375 dB.	**-95.62 dB-0 dB**	The value is rounded up if necessary, to match with the step value.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/O4/VolumedB
➡ body: -15

⬅ status-line: 200 OK
⬅ body: -15

7.10.11. Analog Audio Output Volume Percent Setting

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/VolumePercent
➡ body: <percent>

⬅ status-line: 200 OK
⬅ body: <percent>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<percent>	Sets the output volume (attenuation) in step of 1%.	**100%-0%**	The value is rounded up if necessary, to match with the step value.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/O4/VolumePercent
➡ body: 50

⬅ status-line: 200 OK
⬅ body: 50

7.10.12. Setting the Balance

Request and Response *#balance*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/Balance
➡ body: <level>

⬅ status-line: 200 OK
⬅ body: <level>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<level>	Sets the output volume (attenuation) in step of 1.	**-100-100**	-100 means left balance, 100 means right balance, center is 0 (default).

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/O4/Balance
➡ body: 0

⬅ status-line: 200 OK
⬅ body: 0

7.10.13. Analog Audio Output Level Setting by Steps (dB)

Request and Response *#analogaudio #volume*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/stepVolumedB
➡ body: <step>

⬅ status-line: 200 OK
⬅ body: <step>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<step>	The volume is increased or decreased with the given value in dB.		Increase the dB with +<number> Decrease the dB with -<number>

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/AUDIO/O4/stepVolumedB
➡ body: -1

⬅ status-line: 200 OK
⬅ body: OK

The volume is decreased with 1 dB, the current volume is -1.95 dB, which means 77.84% in percent.

7.10.14. Analog Audio Output Level Setting by Steps in Percent

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/stepVolumePercent
➡ body: <step>

⬅ status-line: 200 OK
⬅ body: <step>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<step>	The volume is increased or decreased with the given value in percent.	**0-100**	

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/O4/stepVolumePercent
➡ body: 5

⬅ status-line: 200 OK
⬅ body: OK

7.10.15. Analog Audio Output Balance Setting by Steps

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/stepBalance
➡ body: <step>

⬅ status-line: 200 OK
⬅ body: <step>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<step>	The volume is increased or decreased with the given value.		Increase the volume with <number> Decrease the volume with -<number>

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/AUDIO/O4/stepBalance
➡ body: 5

⬅ status-line: 200 OK
⬅ body: OK

7.11. USB Port Settings

INFO: USB port numbers may differ depending on the model. For more information, see the Port Numbering section.

7.11.1. Switching the USB Input

Request and Response *#usb*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/XP/switch/<host>/H1
➡ body: <host>:H1

⬅ status-line: 200 OK
⬅ body: <host>:H1

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**0** **U1-U4**	Disconnected USB-C and USB-B port number

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/XP/switch
➡ body: U1:H1

⬅ status-line: 200 OK
⬅ body: OK

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

7.11.2. Querying the Connected Source

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/XP/H1/ConnectedSource

⬅ status-line: 200·OK
⬅ body: <host>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number

Example

➡ request-line: GET http://192.168.0.100/api/V1/MEDIA/USB/XP/H1/ConnectedSource

⬅ status-line: 200 OK
⬅ body: U4

7.11.3. Querying the Connected Destinations

Request and Response *#autoselect*

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/XP/<host>/ConnectedDestinations

⬅ status-line: 200·OK
⬅ body: <host>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number

Example

➡ request-line: GET http://192.168.0.100/api/V1/MEDIA/USB/XP/U3/ConnectedDestinations

⬅ status-line: 200 OK
⬅ body: H1

7.11.4. Locking the USB Port

Request and Response *#lock*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/XP/<usb_port>/Lock
➡ body: <locked_state>

⬅ status-line: 200 OK
⬅ body: <locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<usb_port>	USB Port	**U1-U4** **H1**	USB-C and USB-B port number USB hub
<locked_state>	Locked state	**true** **false**	The port is locked The port is unlocked

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/XP/U2/Lock
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.11.5. Setting the 5V Sending to the USB Peripherals

The 5V power towards the USB A-type ports can be enabled or disabled as follows:

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/H1/<device_id>/Power5VMode
➡ body: <device_pwr>

⬅ status-line: 200 OK
⬅ body: <device_pwr>

Parameters

Parameter	Parameter description	Values	Value description
<device_id>	USB A-type and USB C-type downstream port	**D1-D4**	Downstream port number
<device_pwr>	5V power sending	**Auto**	The host controls the 5V power sending.
		Off	Disable 5V power on USB downstream port

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/H1/D1/Power5VMode
➡ body: Auto

⬅ status-line: 200 OK
⬅ body: Auto

7.11.6. Setting the USB Autoselect Policy

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/Policy
➡ body: <op_mode>

⬅ status-line: 200 OK
⬅ body: <op_mode>

Parameters

Parameter	Parameter description	Values	Value description
<op_mode>	Operation mode	**Off**	The autoselect function is disabled.
		Last Detect	It is always the last attached input that is automatically switched to the output.
		First Detect	The first active USB input is selected.
		Follow video	Follows the video crosspoint state automatically.

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/AUTOSELECT/H1/Policy
➡ body: Follow video

⬅ status-line: 200 OK
⬅ body: Follow video

7.11.7. Setting the Followed Video Port to Autoselect

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/VideoFollowPort
➡ body: <out>

⬅ status-line: 200 OK
⬅ body: <out>

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/AUTOSELECT/H1/VideoFollowPort
➡ body: O1

⬅ status-line: 200 OK
⬅ body: O1

7.11.8. Changing the Autoselect Included USB Ports

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/<host>/Included
➡ body: <state>

⬅ status-line: 200 OK
⬅ body: <state>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number
<state>	The chosen input is ignored from the autoselect process or not.	**true**	The port is included in autoselect.
		false	The autoselect function ignores that port.

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/AUTOSELECT/H1/U1/Included
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.11.9. Changing the USB Port Priority

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/<host>/Priority
➡ body: <prio_num>

⬅ status-line: 200 OK
⬅ body: <prio_num>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number
<prio_num>	Priority number from 1 to 100, equal numbers are allowed.	**1-100**	1: the highest priority 100: the lowest priority

Example

➡ request-line: POST http://192.168.0.100/api/V1/MEDIA/USB/AUTOSELECT/H1/U1/Priority
➡ body: 51

⬅ status-line: 200 OK
⬅ body: 51

7.12. USB Port Settings - USB-C Related Commands

INFO: USB-C port numbers may differ depending on the model. For more information, see the Port Numbering section.

7.12.1. Setting the USB-C Power

Allows setting the supplied power over the USB-C ports. Default is 100W.

Request and Response *#power*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/POWER/Reserved
➡ body: <power>

⬅ status-line: 200 OK
⬅ body: <power>

Parameters

Parameter	Parameter description	Values	Value description
<power>	Reserved power to the USB-C port	**15W**	Minimum supplied power if **AllocationMode** is **Auto**. If **AllocationMode** is **Static**, this is the maximum supplied power.
		30W	Minimum supplied power if **AllocationMode** is **Auto**. If **AllocationMode** is **Static**, this is the maximum supplied power.
		60W	Minimum supplied power if **AllocationMode** is **Auto**. If **AllocationMode** is **Static**, this is the maximum supplied power.
		100W	Minimum supplied power if **AllocationMode** is **Auto**. If **AllocationMode** is **Static**, this is the maximum supplied power.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/USB/U1/POWER/Reserved
➡ body: 100W

⬅ status-line: 200 OK
⬅ body: 100W

7.12.2. Setting the Displayport Alternate Mode Policy

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/DpAltModePolicy
➡ body: <dp_policy>

⬅ status-line: 200 OK
⬅ body: <dp_policy>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<dp_policy>	The preferred video or USB data transmission	**Auto**	**Auto:** Taurus offers both operation modes described below. A BYOD device can choose between the two. 4 lane DP Alt mode operation (4K@60) is not guaranteed.
		Force C	It means 4 Lane Video setting.
		Force D	It means 2 Lane Video setting. It is used in case the 4 Lane mode is not supported.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/USB/U2/DpAltModePolicy
➡ body: Auto

⬅ status-line: 200 OK
⬅ body: Auto

ATTENTION: Changing DpAltModePolicy is recommended before connecting a computer to the input.

7.12.3. Querying the Host Alternate Mode Support

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/HostSupportsDpAltMode

⬅ status-line: 200·OK
⬅ body: <altmode_support>

Parameters

Parameter	Parameter description	Value	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<altmode_support>		**False**	The host does not support the alternate mode.
		True	The host supports the alternate mode.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/USB/U1/HostSupportsDpAltMode

⬅ status-line: 200 OK
⬅ body: true

7.12.4. Querying the Status of the Alternate Mode

Request and Response *#dpaltmode #alternatemode #displayportalternatemode*

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/ActiveAltMode

⬅ status-line: 200·OK
⬅ body: <altmode_state>

Parameters

Parameter	Parameter description	Value	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<altmode_state>		**N/A**	The host is not connected
		None	DP Alt mode is not active
		DP	DP Alt mode is active.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/USB/U2/ActiveAltMode

⬅ status-line: 200 OK
⬅ body: DP

7.12.5. Querying the Port Data Role

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/ActivePortDataRole

⬅ status-line: 200·OK
⬅ body: <data_role>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<data_role>		**N/A**	No information about the data role.
		DFP	Downstream Facing Port (usually a Host / HUB ports) The port data role is configured as USB Host. This is for building up the connection (USB data transmission operates after the data role swap)
		UFP	Upstream Facing Port (usually a device)

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/USB/U2/ActivePortDataRole

⬅ status-line: 200 OK
⬅ body: UFP

7.12.6. Querying the Port Power Role

Request and Response *#power*

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/ActivePortPowerRole

⬅ status-line: 200·OK
⬅ body: <power_role>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<power_role>		**N/A**	No information about the power role.
		Sink	The port is configured as a sink.
		Source	The port is configured as a source

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/USB/U2/ActivePortPowerRole

⬅ status-line: 200 OK
⬅ body: Source

7.12.7. Setting the Port Power Role

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/PortPowerRoleSetting
➡ body: <power_role>

⬅ status-line: 200 OK
⬅ body: <power_role>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<power_role>		**Sink**	The port is configured as a sink.
		Source	The port is configured as a source.
		Dual Role	The port is configured to be in Dual Power Role mode.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/USB/U1/PortPowerRoleSetting
➡ body: Dual Role

⬅ status-line: 200 OK
⬅ body: Dual Role

7.13. EDID Management

7.13.1. Querying the Emulated EDIDs

Request and Response *#edid*

➡ request-line: GET·https://<ip>/api/V1/EDID/EdidStatus

⬅ status-line: 200·OK
⬅ body: ["<source>:E1";"<source>:E2";" <source>:E3;""<source>:E4"]

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs

Example

➡ request-line: GET https://192.168.0.100/api/V1/EDID/EdidStatus

⬅ status-line: 200 OK
⬅ body: ["F47:E1","F47:E2","F47:E3","F47:E4"]

Emulated EDID memory for input port is listed with the EDID number that is currently emulated on the input.

7.13.2. Querying the Validity of a Dynamic EDID

Request and Response

➡ request-line: GET·https://<ip>/api/V1/EDID/D/<dynamic_edid>/Validity

⬅ status-line: 200·OK
⬅ body: <validity>

Parameters

Parameter	Parameter description	Values	Value description
<dynamic_edid>	The Dynamic EDID to be queried	**D1-D3**	Dynamic EDIDs
<validity>	Validity of a Dynamic EDID	**true**	The Dynamic EDID is valid.
		false	The Dynamic EDID is invalid.

Example

➡ request-line: GET https://192.168.0.100/api/V1/EDID/D/D1/Validity

⬅ status-line: 200 OK
⬅ body: true

The 'Validity' property is true, valid EDID is stored in D1 memory place.

7.13.3. Querying the Preferred Resolution of a User EDID

Request and Response

➡ request-line: GET·https://<ip>/api/V1/EDID/U/<user_edid>/PreferredResolution

⬅ status-line: 200·OK
⬅ body: <preferred_resolution>

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The desired User EDID memory	**U1-U100**	User EDIDs

Example

➡ request-line: GET https://192.168.0.100/api/V1/EDID/U/U2/PreferredResolution

⬅ status-line: 200 OK
⬅ body: 1920x1080p60.00Hz

INFO: Use the **Manufacturer** and **MonitorName** properties to query further information.

7.13.4. Emulating an EDID to an Input Port

Request and Response

➡ request-line: POST·https://<ip>/api/V1/EDID/switch
➡ body: <source>:<destination>

⬅ status-line: 200 OK
⬅ body: <source>:<destination>

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs
<destination>	The emulated EDID memory of the desired input port	**E1-E4**	Emulated EDIDs

Example

➡ request-line: POST https://192.168.0.100/api/V1/EDID/switch
➡ body: F49:E2

⬅ status-line: 200 OK
⬅ body: OK

7.13.5. Emulating an EDID to All Input Ports

Request and Response

➡ request-line: POST·https://<ip>/api/V1/EDID/switchAll
➡ body: <source>

⬅ status-line: 200 OK
⬅ body: OK

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs

Example

➡ request-line: POST https://192.168.0.100/api/V1/EDID/switchAll
➡ body: F47

⬅ status-line: 200 OK
⬅ body: OK

7.13.6. Copying an EDID to User Memory

Request and Response

➡ request-line: POST·https://<ip>/api/V1/EDID/copy
➡ body: <source>:<destination>

⬅ status-line: 200 OK
⬅ body: OK

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs
<destination>	The User EDID spot you wish to copy the EDID to	**U1-U100**	User EDIDs

Example

➡ request-line: POST https://192.168.0.100/api/V1/EDID/copy
➡ body: F1:U2

⬅ status-line: 200 OK
⬅ body: OK

7.13.7. Deleting an EDID from User Memory

Request and Response

➡ request-line: POST·https://<ip>/api/V1/EDID/delete
➡ body: <user_edid>

⬅ status-line: 200 OK
⬅ body: OK

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The User EDID spot you wish to delete an EDID from	**U1-U100**	User EDIDs

Example

➡ request-line: POST https://192.168.0.100/api/V1/EDID/delete
➡ body: U2

⬅ status-line: 200 OK
⬅ body: OK

7.13.8. Resetting the Emulated EDIDs

Request and Response

➜ request-line: POST·https://<ip>/api/V1/EDID/reset

INFO: The body has to be empty, and the content type should be text/plain.

➜ status-line: 200 OK
➜ body: OK

Example

➜ request-line: POST https://192.168.0.100/api/V1/EDID/reset

➜ status-line: 200 OK
➜ body: OK

Calling this method switches all emulated EDIDs to a factory default one. See the table in the Factory EDID List section.

7.14. Ethernet Port Configuration

7.14.1. Setting the DHCP State

ATTENTION: When you change a network property, the new value is stored, but the **applySettings** method must always be called to apply the new settings. When two or more network parameters are changed, the **applySettings** method is enough to be called once as a final step.

Request and Response *#dhcp #network #ipaddress*

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/DhcpEnabled
➜ body: <dhcp_status>

➜ status-line: 200 OK
➜ body: <dhcp_status>

Parameters

Parameter	Parameter description	Value	Value description
<dhcp_status>		**False**	The IP address setting is static.
		True	The IP address setting is DHCP.

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/DhcpEnabled
➜ body: true

➜ status-line: 200 OK
➜ body: true

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings

➜ status-line: 200 OK
➜ body: OK

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the GET Method.

7.14.2. Changing the IP Address (Static)

Request and Response

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
➜ body: <IP_address>

➜ status-line: 200 OK
➜ body: <IP_address>

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
➜ body: 192.168.0.110

➜ status-line: 200 OK
➜ body: 192.168.0.110

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings

➜ status-line: 200 OK
➜ body: OK

INFO: The **applySettings** method saves and applies the new value and it will reboot the device.

INFO: The current setting can be queried by using the GET Method.

7.14.3. Changing the Subnet Mask (Static)

Request and Response *#ipaddress*

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
➜ body: <netmask>

⬅ status-line: 200 OK
⬅ body: <netmask>

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
➜ body: 255.255.255.0

⬅ status-line: 200 OK
⬅ body: 255.255.255.0

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings

⬅ status-line: 200 OK
⬅ body: OK

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the GET Method.

7.14.4. Changing the Gateway Address (Static)

Request and Response

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
➜ body: <gw_address>

⬅ status-line: 200 OK
⬅ body: <gw_address>

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
➜ body: 192.168.0.1

⬅ status-line: 200 OK
⬅ body: 192.168.0.1

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings

⬅ status-line: 200 OK
⬅ body: OK

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the GET Method.

7.14.5. Applying the Network Settings

Request and Response

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/applySettings

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK
⬅ body: OK

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/applySettings

⬅ status-line: 200 OK
⬅ body: OK

All network settings that were changed are applied and network interface restarts.

7.14.6. Setting the Hostname

The host name is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding the device in the Device Discovery window of the LDC, see more details in the Add New Favorite Device section. Furthermore, it can be used to open the The Built-in Miniweb. If the IP address of the device is changing, the host name can be used as a fixed property.

After hostname changing, restarting the network services is required. New SSL certificate will be generated.

Request and Response

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/HostName
➜ body: <unique_name>

⬅ status-line: 200 OK
⬅ body: <unique_name>

Parameters

Parameter	Value Description
<unique_name>	The name can be 1-64 character(s) long and the following are allowed when naming: the elements of the English alphabet (a-z, A-Z) and numbers (0-9); hyphen (-) and dot (.) are also accepted, except as a last character.

Example

➜ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/HostName
➜ body: room-switcher

⬅ status-line: 200 OK
⬅ body: room-switcher

7.15. Network Security

7.15.1. Enabling/Disabling the Ethernet Port

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/ETHERNET/<ethernet_port>/Enabled
➡ body: <status>

⬅ status-line: 200 OK
⬅ body: <status>

Parameters

Identifier	Parameter description	Parameter values
<ethernet_port>	Ethernet port number	**P1-P7***
<status>	The port is disabled.	**false**
	The port is enabled.	**true**

*The UCX-2x1-TPX-TX30 model has four Ethernet ports, plus it can control the two Ethernet ports of the HDMI-UCX-TPX-RX107 (P1-P6).

Example

➡ request-line:POST https://192.168.0.100/api/V1/MEDIA/ETHERNET/P4/Enabled
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.15.2. Querying the Network Service Port Number

Request and Response *#http #https*

➡ request-line: GET·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Port

⬅ status-line: 200·OK
⬅ body: <port_num>

Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	**HTTP / HTTPS / LW3 / SERIAL1 / SERIAL2**
<port_num>	Port number	**80 / 443 / 6107 / 8001 / 8002**

Example

➡ request-line: GET https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/Port

⬅ status-line: 200 OK
⬅ body: 80

7.15.3. Enabling/Disabling the Network Service Port

INFO: HTTP port is disabled by default.

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Enabled
➡ body: <status>

⬅ status-line: 200 OK
⬅ body: <status>

Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	**HTTP / HTTPS**
<status>	The port is enabled.	**true**
	The port is disabled.	**false**

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/Enabled
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.15.4. Querying the Username for Authentication

INFO: UCX series deal with one user for authentication and the username (admin) can not be changed.

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name

⬅ status-line: 200·OK
⬅ body: admin

Example

➡ request-line: GET http://192.168.0.100/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name

⬅ status-line: 200 OK
⬅ body: admin

7.15.5. Setting a Password for Authentication

ATTENTION: The minimum character requirement for the password is 10 characters, and it can contain any UTF-8 character.

INFO: Due to security reasons, the password is not stored in any property, so it can not be queried.

A random-generated factory default password is applied to the device during the manufacturing process. Authentication is enabled by default.

Request and Response *#password*

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword
➡ body: <password>
⬅ status-line: 200 OK
⬅ body: <password>

Parameters

Identifier	Parameter description	Value description
<password>	User defined password for authentication.	min. character length: 10 max. character length: 100 accepted characters: UTF-8 characters

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword
➡ body: #password12
⬅ status-line: 200 OK
⬅ body: #password12

7.15.6. Enabling the Authentication

INFO: Authentication is enabled by default.

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/AuthenticationEnabled
➡ body: <status>
⬅ status-line: 200 OK
⬅ body: <status>

Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	**HTTP / HTTPS**
<status>	Authentication enabled	**true**
	Authentication disabled	**false**

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/AuthenticationEnabled
➡ body: false
⬅ status-line: 200 OK
⬅ body: false

7.15.7. Setting the VLAN Preset

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/ETHERNET/VlanPreset
➡ body: <vlan_preset>

⬅ status-line: 200 OK
⬅ body: <vlan_preset>

Parameters

Parameter	Parameter description	Values	Value description
<vlan_preset>	The available VLAN presets	**Transparent**	Transparent VLAN is enabled, all Ethernet ports are connected.
		Dedicated	Dedicated VLAN is enabled, there are several different VLAN networks active.
		SeparatedBYOD	Separated BYOD VLAN is enabled, the BYOD network is separated from the corporate and Management networks.

Example

➡ request-line: POST https://192.168.0.100/V1/MEDIA/ETHERNET/VlanPreset
➡ body: Dedicated

⬅ status-line: 200 OK
⬅ bod: Dedicated

7.15.8. Setting the VLAN ID

You can create separate networks by setting different VLAN IDs for the Ethernet ports. You can create any number of setups for limiting access to the corporate or management network or providing separate networks for each user. Default VLAN ID is 1 for all of the ports.

INFO: VLAN ID 1000 is reserved for the Management network.

INFO: VLAN membership can be set on HDMI-UCX-TPX-RX107 models as well through connection to the TX device.

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
➡ body: <vlan_id>

⬅ status-line: 200 OK
⬅ body: <vlan_id>

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/ETHERNET/P1/VlanMembership
➡ body: 2

⬅ status-line: 200 OK
⬅ body: 2

Enabling the Management Network on an Ethernet Port

Request and Response

➡ request-line: POST https://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
➡ body: 1000

⬅ status-line: 200 OK
⬅ body: 1000

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/ETHERNET/P1/VlanMembership
➡ body: 1000

⬅ status-line: 200 OK
⬅ body: 1000

7.15.9. Setting up the Static IP Address for Management Network

In case there is no DHCP server on the Corporate/Management network, a static IP address is needed to be set before enabling the function, so that it remains available.

Request and Response

➡ request-line: POST https://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredIpAddress
➡ body: <static_management_ip>

⬅ status-line: 200 OK
⬅ body: <static_management_ip>

Example

➡ request-line: POST https://192.168.0.100/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredIpAddress
➡ body: 10.10.128.34

⬅ status-line: 200 OK
⬅ body: 10.10.128.34

7.15.10. Setting Up Gateway for Static IP on Management Network

Request and Response

➡ request-line: POST https://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredGatewayAddress
➡ body: <static_management_gateway>

⬅ status-line: 200 OK
⬅ body: <static_management_gateway>

Example

➡ request-line: POST https://192.168.0.100/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredGatewayAddress
➡ body: 10.10.128.1

⬅ status-line: 200 OK
⬅ body: 10.10.128.1

7.16. Serial Port Configuration

INFO: Port numbering can be found in the Port Numbering section.

7.16.1. BAUD Rate Setting

Request and Response *#rs-232 #rs232*

➡ request-line: POST https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/Baudrate
➡ body: <baudrate>

⬅ status-line: 200 OK
⬅ body: <baudrate>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<baudrate>	Baud rate value	**9600** **19200** **38400** **57600** **115200**

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/Baudrate
➡ body: 19200

⬅ status-line: 200 OK
⬅ body: 19200

7.16.2. Stop Bits Setting

Request and Response *#rs232 #rs-232 #serial*

➡ request-line: POST https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/StopBits
➡ body: <stopbits>

⬅ status-line: 200 OK
⬅ body: <stopbits>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<stopbits>	Stop bit value	**1** **2**

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/StopBits
➡ body: 1

⬅ status-line: 200 OK
⬅ body: 1

7.16.3. Querying the Data Bits

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/DataBits

⬅ status-line: 200·OK
⬅ body: <databits>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<databits>	DataBits value	**8** **9**

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/DataBits

⬅ status-line: 200 OK
⬅ body: 8

7.16.4. Parity Setting

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/Parity
➡ body: <parity>

⬅ status-line: 200 OK
⬅ body: <parity>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<parity>	Parity value	**None** **Odd** **Even**

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/Parity
➡ body: None

⬅ status-line: 200 OK
⬅ body: None

7.16.5. Querying the Serial over IP Port Number

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/SERIALOVERIP/Port

⬅ status-line: 200·OK
⬅ body: <port_nr>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2; 1**
<port_nr>	Serial over IP port number	**8001** **8002**

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Port

⬅ status-line: 200 OK
⬅ body: 8001

7.16.6. Enabling the Serial over IP Port

Request and Response *#rs232 #rs-232 #serial*

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/SERIALOVERIP/Enabled
➡ body: <state>

⬅ status-line: 200 OK
⬅ body: <state>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2; 1**
<state>		**true** **false**

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Enabled
➡ body: false

⬅ status-line: 200 OK
⬅ body: false

7.17. Serial Port Messaging

7.17.1. Sending a Message via RS-232

ATTENTION: Serial message sending is implemented only via Lightware REST API. This function is not available with LW3 protocol command. #message

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/send
➡ body: <message>

⬅ status-line: 200 OK

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2; 1**
<message>	Serial message	Any format is acceptable (text, binary, hexadecimal etc.), maximum message size is 100K. Escaping is unnecessary.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/SERIAL/P1/send
➡ body: PWR0

⬅ status-line: 200 OK

The 'PWR0' message is sent out via the P1 serial port.

INFO: Taurus can receive a serial message in a special way. When a message is sent from the Taurus, the response from the connected device is accepted within 100 ms. The communication is closed after that time interval.

7.18. GPIO Port Configuration

7.18.1. Setting the Direction of a GPIO Pin

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/Direction
➡ body: <dir>

⬅ status-line: 200 OK
⬅ body: <dir>

Parameters

Parameter	Parameter description	Value	Value description
<dir>	The direction of the GPIO pin.	**Input**	input
		Output	output

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/GPIO/P1/Direction
➡ body: Input

⬅ status-line: 200 OK
⬅ body: Input

7.18.2. Setting the Output Level of a GPIO Pin

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/Output
➡ body: <state>

⬅ status-line: 200 OK
⬅ body: <state>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	**High**	high level
		Low	low level

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/GPIO/P1/Output
➡ body: High

⬅ status-line: 200 OK
⬅ body: High

7.18.3. Setting the Output Level for a Specified Time

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/interval
➡ body: <value>;<time>

⬅ status-line: 200 OK
⬅ body: <value>;<time>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	**High**	high level
		Low	low level
<time>	Duration of the desired value in seconds.	**1-120**	second(s)

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/GPIO/P1/interval
➡ body: Low;1

⬅ status-line: 200 OK
⬅ body: OK

7.18.4. Toggling the Level of a GPIO Pin

The output level can be changed from high to low and from low to high with the command below.

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/toggle

INFO: The body has to be empty, and the content type should be text/plain.

⬅ status-line: 200 OK
⬅ body: OK

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/GPIO/P1/toggle

⬅ status-line: 200 OK
⬅ body: OK

7.19. OCS Port Configuration

DIFFERENCE: The UCX-4x3-TPX-TX30 and UCX-2x1-TPX-TX30 transmitters do not have an OCS port, however they can control the OCS port of the HDMI-UCX-TPX-RX107 receiver.

7.19.1. Querying the Input Level of an OCS Pin

Request and Response *#ocs*

➡ request-line: GET·https://<ip>/api/V1/MEDIA/OCS/P1/InputLevel

⬅ status-line: 200·OK
⬅ body: <value>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The input value of the OCS pin.	**High**	high level
		Low	low level

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/OCS/P1/InputLevel

⬅ status-line: 200 OK
⬅ body: Low

7.19.2. Setting the Sensor Type

Request and Response

➡ request-line: POST·https://<ip>/api/V1/MEDIA/OCS/P1/SensorType
➡ body: <sensor_type>

⬅ status-line: 200 OK
⬅ body: <sensor_type>

Parameters

Parameter	Parameter description	Value	Value description
<sensor_type>	It defines whether the low or high input level means the occupancy.	**Active low**	Occupancy status is 'Occupied' when the input level is low.
		Active high	Occupancy status is 'Occupied' when the input level is high (default value).

Example

➡ request-line: POST https://192.168.0.100/api/V1/MEDIA/OCS/P1/SensorType
➡ body: Active low

⬅ status-line: 200 OK
⬅ body: Active low

7.19.3. Querying the Reported OCS State

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MEDIA/OCS/P1/State

⬅ status-line: 200·OK
⬅ body: <status>

Parameters

Parameter	Parameter description	Value	Value description
<status>	It reports the occupancy state of the room depending on the sensor type.	**Free**	When the SensorType=Active high and the Inputlevel=Low or when SensorType=Active low and Inputlevel=High
		Occupied	When the SensorType=Active high and the Inputlevel=High or when SensorType=Active low and Inputlevel=Low

Example

➡ request-line: GET https://192.168.0.100/api/V1/MEDIA/OCS/P1/State

⬅ status-line: 200 OK
⬅ body: Free

7.20. Updating the Device via REST API

7.20.1. Querying the Update REST API Version

Request and Response

➡ request-line: GET·https://<ip>/api/V1/MANAGEMENT/UPDATE/Version

⬅ status-line: <standard_response>
⬅ body: <major>.<minor>

Parameters

Parameter	Parameter description	Values	Value description
<ip>	The IP address of the device separated with dots.		e.g.: 192.168.0.100
<standard_response>	Standard HTTP response	**200 OK**	The request has succeeded.
		400 Bad request	The request cannot be processed.
<major>	REST API major version number		
<minor>	REST API minor version number		


Example

➡ request-line: GET https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/Version

⬅ status-line: 200 OK
⬅ body: 1.1

7.20.2. The Updating Process

The API allows the device to update itself with an **LFP2** FW package. This new approach means there is no need to run a software on the connected PC (in case of LDU2) for updating the Lightware device.

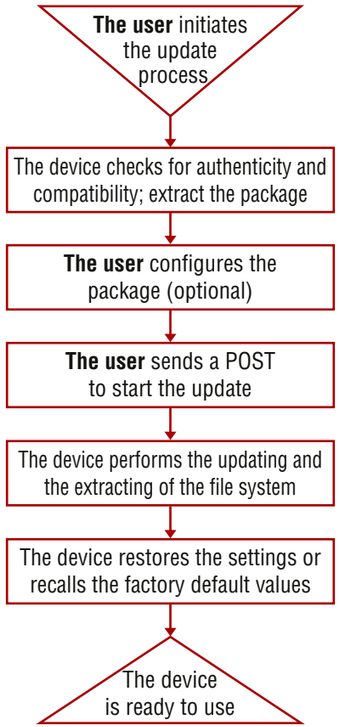

The Updating Process

The Updating Steps

1. The **User uploads the package** to a dedicated URL.
   - The package is being unpacked during the uploading process.
   - The package is checked by the device to see if they are compatible with each other.
2. The **User can set the uploaded package**.
   - The factory default settings can be recalled (this is the default setting of the package) or the current settings of the device can be restored (optional).
3. The **User starts the self-updating process** by sending a POST method.
   - The device performs the operations in connection with the update (e.g. file system replacement).
   - The device restores the previous settings to the new system, if it was set to.
4. The device is ready to use.

7.20.3. Uploading the Package

This step may take up to one or two minutes to finish as the size of the LFP2 package is approx. 100-150 MB (depends on the device and FW version).

Request and Response

➡ request-line: POST·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/Package
➡ body: <LFP2 file>
➡ content-type: application/octet-stream

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	**200 OK**	<message>: **OK** The request has succeeded; the whole package is extracted and the basic checks are done.
		400 Bad request	<message>: **Package incompatible: Incompatible partnumber: [...]** The request cannot be processed; error during the uploading/checking. e.g. the package is not compatible with the device. The <message> is in text/plain format.
		500 Internal Server Error	<message>: **Socket timeout** The package uploading was not successful. Please try it again.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/Package
➡ body: (the LFP2 file)

⬅ status-line: 200 OK
⬅ body: OK

7.20.4. Configuration Parameters – Keep the Current Settings

This is an **optional step** that allows keeping the current settings of the device. The **default setting** of an update is to **recall the factory default** values. If you want to keep the current settings of the device, delete the **'dofactoryreset'** file from the uploaded package as follows:

Request and Response

➡ request-line: DELETE·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	**200 OK**	"Deleted"
		405 Method not allowed	LFP2 package was not uploaded to the device.
		500 Internal Server Error	The file does not exist in the uploaded package (e.g. it was deleted previously). Continue the update process.

Example

➡ request-line: DELETE https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset

⬅ status-line: 200 OK
⬅ body: Deleted

7.20.5. Configuration Parameters - Setting "Soft" Factory Reset

It is possible to call a soft factory reset on a device, which will restore most factory default settings, **except for example the login credentials (password)**.

INFO: "Soft" factory reset and factory reset settings are mutually exclusive. Only one of them can be active at a time. Calling one command will cancel the other one.

This node only appears when an LFP2 package is already uploaded to the device. To upload a package, see the Uploading the Package section.

INFO: This setting is only active until the update is performed. If needed, it must be set again during the following updates.

Request and Response

➡ request-line: POST·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset
➡ body: <softreset_specifier>
➡ content-type: application/json

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<softreset_specifier>	The configuration to enable soft reset	{ "preserve": ["userConfig"] }	
<standard_response>	Standard HTTP response	**201 Created**	Soft factory reset is enabled
		500 Internal Server Error	Uploading the configuration was not successful.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset
➡ body:
```
{
  "preserve": [
    "userConfig"
  ]
}
```
➡ content-type: application/json

⬅ status-line: 201 Created
⬅ body: <message>

7.20.6. Configuration Parameters - Querying Factory Reset Setting

This command shows the configuration set for the next update.

Request and Response

➡ request-line: GET·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset

⬅ status-line: <standard_response>
⬅ body: <softreset_specifier>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<softreset_specifier>	The configuration to enable soft reset	**{ "preserve": ["userConfig"] }**	
<standard_response>	Standard HTTP response	**200 OK**	Soft factory reset configuration is set
		404 Not Found	No soft reset was configured
		500 Internal Server Error	The file does not exist in the uploaded package (e.g. it was deleted previously). Continue the update process.
		503 Service Unavailable	No update package has been uploaded.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset

⬅ status-line: 200 OK
⬅ body:
```
{
  "preserve": [
    "userConfig"
  ]
}
```

7.20.7. Configuration Parameters - Deleting "Soft" Factory Reset

This commands deletes the soft factory reset configuration if it has been set.

Request and Response

➡ request-line: DELETE·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	**200 OK**	"Deleted"
		500 Internal Server Error	Error happened.

Example

➡ request-line: DELETE https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset

⬅ status-line: 200 OK
⬅ body: Deleted

7.20.8. Executing the Update

The command is for installing the uploaded package in place of the current system. This step may take up to 7 minutes.

Request and Response

➡ request-line: POST·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/update
➡ body: <payload>
➡ content-type: text/plain

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<payload>	optional	**force**	The update can be forced to run in **Package incompatible** error state, but the security check cannot be bypassed (**Package untrusted** state).
<standard_response>	Standard HTTP response	**200 OK**	The request has succeeded; the update process finished successfully.
		400 Bad request	The request cannot be processed. it may happen that the uploaded package is not compatible with the device (**Package incompatible** error state) and the **force** payload was **not** used.

ATTENTION: Please note that running a **forced update** can make the device inoperable.

Example

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/update

⬅ status-line: 200 OK
⬅ body: OK

When the *'force'* payload is used:

➡ request-line: POST https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/update
➡ body: force
➡ content-type: RAW (JSON)

⬅ status-line: 200 OK
⬅ body: OK

7.20.9. Querying the State of the Updating Process

This command is for querying the current state of the updating process.

Request and Response

➡ request-line: GET·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/Status

⬅ status-line: <standard_response>
⬅ body: <message>

Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.100, myDevice
<standard_response>	Standard HTTP response	**200 OK**	The request has succeeded. <message> states: **Idle**: not active, update has not started yet. **Package uploading**: updating and checking is in progress. **Package ready**: uploading is done, checking is successful.
		400 Bad Request	The request cannot be processed. <message> states: **Package incompatible**: the uploaded package is not compatible with the device. **Package untrusted**: the uploaded package is not secure. **Failed**: the update is not successful.

INFO: Please note that while the new firmware is being programmed in the device, it cannot send a response for a request. Thus the current state cannot be requested either.

After the firmware update is finished successfully, the device would send the 'Idle' response when requesting its status with this command.

Example

➡ request-line: GET https://192.168.0.100/api/V1/MANAGEMENT/UPDATE/Status

⬅ status-line: 200 OK
⬅ body: Package uploading

7.21. Lightware REST API Quick Summary

System Commands

Setting the Device Label

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/LABEL/DeviceLabel
➜ body: <custom_name>

Resetting the Device

➜ request-line: POST https://<ip>/api/V1/SYS/DEVICES/<TX/RX>/restart

Restoring the Factory Default Settings

➜ request-line: POST https://<ip>/api/V1/SYS/DEVICES/<TX/RX>/factoryDefaults

Querying the Firmware Package Version

➜ request-line: GET https://<ip>/api/V1/MANAGEMENT/UID/PACKAGE/Version

Control Lock

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/UI/ControlLock
➜ body: <lock_status>

Setting the Current Time

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/DATETIME/setTime
➜ body: <current_time>

Identifying the Device

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/UI/identifyMe

Toggling the Dark Mode Setting

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Enable
➜ body: <mode_state>

Setting the Delay of the Dark Mode

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Delay
➜ body: <delay_time>

Enabling Remote System Logging

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Enabled
➜ body: <status>

Setting the Remote Server Address

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/ServerAddress
➜ body: <server_address>

Setting the Protocol for the Remote System Logging

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/Protocol
➜ body: <protocol>

Setting the Format of the Remote System Logging

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/SyslogFormat
➜ body: <format>

Setting the Port for Remote System Logging

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/LOG/REMOTE/PortNumber
➜ body: <port_number>

Enabling/Disabling SNMP Monitoring

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/Enabled
➜ body: <status>

Setting the Device Location

➜ request-line: POST https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/SNMP/SysLocation
➜ body: <location>

Setting the SNMP Authentication

➜ request-line: POST https://<ip>/api/MANAGEMENT/NETWORK/SERVICES/SNMP/setPassphrases
➜ content-type: application/json
➜ body: {"auth": "<auth_pw>", "priv": "<priv_pw>", "authType": "<auth_type>", "privType": "<priv_type>"}

Video Port Settings - General

Switching the Video Input

➜ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/XP/switch
➜ body: <in>:<out>

Switching an Input to All Outputs

➜ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/XP/switchAll
➜ body: <in>

Locking the Video Port

➜ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Lock
➜ body: <locked_state>

Muting the Video Port

➜ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Mute
➜ body: <muted_state>

Setting the Autoselect Policy

➜ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/Policy
➜ body: <autoselect_mode>

Changing the Autoselect-Included Input Ports

➜ request-line: POST https://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Included
➜ body: <state>

Changing the Input Port Priority

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Priority
➜ body: <prio_num>

Querying the Connected Source

➜ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/ConnectedSource

Querying the Connected Destinations

➜ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/XP/<in>/ConnectedDestinations

Querying the Input Switching Capability

➜ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE/<in>

Querying the Video Signal Presence

➜ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/<port>/SignalPresent

HDCP Setting (Input Port)

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<in>/HDCP/AllowedHdcpVersion
➜ body: <allowed_hdcp>

HdcpMode

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<out>/HdcpMode
➜ body: <hdcp_mode>

Querying the Embedded Audio Presence

➜ request-line: GET·https://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioPresent

Muting the Embedded Audio

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioMute
➜ body: <mute_state>

Setting the Output Signal Type

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<out>/OutputSignalType
➜ body: <signal_type>

Turning on Output 5V

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<out>/Output5VMode
➜ body: <5V_pwr>

Welcome Screen Settings

Displaying the Welcome Screen Image

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/ImageEnabled
➜ body: <image_state>

Displaying the Welcome Screen Text

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/MessageEnabled
➜ body: <text_state>

Setting the Welcome Screen Text

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/MessageText
➜ body: <text>

Resetting the Welcome Screen Image

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN/resetImage

Video Port Settings - USB-C Related Commands

Restarting the Link Training

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<in>/DP/restartLinkTraining

CEC Command Sending

Simple CEC Code Sending

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/send
➜ body: <command>·

Remote Control Code Sending

➜ request-line: POST·https://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/sendUserControlClick
➜ body: <command>·

Audio Port Settings

Switching the Audio Input

➜ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/XP/switch
➜ body: <audio_in>:<audio_out>·

Querying the Connected Source

➜ request-line: GET·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_out>/ConnectedSource

Querying the Connected Destinations

➜ request-line: GET·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_in>/ConnectedDestinations

Setting the Autoselect Operation Mode

➜ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>/Policy
➜ body: <op_mode>

Setting the Followed Video Port to Autoselect

➜ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>/VideoFollowPort
➜ body: <out>

Locking the Audio Port

➜ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Lock
➜ body: <locked_state>

Muting the Audio Port 1.

➜ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/XP/<audio_port>/Mute
➜ body: <muted_state>

Muting the Audio Port 2.

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/Mute
➡ body: <muted_state>

Querying the Audio Signal Presence

➡ request-line: GET·https://<ip>/api/V1/MEDIA/AUDIO/<audio_port>/SignalPresent

Analog Audio Output Volume (dB) Setting

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/VolumedB
➡ body: <level>

Analog Audio Output Volume Percent Setting

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/VolumePercent
➡ body: <percent>

Setting the Balance

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/Balance
➡ body: <level>

Analog Audio Output Level Setting by Steps (dB)

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/stepVolumedB
➡ body: <step>

Analog Audio Output Level Setting by Steps in Percent

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/stepVolumePercent
➡ body: <step>

Analog Audio Output Balance Setting by Steps

➡ request-line: POST·https://<ip>/api/V1/MEDIA/AUDIO/<audio_out>/stepBalance
➡ body: <step>

USB Port Settings

Switching the USB Input

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/XP/switch/<host>/H1
➡ body: <host>:H1

Querying the Connected Source

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/XP/H1/ConnectedSource

Querying the Connected Destinations

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/XP/<host>/ConnectedDestinations

Locking the USB Port

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/XP/<usb_port>/Lock
➡ body: <locked_state>

Setting the 5V Sending to the USB Peripherals

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/H1/<device_id>/Power5VMode
➡ body: <device_pwr>

Setting the USB Autoselect Policy

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/Policy
➡ body: <op_mode>

Setting the Followed Video Port to Autoselect

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/VideoFollowPort
➡ body: <out>

Changing the Autoselect Included USB Ports

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/<host>/Included
➡ body: <state>

Changing the USB Port Priority

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/AUTOSELECT/H1/<host>/Priority
➡ body: <prio_num>

USB Port Settings - USB-C Related Commands

Setting the USB-C Power

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/POWER/Reserved
➡ body: <power>

Setting the Displayport Alternate Mode Policy

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/DpAltModePolicy
➡ body: <dp_policy>

Querying the Host Alternate Mode Support

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/HostSupportsDpAltMode

Querying the Status of the Alternate Mode

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/ActiveAltMode

Querying the Port Data Role

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/ActivePortDataRole

Querying the Port Power Role

➡ request-line: GET·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/ActivePortPowerRole

Setting the Port Power Role

➡ request-line: POST·https://<ip>/api/V1/MEDIA/USB/<usb-c_port>/PortPowerRoleSetting
➡ body: <power_role>

EDID Management

Querying the Emulated EDIDs

➜ request-line: GET·https://<ip>/api/V1/EDID/EdidStatus

Querying the Validity of a Dynamic EDID

➜ request-line: GET·https://<ip>/api/V1/EDID/D/<dynamic_edid>/Validity

Querying the Preferred Resolution of a User EDID

➜ request-line: GET·https://<ip>/api/V1/EDID/U/<user_edid>/PreferredResolution

Emulating an EDID to an Input Port

➜ request-line: POST·https://<ip>/api/V1/EDID/switch
➜ body: <source>:<destination>

Emulating an EDID to All Input Ports

➜ request-line: POST·https://<ip>/api/V1/EDID/switchAll
➜ body: <source>

Copying an EDID to User Memory

➜ request-line: POST·https://<ip>/api/V1/EDID/copy
➜ body: <source>:<destination>

Deleting an EDID from User Memory

➜ request-line: POST·https://<ip>/api/V1/EDID/delete
➜ body: <user_edid>

Resetting the Emulated EDIDs

➜ request-line: POST·https://<ip>/api/V1/EDID/reset

Ethernet Port Configuration

Setting the DHCP State

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/DhcpEnabled
➜ body: <dhcp_status>

Changing the IP Address (Static)

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
➜ body: <IP_address>

Changing the Subnet Mask (Static)

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
➜ body: <netmask>

Changing the Gateway Address (Static)

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
➜ body: <gw_address>

Applying the Network Settings

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/applySettings

Setting the Hostname

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/HostName
➜ body: <unique_name>

Network Security

Enabling/Disabling the Ethernet Port

➜ request-line: POST·https://<ip>/api/V1/MEDIA/ETHERNET/<ethernet_port>/Enabled
➜ body: <status>

Querying the Network Service Port Number

➜ request-line: GET·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Port

Enabling/Disabling the Network Service Port

➜ request-line: GET·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Enabled
➜ body: <status>

Querying the Username for Authentication

➜ request-line: GET·https://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name

Setting a Password for Authentication

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword
➜ body: <password>

Enabling the Authentication

➜ request-line: POST·https://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/AuthenticationEnabled
➜ body: <status>

Setting the VLAN Preset

➜ request-line: POST·https://<ip>/api/V1/MEDIA/ETHERNET/VlanPreset
➜ body: <vlan_preset>

Setting the VLAN ID

➜ request-line: POST·https://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
➜ body: <vlan_id>
➜ request-line: POST https://<ip>/api/V1/MEDIA/ETHERNET/<port>/VlanMembership
➜ body: 1000

Setting up the Static IP Address for Management Network

➜ request-line: POST https://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredIpAddress
➜ body: <static_management_ip>

Setting Up Gateway for Static IP on Management Network

➡ request-line: POST https://<ip>/api/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC/ConfiguredGatewayAddress
➡ body: <static_management_gateway>

Serial Port Configuration

BAUD Rate Setting

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/Baudrate
➡ body: <baudrate>

Stop Bits Setting

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/StopBits
➡ body: <stopbits>

Querying the Data Bits

➡ request-line: GET·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/DataBits

Parity Setting

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/Parity
➡ body: <parity>

Querying the Serial over IP Port Number

➡ request-line: GET·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/SERIALOVERIP/Port

Enabling the Serial over IP Port

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/SERIALOVERIP/Enabled
➡ body: <state>

Serial Port Messaging

Sending a Message via RS-232

➡ request-line: POST·https://<ip>/api/V1/MEDIA/SERIAL/<serial_port>/send
➡ body: <message>

GPIO Port Configuration

Setting the Direction of a GPIO Pin

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/Direction
➡ body: <dir>

Setting the Output Level of a GPIO Pin

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/Output
➡ body: <state>

Setting the Output Level for a Specified Time

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/interval
➡ body: <value>;<time>

Toggling the Level of a GPIO Pin

➡ request-line: POST·https://<ip>/api/V1/MEDIA/GPIO/<port>/toggle

OCS Port Configuration

Querying the Input Level of an OCS Pin

➡ request-line: GET·https://<ip>/api/V1/MEDIA/OCS/P1/InputLevel

Setting the Sensor Type

➡ request-line: POST·https://<ip>/api/V1/MEDIA/OCS/P1/SensorType
➡ body: <sensor_type>

Querying the Reported OCS State

➡ request-line: GET·https://<ip>/api/V1/MEDIA/OCS/P1/State

Updating the Device via REST API

Querying the Update REST API Version

➡ request-line: GET·https://<ip>/api/V1/MANAGEMENT/UPDATE/Version

Uploading the Package

➡ request-line: POST·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/Package
➡ body: <LFP2 file>
➡ content-type: application/octet-stream

Configuration Parameters – Keep the Current Settings

➡ request-line: DELETE·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset

Configuration Parameters - Setting "Soft" Factory Reset

➡ request-line: POST·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset
➡ body: <softreset_specifier>
➡ content-type: application/json

Configuration Parameters - Querying Factory Reset Setting

➡ request-line: GET·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset

Configuration Parameters - Deleting "Soft" Factory Reset

➡ request-line: DELETE·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dosoftreset

Executing the Update

➡ request-line: POST·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/update
➡ body: <payload>
➡ content-type: text/plain

Querying the State of the Updating Process

➡ request-line: GET·https://<ip/host>/api/V1/MANAGEMENT/UPDATE/Status

8

LW3 Programmers' Reference

The device can be controlled through Lightware 3 (LW3) protocol commands to ensure the compatibility with other Lightware products. The supported LW3 commands are described in this chapter.

- Overview 135
- Instructions for the Terminal Application Usage 135
- Websocket (WS) or Secured Websocket (WSS) Usage 135
- Protocol Rules 136
- System Commands 139
- Video Port Settings - General 142
- Welcome Screen Settings 146
- Video Port Settings - USB-C Related Commands 148
- CEC Command Sending 148
- Audio Port Settings 150
- USB Port Settings 153
- USB Port Settings - USB-C Related Commands 156
- EDID Management 158
- Ethernet Port Configuration 160
- Remote Power 161
- Network Security 161
- Serial Port Configuration 164
- Sending a Message via RS-232 164
- GPIO Port Configuration 165
- OCS Port Configuration 166
- LW3 Commands - Quick Summary 167


8.1. Overview

The Lightware Protocol #3 (LW3) is implemented in almost all new Lightware devices (matrix switchers, signal extenders and distribution amplifiers) since 2012. The protocol is ASCII-based and all commands are terminated with a carriage return (Cr, '\r') and line feed (Lf, '\n') pair. It is organized as a tree structure that provides outstanding flexibility and user-friendly handling with 'nodes', 'properties' and 'methods'. The **Advanced View** of the Lightware Device Controller software is the perfect tool for browsing and learning how the LW3 protocol can be used in practice.

8.2. Instructions for the Terminal Application Usage

Terminal Application

The LW3 protocol commands can be applied to the receiver using a terminal application. You need to install one of them on your control device, for example **Putty** or **CLI**. *#terminal*

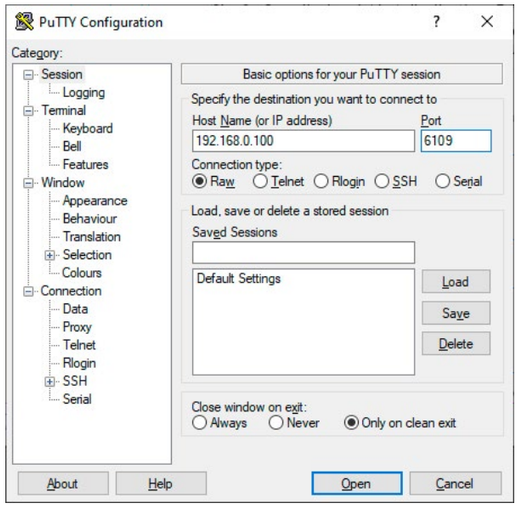

Establishing Connection

Follow the steps to establish connection to the receiver:


Step 1. Connect the receiver to a LAN over Ethernet.

Step 2. Open the terminal application (e.g. Putty).

Step 3. Add the **IP address** of the device (default: 192.168.0.100) and the **port number (6107)**.

Step 4. Select the **Raw** connection type, and open the connection.

Once the terminal window is opened, you can enter the LW3 protocol commands, which are listed in the following sections.

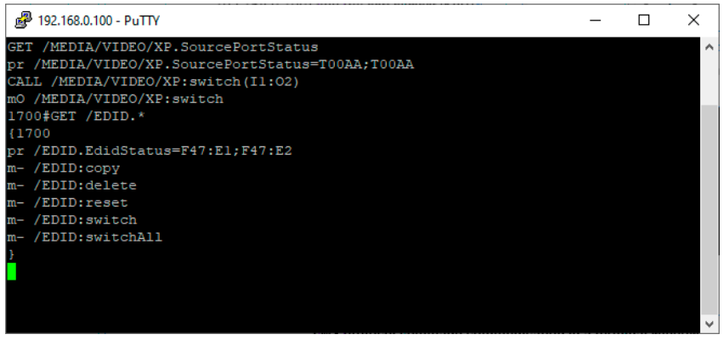

LW3 protocol command communication in a terminal window

8.3. Websocket (WS) or Secured Websocket (WSS) Usage

UCX-TPX-TX30 series switcher transmitter provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands. For more details about the websocket, see the 802.1x Authentication section.

The LW3 node tree is available after opening a session with the device on the following path:

- ws://<ip>/lw3
- wss://<ip>/lw3

WebSocket Client Application

Establishing Connection

Follow the steps to establish connection to the switcher:

Step 1. Connect the receiver to a LAN over Ethernet.


Step 2. Open the websocket client (e.g. Simple websocket Client).

Step 3. Add the **IP address** of the device (default: DHCP): ws://<ip>/lw3 or wss://<ip>/lw3

Step 4. Press the **Open/Connect** button.


Step 5. Once connected, enter a message, hit **Enter** and press the **Send** button.

Step 6. Press the **Close/Disconnect** button to end the session.

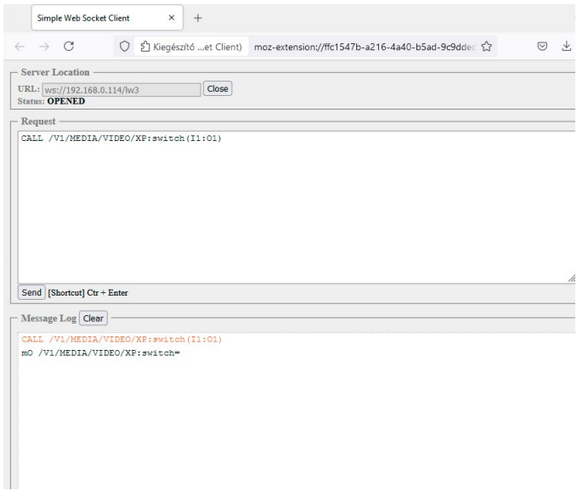

8.4. Protocol Rules

8.4.1. LW3 Tree Structure and Command Structure (examples)

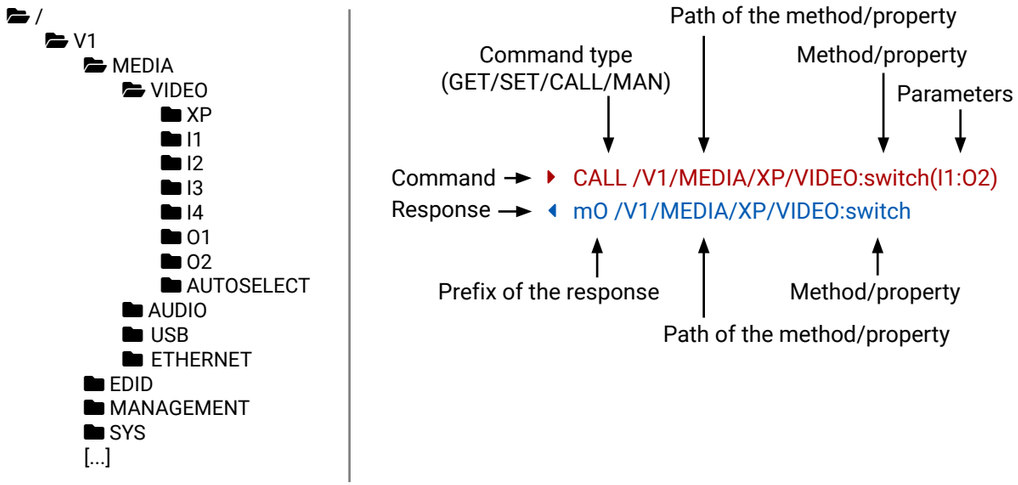

8.4.2. General Rules

- All names and parameters are **case-sensitive**.
- The nodes are separated by a slash ('/') character.
- The node name can contain the elements of the English alphabet and numbers.
- The command lines have to be closed by **Carriage return and Line Feed** (CrLf).
- Use the **TCP port no. 6107** when using LW3 protocol over Ethernet.
- The length of a line (command/response, command type / prefix, path, method/property and parameters together) can be **max. 800 bytes**.
- When a command is issued by the device, the received response cannot be processed by the CPU.
- The node paths describe the exact location of the node, listing each parent node up to the root.

8.4.3. Legend for the Control Commands

Command and Response – Example

- GET·/V1/MEDIA/VIDEO/I2.SignalPresent
- pr·/V1/MEDIA/VIDEO/I2.SignalPresent=<signal_present>

Format	Description
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Specific parameter defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. **I2;I4;I5** or **F27:E1;F47:E2**
▸	Sent command
◂	Received response
·	Space character

Further not listed <parameters> are defined at each command.

8.4.4. Command Types

GET Command

The **GET** command can be used to get the child nodes, properties and methods of a specific node. It can also be used to get the value of a property. Use the dot character (.) when addressing a property:

- GET /V1/.SerialNumber
- pr /V1/.SerialNumber=87654321

GETALL Command

The **GETALL** command can be used to get all child nodes, properties and methods of a node with one command.

- GETALL /V1/MEDIA/UART
- ns /V1/MEDIA/UART/RECOGNIZER
- ns /V1/MEDIA/UART/P1
- ns /V1/MEDIA/UART/P2
- pr /V1/MEDIA/UART.PortCount=2
- pr /V1/MEDIA/UART.PortUi=P1:12209;P2:12224
- pr /V1/MEDIA/UART.P1=Local RS-232
- pr /V1/MEDIA/UART.P2=TPS in RS-232

SET Command

The **SET** command can be used to modify the value of a property. Use the dot character (.) when addressing the property:

- SET /V1/MEDIA/VIDEO/O1.TpgPattern=CYCLE
- pw /V1/MEDIA/VIDEO/O1.TpgPattern=CYCLE

CALL Command

A method can be invoked by the **CALL** command. Use the colon character (:) when addressing the method:

- CALL /V1/EDID:switchAll(F49)
- mO /V1/EDID:switchAll

MAN Command

The manual is a human readable text that describes the syntax and provides a hint on how to use the primitives. For every node, property and method in the tree there is a manual, type the MAN command to get the manual:

- MAN /V1/MEDIA/VIDEO/O1.Pwr5vMode
- pm /V1/MEDIA/VIDEO/O1.Pwr5vMode ["0" | "1" | "2"] 0 - Auto, 1 - Always On, 2 - Always Off

8.4.5. Prefix Summary

DEFINITION: The prefix is a 2-character-long code that describes the type of the response.

The following prefixes are defined in the LW3 protocol:

Prefix	Description
n-	a node
nE	an error for a node
nm	a manual for a node
ns	a child node of a node
pr	a read-only property
pw	read-write property
pE	an error for the property

Prefix	Description
pm	a manual for the property
m-	a method
mO	a response after a successful method execution
mF	a response after a failed method execution
mE	an error for a method
mm	a manual for a method

8.4.6. Error Messages

There are several error messages defined in the LW3 protocol, all of them have a unique error number.

- CALL /V1/MEDIA/VIDEO/XP:lock(IA)
- mE /V1/MEDIA/VIDEO/XP:lock %E002:Not exist

8.4.7. Escaping

DEFINITION: An escape sequence is a sequence of characters that does not represent itself when used inside a character or string literally, but is translated into another character or a sequence of characters.

Property values and method parameters can contain characters that are used as control characters in the protocol. They must be escaped. The escape character is the backslash ('\') and escaping means injecting a backslash before the character that should be escaped (like in C language).

Control characters are the following: \ { } # % ( ) \r \n \t

The **original** message: **CALL /V1/MEDIA/UART/P1:sendMessage(Set(01))**

The **escaped** message: **CALL /V1/MEDIA/UART/P1:sendMessage(Set\(01\))**

8.4.8. Signature

DEFINITION: The signature is a 4-digit-long hexadecimal value that can be optionally placed before every command to keep a command and the corresponding responses together as a group.

Each line is terminated with carriage return (Cr, '\r') and line feed (Lf, '\n') characters. In several cases the number of the lines in the response cannot be determined in advance, e.g. the client intends to receive the whole response and also wants to be sure that the received lines belong together and to the same command. In these cases, a special feature, the 'signature' can be used. The response to that particular command will also be preceded by the signature, and the corresponding lines will be between brackets:

- 1700#GET /V1/EDID.*
- {1700
- pr /V1/EDID.EdidStatus=F47:E1;F47:E2
- m- /V1/EDID:copy
- m- /V1/EDID:delete
- m- /V1/EDID:reset
- m- /V1/EDID:switch
- m- /V1/EDID:switchAll
- }

INFO: The lines of the signature are also Cr and Lf terminated.

8.4.9. Subscription

DEFINITION: Subscription to a node means that the user will get a notification if a property of the node changes.

A user can subscribe to any node. These notifications are asynchronous messages and are useful to keep the client application up to date, without having to periodically poll the node to detect a changed property. When the user does not want to be informed about the changes anymore, he can simply unsubscribe from the node.

ATTENTION: The subscriptions are handled separately for connections. Hence, if the connection is terminated, all registered subscriptions are deleted. After reopening a connection all subscribe commands have to be sent in order to get the notifications of the changes on that connection.

Subscribe to a Node

- OPEN /V1/MEDIA/VIDEO
- o- /V1/MEDIA/VIDEO

Unsubscribe from a Node

- CLOSE /V1/MEDIA/VIDEO
- c- /V1/MEDIA/VIDEO

Subscribe to Multiple Nodes

- OPEN /V1/MEDIA/VIDEO/*
- o- /V1/MEDIA/VIDEO/*

Unsubscribe from Multiple Nodes

- CLOSE /V1/MEDIA/VIDEO/*
- c- /V1/MEDIA/VIDEO/*

Get the Active Subscriptions

- OPEN
- o- /V1/MEDIA/VIDEO
- o- /V1/EDID
- o- /V1/DISCOVERY

8.4.10. Notifications about the Changes of the Properties

When the value of a property is changed and the user is subscribed to the node that the property belongs to, an asynchronous notification is generated. This notification is called the 'change message'. The format of such a message is very similar to the response for the **GET** command:

- CHG /V1/EDID.EdidStatus=F48:E1

A Short Example of How to Use the Subscription

There are two independent users controlling the device through two independent connections (**Connection #1** and **Connection #2**). The events in the rows occur after each other.

OPEN /V1/MEDIA/AUDIO/O3 o- /V1/MEDIA/AUDIO/O3 GET /V1/MEDIA/AUDIO/O3.VolumePercent pw /V1/MEDIA/AUDIO/O3.VolumePercent=100.00	**connection #1**
GET /V1/MEDIA/AUDIO/O3.VolumePercent pw /V1/MEDIA/AUDIO/O3.VolumePercent=100.00 SET /V1/MEDIA/AUDIO/O3.VolumePercent=50.00 pw /V1/MEDIA/AUDIO/O3.VolumePercent=50.00	**connection #2**
CHG /V1/MEDIA/AUDIO/O3.VolumePercent=50.00	**connection #1**

The first user (**Connection #1**) set a subscription to a node. Later the other user (**Connection #2**) made a change, and thanks to the subscription, the first user got a notification about the change.

8.5. System Commands

8.5.1. Setting the Device Label

INFO: The device label can be changed to a custom text in the TX Status or RX Status tabs respectively of the LDC software.

Command and Response *#devicelabel #label*

- SET·/V1/MANAGEMENT/LABEL.DeviceLabel=<custom_name>
- pw·/V1/MANAGEMENT/LABEL.DeviceLabel=<custom_name>

The Device Label can be 49 characters long and ASCII characters are allowed. Longer names are truncated.

Example

- SET /V1/MANAGEMENT/LABEL.DeviceLabel=UCX_Conference_room1
- pw /V1/MANAGEMENT/LABEL.DeviceLabel=UCX_Conference_room1

8.5.2. Resetting the Device

The device can be restarted – the current connections will be terminated.

INFO: Please use TX or RX after the DEVICES node depending on which device is to be reset.

Command and Response *#reboot #restart*

- CALL·/V1/SYS/DEVICES/<TX/RX>:restart()
- mO·/V1/SYS/DEVICES/<TX/RX>:restart=

Example

- CALL /V1/SYS/DEVICES/TX:restart()
- mO /V1/SYS/DEVICES/TX:restart=

8.5.3. Restoring the Factory Default Settings

INFO: Please use TX or RX after the DEVICES node depending on which device is to be restored to factory default settings.

Command and Response

- CALL·/V1/SYS/DEVICES/<TX/RX>:factoryDefaults()
- mO·/V1/SYS/DEVICES/<TX/RX>:factoryDefaults=

Example

- CALL /V1/SYS/DEVICES/TX:factoryDefaults()
- mO /V1/SYS/DEVICES/TX:factoryDefaults=

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the Factory Default Settings section.

#factory

8.5.4. Querying the Firmware Package Version

Command and Response *#firmwareversion*

- GET·/V1/MANAGEMENT/UID/PACKAGE.Version
- pr·/V1/MANAGEMENT/UID/PACKAGE.Version=<firmware_version>

Example

- GET /V1/MANAGEMENT/UID/PACKAGE.Version
- pr /V1/MANAGEMENT/UID/PACKAGE.Version=1.0.0b2

8.5.5. Control Lock

Enable/disable the operation of the front panel buttons.

Command and Response *#lockbutton #buttonlock*

- SET·/V1/MANAGEMENT/UI.ControlLock=<lock_status>
- pw·/V1/MANAGEMENT/UI.ControlLock=<lock_status>

Parameters

Parameter	Parameter description	Values	Value description
<lock_status>	Front panel button locking status	**None**	All functions of the front panel button are enabled.
		Locked	The front panel buttons are locked and can be unlocked by button combination (Control Lock).
		Force locked	The front panel buttons are locked and cannot be unlocked by button combination, only in LDC (on the TX Status tab) or using the LW3 command.

Example

- SET /V1/MANAGEMENT/UI.ControlLock=force locked
- pw /V1/MANAGEMENT/UI.ControlLock=force locked

8.5.6. Setting the Current Time

Command and Response *#time*

- CALL·/V1/MANAGEMENT/DATETIME:setTime(<current_time>)
- mO·/V1/MANAGEMENT/DATETIME:setTime=

Parameters

Parameter	Value	Value Description
<current_time>	**e.g. 2026-09-06T14:47:25**	The new router time in ISO 8601 date time format.

Example

- CALL /V1/MANAGEMENT/DATETIME:setTime(2020-11-01T04:39:54.000Z)
- mO /V1/MANAGEMENT/DATETIME:setTime=

8.5.7. Identifying the Device

Calling the method makes the status LEDs blink for 10 seconds. The feature helps find the device physically.

Command and Response *#identifyme*

- CALL·/V1/MANAGEMENT/UI:identifyMe()
- mO·/V1/MANAGEMENT/UI:identifyMe=

Example

- CALL /V1/MANAGEMENT/UI:identifyMe()
- mO /V1/MANAGEMENT/UI:identifyMe=

8.5.8. Toggling the Dark Mode Setting

The LEDs of the device can be switched off if their light could be annoying. In Dark mode, all LEDs are switched off, except for the LEDs of the RJ45 connectors. *#darkmode*

Command and Response

- SET·/V1/MANAGEMENT/UI/DARKMODE.Enable=<mode_state>
- pw·/V1/MANAGEMENT/UI/DARKMODE.Enable=<mode_state>

Parameters

Parameter	Value	Value Description
<mode_state>	**true** or **1**	Dark mode is enabled.
	false or **0**	Dark mode is disabled.

Example

- SET /V1/MANAGEMENT/UI/DARKMODE.Enable=true
- pw /V1/MANAGEMENT/UI/DARKMODE.Enable=true

8.5.9. Setting the Delay of the Dark Mode Setting

The Dark mode can be enabled right away, or after a certain time. Thus, the mode is enabled if no buttons are pressed for a while. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. The delay time can be set by this command.

Command and Response

- SET·/V1/MANAGEMENT/UI/DARKMODE.Delay=<delay_time>
- pw·/V1/MANAGEMENT/UI/DARKMODE.Delay=<delay_time>

Parameters

Parameter	Value	Value Description
<delay_time>	**e.g. 60**	The delay of Dark mode activating/deactivating in seconds. Default is **60**. If the value is 0, no delay is applied and enabling/disabling Dark mode takes immediate effect.

Example

- SET /V1/MANAGEMENT/UI/DARKMODE.Delay=10
- pw /V1/MANAGEMENT/UI/DARKMODE.Delay=10

8.5.10. Enabling Remote System Logging

Command and Response

- SET·/V1/MANAGEMENT/LOG/REMOTE.Enabled=<status>
- pw·/V1/MANAGEMENT/LOG/REMOTE.Enabled=<status>

Parameters

Parameter	Value	Value Description
<status>	**true**	The remote system logging is enabled.
	false	The remote system logging is disabled.

Example

- SET /V1/MANAGEMENT/LOG/REMOTE.Enabled=true
- pw /V1/MANAGEMENT/LOG/REMOTE.Enabled=true

8.5.11. Setting the Remote Server Address

Command and Response

- SET·/V1/MANAGEMENT/LOG/REMOTE.ServerAddress=<server_address>
- pw·/V1/MANAGEMENT/LOG/REMOTE.ServerAddress=<server_address>

Parameters

Parameter	Value	Value Description
<server_address>	**e.g. mycompany.com (domain) 192.168.0.1 (IPv4)**	The server domain name (RFC1035) or IP address (IPv4) where the logs should be sent to.

Example

- SET /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=192.168.0.1
- pw /V1/MANAGEMENT/LOG/REMOTE.ServerAddress=192.168.0.1

8.5.12. Setting the Protocol for the Remote System Logging

Command and Response

- SET·/V1/MANAGEMENT/LOG/REMOTE.Protocol=<protocol>
- pw·/V1/MANAGEMENT/LOG/REMOTE.Protocol=<protocol>

Parameters

Parameter	Value	Value Description
<protocol>	**TCP**	The logs are forwarded using TCP protocol.
	UDP	The logs are forwarded using UDP protocol.
	TLS	The logs are forwarded using TLS protocol.

Example

- SET /V1/MANAGEMENT/LOG/REMOTE.Protocol=TLS
- pw /V1/MANAGEMENT/LOG/REMOTE.Protocol=TLS

8.5.13. Setting the Format of the Remote System Logging

Command and Response

- SET·/V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=<format>
- pw·/V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=<format>

Parameters

Parameter	Value	Value Description
<format>	**RFC3164**	This is a simplified format for human readability.
	RFC5424	This is an all-encompassing format for analitical systems.

Example

- SET /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=RFC3164
- pw /V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=RFC3164

8.5.14. Setting the Port for Remote System Logging

Command and Response

- SET·/V1/MANAGEMENT/LOG/REMOTE.PortNumber=<port_number>
- pw·/V1/MANAGEMENT/LOG/REMOTE.PortNumber=<port_number>

Parameters

Parameter	Value	Value Description
<port_number>	**1-65535**	The port number on the remote host to send log messages to.

INFO: The port number cannot be set to 0.

Example

- SET /V1/MANAGEMENT/LOG/REMOTE.PortNumber=6514
- pw /V1/MANAGEMENT/LOG/REMOTE.PortNumber=6514

8.5.15. Enabling/Disabling SNMP Monitoring

Command and Response

- SET·/V1/MANAGEMENT/NETWORK/SERVICES/SNMP.Enabled=<status>
- pw·/V1/MANAGEMENT/NETWORK/SERVICES/SNMP.Enabled=<status>

Parameters

Parameter	Value	Value Description
<status>	**true**	The SNMP mointoring is enabled.
	false	The SNMP monitoring is disabled.

Example

- SET /V1/MANAGEMENT/NETWORK/SERVICES/SNMP.Enabled=true
- pw /V1/MANAGEMENT/NETWORK/SERVICES/SNMP.Enabled=true

8.5.16. Setting the Device Location

Command and Response

- SET·/V1/MANAGEMENT/NETWORK/SERVICES/SNMP.SysLocation=<location>
- pw·/V1/MANAGEMENT/NETWORK/SERVICES/SNMP.SysLocation=<location>

Parameters

Parameter	Value	Value Description
<location>	**e.g. Room 306**	The physical or logical location of the device. The string might contain letters of the English alphabet (A-Z, a-z), numbers (0-9), space ( ), period (.), underscore (_) and hyphen (-).

Example

- SET /V1/MANAGEMENT/NETWORK/SERVICES/SNMP.SysLocation=Room 306
- pw /V1/MANAGEMENT/NETWORK/SERVICES/SNMP.SysLocation=Room 306

8.6. Video Port Settings - General

8.6.1. Switching Video Input

Command and Response

- CALL·/V1/MEDIA/VIDEO/XP:switch(<in>:<out>)
- mO·/V1/MEDIA/VIDEO/XP:switch=

Example

- CALL /V1/MEDIA/VIDEO/XP:switch(I5:O1)
- mO /V1/MEDIA/VIDEO/XP:switch=

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

ATTENTION: Video crosspoint has a limitation: I1 and I3/I5* ports are not available at the same time, only one of them can be selected to any output. When one of the outputs is switched to I1 or I3/I5*, the other output can not be switched to I1 or I3/I5*. In this case the switch command returns an error message.

* **I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30**.

Example

- GET /V1/MEDIA/VIDEO/XP/O1.ConnectedSource
- pw /V1/MEDIA/VIDEO/XP/O1.ConnectedSource=I5
- GET /V1/MEDIA/VIDEO/XP/O2.ConnectedSource
- pw /V1/MEDIA/VIDEO/XP/O2.ConnectedSource=I5
- CALL /V1/MEDIA/VIDEO/XP:switch(I1:O1)
- mE /V1/MEDIA/VIDEO/XP:switch %E006: Illegal operation

8.6.2. Switching an Input to All Outputs

Command and Response

- CALL·/V1/MEDIA/VIDEO/XP:switchAll(<input>)
- mO·/V1/MEDIA/VIDEO/XP:switchAll=

Example

- CALL /V1/MEDIA/VIDEO/XP:switchAll(I1)
- mO /V1/MEDIA/VIDEO/XP:switchAll=

8.6.3. Locking the Video Port

Command and Response

- SET·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked_state>
- pw·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<locked_state>	Locked state	**true**	The port is locked
		false	The port is unlocked

Example

- SET /V1/MEDIA/VIDEO/XP/I2.Lock=false
- pw /V1/MEDIA/VIDEO/XP/I2.Lock=false

8.6.4. Muting the Video Port

Command and Response

- SET·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted_state>
- pw·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	**true**	The port is locked.
		false	The port is unlocked.

Example

- SET /V1/MEDIA/VIDEO/XP/I2.Mute=false
- pw /V1/MEDIA/VIDEO/XP/I2.Mute=false

8.6.5. Setting the Autoselect Policy

Command and Response

- SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>.Policy=<autoselect_mode>
- pw·/V1/MEDIA/VIDEO/AUTOSELECT/<out>.Policy=<autoselect_mode>

Parameters

Parameter	Parameter description	Values	Value description
<autoselect_mode>	The autoselect policy	**Off**	The autoselect function is disabled.
		Last Detect	It is always the last attached input that is automatically switched to the output..
		First Detect	The first active video input is selected.

Example

- SET /V1/MEDIA/VIDEO/AUTOSELECT/O2.Policy=First detect
- pw /V1/MEDIA/VIDEO/AUTOSELECT/O2.Policy=First detect

8.6.6. Changing the Autoselect Included Input Ports

Command and Response

- SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Included=<state>
- pw·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Included=<state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	The chosen input is ignored in the autoselect process or not.	**true**	The port is included in autoselect.
		false	The autoselect function ignores that port.

Example

- SET /V1/MEDIA/VIDEO/AUTOSELECT/O2/I1.Included=false
- pw /V1/MEDIA/VIDEO/AUTOSELECT/O2/I1.Included=false

8.6.7. Changing the Input Port Priority

Command and Response

- SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Priority=<prio_num>
- pw·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Priority=<prio_num>

Parameters

Parameter	Value	Value Description
<prio_num>	**1-100**	The priority number of the input port in relation to the output port. Equal numbers are allowed.

Example

- SET /V1/MEDIA/VIDEO/AUTOSELECT/O2/I2.Priority=51
- pw /V1/MEDIA/VIDEO/AUTOSELECT/O2/I2.Priority=51

8.6.8. Querying the Connected Source

Command and Response

- GET·/V1/MEDIA/VIDEO/XP/<out>.ConnectedSource
- pw·/V1/MEDIA/VIDEO/XP/<out>.ConnectedSource=<in>

Example

- GET /V1/MEDIA/VIDEO/XP/O3.ConnectedSource
- pw /V1/MEDIA/VIDEO/XP/O3.ConnectedSource=I2

8.6.9. Querying the Input Switching Capability

Video crosspoint has a limitation: I1 or I3/I5* ports can not be selected to any output at the same time. **Busy** value of the switchable property refers to the limitation.

* **I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30**.

Command and Response

- GET·/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE.<in>
- pr·/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE.<in>=<switchable_state>

Parameters

Parameter	Parameter description	Values	Value description
<switchable_state>	The chosen input can be switched to the output or not.	**OK**	The connection of the chosen input and output is allowed.
		Busy	The chosen input can not be switched to the output.

Example

- GET /V1/MEDIA/VIDEO/XP/O2/SWITCHABLE.I1
- pr /V1/MEDIA/VIDEO/XP/O2/SWITCHABLE.I1=Busy

8.6.10. Querying the Connected Destinations

Command and Response

- GET·/V1/MEDIA/VIDEO/XP/<n>.ConnectedDestinations
- pr·/V1/MEDIA/AUDIO/XP/<in>.ConnectedDestinations=<out>

Example

- GET /V1/MEDIA/VIDEO/XP/I3.ConnectedDestinations
- pr /V1/MEDIA/VIDEO/XP/I3.ConnectedDestinations=O1;O2

8.6.11. Querying the Video Signal Presence

Command and Response

- GET·/V1/MEDIA/VIDEO/<port>.SignalPresent
- pr·/V1/MEDIA/VIDEO/<port>.SignalPresent=<state>

Parameters

Parameter	Parameter description	Values	Value description
<state>	This property gives a feedback about the current signal presence of the port.	**true**	The video signal is present.
		false	The video signal is not present.

Example

- GET /V1/MEDIA/VIDEO/I1.SignalPresent
- pr /V1/MEDIA/VIDEO/I1.SignalPresent=false

8.6.12. HDCP Setting (Input Port)

HDCP capability can be set on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the HDCP Management section.

ATTENTION: HDCP 2.2 signal handling is limited to up to two input ports at the same time.

Command and Response *#hdcp*

- SET·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed_hdcp>
- pw·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed_hdcp>

Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The input port reports the HDCP capability.	**HDCP 1.4**	The input port reports HDCP 1.4 capability.
		HDCP 2.2	The input port reports HDCP 2.2 capability.
		Off	The input port reports non-HDCP compliance.

Example

- SET /V1/MEDIA/VIDEO/I1/HDCP.AllowedHdcpVersion=HDCP 1.4
- pw /V1/MEDIA/VIDEO/I1/HDCP.AllowedHdcpVersion=HDCP 1.4

8.6.13. Setting the HDCP Mode

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the HDCP Management section.

Command and Response *#hdcp*

- SET·/V1/MEDIA/VIDEO/<out>.HdcpMode=<hdcp_mode>
- pw·/V1/MEDIA/VIDEO/<out>.HdcpMode=<hdcp_mode>

Parameters

Parameter	Parameter description	Values	Value description
<hdcp_mode>	HDCP encryption setting on the output port	**Auto**	The encryption is enabled on the output port if the signal on the input port is encrypted.
		Always	The outgoing signal is HDCP-encrypted.

Example

- SET /V1/MEDIA/VIDEO/O1/HDCP.HdcpMode=Auto
- pw /V1/MEDIA/VIDEO/O1/HDCP.HdcpMode=Auto

8.6.14. Setting the Output Signal Type

Command and Response *#signaltype*

- SET·/V1/MEDIA/VIDEO/<out>.OutputSignalType=<signal_type>
- pw·/V1/MEDIA/VIDEO/<out>.OutputSignalType=<signal_type>

Parameters

Parameter	Parameter description	Values	Value description
<signal_type>	Signal type setting	**Auto**	The outgoing signal type is HDMI.
		DVI	The outgoing signal type is DVI.

Example

- SET /V1/MEDIA/VIDEO/O1.OutputSignalType=Auto
- pw /V1/MEDIA/VIDEO/O1.OutputSignalType=Auto

8.6.15. Querying the Embedded Audio

Command and Response

- GET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent
- pr·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent=<embedded_state>

Parameters

Parameter	Parameter description	Values	Value description
<embedded_state>	It shows if the video contains audio or not.	**true**	There is embedded audio in the video signal.
		false	There is no embedded audio in the video signal.

Example

- GET /V1/MEDIA/VIDEO/I2.EmbeddedAudioPresent
- pr /V1/MEDIA/VIDEO/I2.EmbeddedAudioPresent=false

8.6.16. Muting the Embedded Audio

Command and Response

- SET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute_state>
- pw·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute_state>

Parameters

Parameter	Parameter description	Values	Value description
<mute_state>	It shows if the embedded audio is muted or not.	**true**	The embedded audio is muted.
		false	The embedded audio is unmuted.

Example

- SET /V1/MEDIA/VIDEO/O1.EmbeddedAudioMute=false
- pw /V1/MEDIA/VIDEO/O1.EmbeddedAudioMute=false

8.6.17. Setting the Output 5V Mode

The 5V power towards the sink can be enabled or disabled as follows:

Command and Response

- SET·/V1/MEDIA/VIDEO/<out>.Output5VMode=<5V_pwr>
- pw·/V1/MEDIA/VIDEO/<out>.Output5VMode=<5V_pwr>

Parameters

Parameter	Parameter description	Value	Value description
<5V_pwr>	5V power towards the sink	**On**	Enable 5V power on HDMI port
		Off	Disable 5V power on HDMI port

Example

- SET /V1/MEDIA/VIDEO/O1.Output5VMode=On
- pw /V1/MEDIA/VIDEO/O1.Output5VMode=On

8.6.18. Querying the HDCP Capability (Output Port)

HDCP capability of the connected sink device can be queried at each output port. See more information in the HDCP Management section.

Command and Response *#hdcp*

- GET·/V1/MEDIA/VIDEO/<out>/HDCP/SinkMaxHdcpVersion=<hdcp_ver>
- pr·/V1/MEDIA/VIDEO/<out>/HDCP/SinkMaxHdcpVersion=<hdcp_ver>

Parameters

Parameter	Parameter description	Values	Value description
<hdcp_ver>	The HDCP capability is reported from the sink.	**N/A**	Sink is not connected or the HDCP-capability cannot be determined.
		None	The connected sink is non-HDCP compliant.
		HDCP 1.4	The connected sink supports HDCP 1.4 capability.
		HDCP 2.2	The connected sink supports HDCP 2.2 capability.

Example

- GET /V1/MEDIA/VIDEO/O1/HDCP/SinkMaxHdcpVersion=HDCP 1.4
- pr /V1/MEDIA/VIDEO/O1/HDCP/SinkMaxHdcpVersion=HDCP 1.4

8.6.19. Querying the HDCP Setting (Output Port)

The maximum allowed HDCP encryption can be queried at each output port. See more information in the HDCP Management section.

Command and Response *#hdcp*

- GET·/V1/MEDIA/VIDEO/<out>/HDCP.AllowedHdcpVersion=<allowed_hdcp>
- pr·/V1/MEDIA/VIDEO/<out>/HDCP.AllowedHdcpVersion=<allowed_hdcp>

Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The maximum allowed HDCP encryption on the output port	**HDCP 1.4**	HDCP 1.4 is supported.
		HDCP 2.2	HDCP 2.2 and HDCP 1.4 are supported.

Example

- GET /V1/MEDIA/VIDEO/O1/HDCP/AllowedHdcpVersion=HDCP 1.4
- pr /V1/MEDIA/VIDEO/O1/HDCP/AllowedHdcpVersion=HDCP 1.4

8.7. Welcome Screen Settings

For details about the Welcome screen feature, please see the Welcome Screen section.

8.7.1. Displaying the Welcome Screen Image

Command and Response *#welcomescreen*

- SET·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.ImageEnabled=<image_state>
- pw·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.ImageEnabled=<image_state

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30
<image_state>		**true**	The welcome screen image is displayed.
		false	The welcome screen image is not displayed.

Example

- SET /V1/MEDIA/VIDEO/I5/WELCOMESCREEN.ImageEnabled=true
- pw /V1/MEDIA/VIDEO/I5/WELCOMESCREEN.ImageEnabled=true

8.7.2. Displaying the Welcome Screen Text

Command and Response

- SET·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.MessageEnabled=<text_state>
- pw·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.MessageEnabled=<text_state

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30
<text_state>		**true**	The welcome screen text is displayed.
		false	The welcome screen text is not displayed.

Example

- SET /V1/MEDIA/VIDEO/I5/WELCOMESCREEN.MessageEnabled=false
- pw /V1/MEDIA/VIDEO/I5/WELCOMESCREEN.MessageEnabled=false

8.7.3. Setting the Welcome Screen Text

Command and Response

- SET·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.MessageText=<text>
- pw·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.MessageText=<text>

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30
<text>	Text to appear on the welcome screen		It may consist of letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), space ( ) and dot (.). Max length: 63 characters. Longer text is truncated.

Example

- SET /V1/MEDIA/VIDEO/I5/WELCOMESCREEN.MessageText=info
- pw /V1/MEDIA/VIDEO/I5/WELCOMESCREEN.MessageText=info

8.7.4. Resetting the Welcome Screen Image

This command restores the original welcome screen image.

Command and Response

- CALL·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN:resetImage()
- mO·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN:resetImage=

Parameters

Parameter	Parameter description	Values	Value description
<w_scr>	Port number of the welcome screen	**I3**	UCX-2x1-TPX-TX30
		I5	UCX-4x3-TPX-TX30

Example

- CALL /V1/MEDIA/VIDEO/I5/WELCOMESCREEN:resetImage()
- mO /V1/MEDIA/VIDEO/I5/WELCOMESCREEN:resetImage=

8.8. Video Port Settings - USB-C Related Commands

8.8.1. Restarting the Link Training

This method is equal to pulling the USB-C connector out and plugging it in again.

Command and Response *#linktraining*

- CALL·/V1/MEDIA/VIDEO/<in>/DP:restartLinkTraining()
- mO·/V1/MEDIA/VIDEO/<in>/DP:restartLinkTraining=

Example

- CALL /V1/MEDIA/VIDEO/I1/DP:restartLinkTraining()
- mO /V1/MEDIA/VIDEO/I1/DP:restartLinkTraining=

8.9. CEC Command Sending

The device is able to send Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication via the HDMI cable.

ATTENTION: To have a successful CEC command processing, the connected HDMI device must support CEC. *#cec*

8.9.1. Simple CEC Code Sending

This command is for sending simple CEC commands to the connected sink device.

The commands can be sent by the following two formats – defined in the header:

- **text/plain**: hexa strings (as seen in the example)
- **application/octet-stream**: binary data that allows sending a file with the desired codes

Command and Response

- CALL·/V1/MEDIA/VIDEO/<out>/CEC:send(<command>)
- mO·/V1/MEDIA/VIDEO/<out>/CEC:send=OK

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	**O1-O3**	Video output port number
<command> *	Two-digit-long hexa code to control the sink device	**446D**	Power on
		446C	Power off
		36	Standby
		446901	Select input 1
		446902	Select input 2
		446903	Select input 3

* The supported list of <commands> depends on the connected sink device.

INFO: For the full list of commands supported by the UCX-TPX-TX30 transmitter, please see the next page.

Example

- CALL /V1/MEDIA/VIDEO/O2/CEC:send(446D)
- mO /V1/MEDIA/VIDEO/O2/CEC:send=OK

8.9.2. Remote Control Code Sending

This command is for sending the so-called 'push-button-commands'. There is a range within the CEC commands for this purpose, e.g. volume up/down. With this method one <command> is put between the 0x44 and 0x45 opcodes in the background.

Command and Response

- CALL·/V1/MEDIA/VIDEO/<port>/CEC:sendUserControlClick(<command>)
- mO·/V1/MEDIA/VIDEO/<port>/CEC:sendUserControlClick=OK

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	**O1-O2-O3**	Video output port number
<command> *	A hexa code to control the sink device	**446D**	Power on
		446C	Power off

* The supported list of <commands> depends on the connected sink device.

INFO: For the full list of commands supported by the UCX-TPX-TX30 transmitter, please see the next page.

Example

- CALL /V1/MEDIA/VIDEO/O2/CEC:sendUserControlClick(446D)
- mO /V1/MEDIA/VIDEO/O2/CEC:sendUserControlClick=OK

Command List

Command	Hexa	Binary
Ok	4400	0100010000000000
Up	4401	0100010000000001
Down	4402	0100010000000010
Left	4403	0100010000000011
Right	4404	0100010000000100
Root menu	4409	0100010000001001
Setup menu	440A	0100010000001010
Contents menu	440B	0100010000001011
Favorite menu	440C	0100010000001100
Back	440D	0100010000001101
Media top menu	4410	0100010000010000
Media context menu	4411	0100010000010001
Number 0	4420	0100010000100000
Number 1	4421	0100010000100001
Number 2	4422	0100010000100010
Number 3	4423	0100010000100011
Number 4	4424	0100010000100100
Number 5	4425	0100010000100101
Number 6	4426	0100010000100110
Number 7	4427	0100010000100111
Number 8	4428	0100010000101000
Number 9	4429	0100010000101001
Dot	442A	0100010000101010
Enter	442B	0100010000101011
Clear	442C	0100010000101100
Channel up	4430	0100010000000000
Channel down	4431	0100010000110001
Sound select	4433	0100010000110011
Input select	4434	0100010000110100
Display info	4435	0100010000110101
Page up	4437	0100010000110111
Page down	4438	0100010000111000
Power legacy	4440	0100010001000000
Volume up	4441	0100010001000001
Volume down	4442	0100010001000010
Mute toggle	4443	0100010001000011
Play	4444	0100010001000100
Stop	4445	0100010001000101
Pause	4446	0100010001000110

Command	Hexa	Binary
Record	4447	0100010001000111
Rewind	4448	0100010001001000
Fast forward	4449	0100010001001001
Eject	444A	0100010001001010
Skip forward	444B	0100010001001011
Skip backward	444C	0100010001001100
3D mode	445A	0100010001011010
Stop record	444D	0100010001001101
Play forward	446024	010001000110000000100100
Play reverse	446020	010001000110000000100000
Stop function	4464	0100010001100100
Mute	4465	0100010001100101
Unmute	4466	0100010001100110
Select next media	446800	010001000110100000000000
Select media 1	446801	010001000110100000000001
Select media 2	446802	010001000110100000000010
Select media 3	446803	010001000110100000000011
Select media 4	446804	010001000110100000000100
Select media 5	446805	010001000110100000000101
Select next input	446900	010001000110100100000000
Select input 1	446901	010001000110100100000001
Select input 2	446902	010001000110100100000010
Select input 3	446903	010001000110100100000011
Select input 4	446904	010001000110100100000100
Select input 5	446905	010001000110100100000101
Power toggle	446B	0100010001101011
Power on	446D	0100010001101101
Power off	446C	0100010001101100
Standby	36	00110110
Image view on	04	00000100
Text view on	0D	00001101
F1	4471	0100010001110001
F2	4472	0100010001110010
F3	4473	0100010001110011
F4	4474	0100010001110100
Clear OSD	6480	0110010010000000
Get CEC version	9F	10011111

8.10. Audio Port Settings

INFO: Audio port numbers may differ depending on the model. For more information, see the Port Numbering section.

8.10.1. Switching the Audio Input

Command and Response

- CALL·/V1/MEDIA/AUDIO/XP:switch(<audio_in>:<audio_out>)
- mO·/V1/MEDIA/AUDIO/XP:switch=

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	**I1-I4**	Audio input port number
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number

Example

- CALL /V1/MEDIA/AUDIO/XP:switch(I2:O3)
- mO /V1/MEDIA/AUDIO/XP:switch=

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

ATTENTION: When I3/I5* is selected for video source, the de-embedded audio of the I1 is not available, because the video crosspoint has a limitation: I1 and I3/I5* ports are not available at the same time, only one of them can be selected to any output. For more details about it, see the port diagram in the Audio Interface section.

* **I3** in case of **UCX-2x1-TPX-TX30** and **I5** in case of **UCX-4x3-TPX-TX30**.

8.10.2. Querying the Connected Source

Command and Response

- GET·/V1/MEDIA/AUDIO/XP/<audio_out>.ConnectedSource
- pw·/V1/MEDIA/AUDIO/XP/<audio_out>.ConnectedSource=<audio_in>

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	**I1-I4**	Audio input port number
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number

Example

- GET /V1/MEDIA/AUDIO/XP/O4.ConnectedSource
- pw /V1/MEDIA/AUDIO/XP/O4.ConnectedSource=I2

8.10.3. Querying the Connected Destinations

Command and Response

- GET·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations
- pr·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations=

Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	**I1-I4**	Audio input port number

Example

- GET /V1/MEDIA/AUDIO/XP/I3.ConnectedDestinations
- pr /V1/MEDIA/AUDIO/XP/I3.ConnectedDestinations=

8.10.4. Setting the Autoselect Operation Mode

Command and Response

- SET·/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>.Policy=<op_mode>
- pw·/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>.Policy=<op_mode>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<op_mode>	Operation mode	**Follow video**	Follows the video crosspoint state automatically.
		Off	Autoselect function is disabled.

Example

- SET /V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=Follow video
- pw /V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=Follow video

8.10.5. Setting the Followed Video Port to Autoselect

Command and Response

- SET·/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>.VideoFollowPort=<out>
- pw·/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>.VideoFollowPort=<out>

Example

- SET /V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=O1
- pw /V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=O1

8.10.6. Locking the Audio Port

Command and Response

- SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Lock=<locked_state>
- pw·/V1/MEDIA/AUDIO/XP/<audio_port>.Lock=<locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	**I1-I4**	Audio input port number
		O2, O4	Analog audio output port number
<locked_state>	Locked state	**true**	The port is locked
		false	The port is unlocked

Example

- SET /V1/MEDIA/AUDIO/XP/I2.Lock=false
- pw /V1/MEDIA/AUDIO/XP/I2.Lock=false

8.10.7. Muting the Audio Port 1.

INFO: Suspends the connection of the chosen port (no signal is forwarded).

Command and Response

- SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>
- pw·/V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	**I1-I4**	Audio input port number
		O2, O4	Analog audio output port number
<muted_state>	Muted state	**true**	The port is muted.
		false	The port is unmuted.

Example

- SET /V1/MEDIA/AUDIO/XP/I2.Mute=false
- pw /V1/MEDIA/AUDIO/XP/I2.Mute=false

INFO: All inputs and analog output ports have a mute property in the audio XP (e.g. /V1/MEDIA/AUDIO/XP/I1.Mute). Outputs have a separate mute function within the port node as well:

- /V1/MEDIA/VIDEO/XP/O1.EmbeddedAudioMute
- /V1/MEDIA/VIDEO/XP/O2.EmbeddedAudioMute
- /V1/MEDIA/AUDIO/O4.Mute

8.10.8. Muting the Audio Port 2.

INFO: The volume of the analog audio output is set to low.

Command and Response

- SET·/V1/MEDIA/AUDIO/<audio_out>.Mute=<muted_state>
- pw·/V1/MEDIA/AUDIO/<audio_out>.Mute=<muted_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio port	**O2, O4**	Audio output port number
<muted_state>	Muted state	**true**	The port is muted.
		false	The port is unmuted.

Example

- SET /V1/MEDIA/AUDIO/O4.Mute=true
- pw /V1/MEDIA/AUDIO/O4.Mute=true

8.10.9. Querying the Audio Signal Presence

Command and Response

- GET·/V1/MEDIA/AUDIO/<audio_port>.SignalPresent
- pr·/V1/MEDIA/AUDIO/<audio_port>.SignalPresent=<signal_state>

Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio port	**I1-I4**	Audio input port number
		O2, O4	Analog audio output port number
<signal_state>	Signal presence	**true**	The audio signal is present.
		false	No audio signal is present.

Example

- GET /V1/MEDIA/AUDIO/I1.SignalPresent
- pr /V1/MEDIA/AUDIO/I1.SignalPresent=false

8.10.10. Analog Audio Output Volume (dB) Setting

Command and Response *#analogaudio #volume*

- SET·/V1/MEDIA/AUDIO/<audio_out>.VolumedB=<level>
- pw·/V1/MEDIA/AUDIO/<audio_out>.VolumedB=<level>

Parameter

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<level>	Sets the output volume (attenuation) in step of -0.375 dB.	**-95.62 dB-0 dB**	The value is rounded up if necessary, to match with the step value.

Example

- SET /V1/MEDIA/AUDIO/O4.VolumedB=-15
- pw /V1/MEDIA/AUDIO/O4.VolumedB=-15.00

8.10.11. Analog Audio Output Volume Percent Setting

Command and Response

- SET·/V1/MEDIA/AUDIO/<audio_out>.VolumePercent=<percent>
- pw·/V1/MEDIA/AUDIO/<audio_out>.VolumePercent=<percent>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<percent>	Sets the output volume (attenuation) in step of 1%.	**100%-0%**	The value is rounded up if necessary, to match with the step value.

Example

- SET /V1/MEDIA/AUDIO/O5.VolumePercent=50
- pw /V1/MEDIA/AUDIO/O5.VolumePercent=50.00

8.10.12. Setting the Balance

Command and Response *#balance*

- SET·/V1/MEDIA/AUDIO/<audio_out>.Balance=<level>
- pw·/V1/MEDIA/AUDIO/<audio_out>.Balance=<level>

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<level>	Sets the output volume (attenuation) in step of 1.	**-100-100**	-100 means left balance, 100 means right balance, center is 0 (default).

Example

- SET /V1/MEDIA/AUDIO/O4.Balance=0
- pw /V1/MEDIA/AUDIO/O4.Balance=0

8.10.13. Analog Audio Output Level Setting by Steps (dB)

Command and Response *#analogaudio #volume*

- CALL·/V1/MEDIA/AUDIO/<audio_out>:stepVolumedB(<step>)
- m0·/V1/MEDIA/AUDIO/<audio_out>:stepVolumedB=

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<step>	The volume is increased or decreased with the given value in dB.		Increase the dB with +<number> Decrease the dB with -<number>

Example

- CALL /V1/MEDIA/AUDIO/O4:stepVolumedB(-1)
- m0 /V1/MEDIA/AUDIO/O4:stepVolumedB=

The volume is decreased with 1 dB, the current volume is -1.95 dB, which means 77.84% in percent.

8.10.14. Analog Audio Output Level Setting by Steps in Percent

Command and Response

- CALL·/V1/MEDIA/AUDIO/<audio_out>:stepVolumePercent(<step>)
- m0·/V1/MEDIA/AUDIO/<audio_out>:stepVolumePercent=

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<step>	The volume is increased or decreased with the given value in percent.	**0-100**	

Example

- CALL /V1/MEDIA/AUDIO/O4:stepVolumePercent(5)
- m0 /V1/MEDIA/AUDIO/O4:stepVolumePercent=

The volume is increased with 5%, the current volume is -1.52 dB, which means 82.84% in percent.

8.10.15. Analog Audio Output Balance Setting by Steps

Command and Response

- CALL·/V1/MEDIA/AUDIO/<audio_out>:stepBalance(<step>)
- m0·/V1/MEDIA/AUDIO/<audio_out>:stepBalance=

Parameters

Parameter	Parameter description	Values	Value description
<audio_out>	Analog audio output port	**O2, O4**	Analog audio output port number
<step>	The volume is increased or decreased with the given value.		Increase the volume with <number> Decrease the volume with -<number>

Example

- CALL /V1/MEDIA/AUDIO/O4:stepBalance(-5)
- mO /V1/MEDIA/AUDIO/O4:stepBalance=

8.11. USB Port Settings

INFO: USB port numbers may differ depending on the model. For more information, see the Port Numbering section.

8.11.1. Switching the USB Input

Command and Response *#usb*

- CALL·/V1/MEDIA/USB/XP:switch(<host>:H1)
- mO·/V1/MEDIA/USB/XP:switch=

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**0**	disconnected
		U1-U4	USB-C and USB-B port number

Example

- CALL /V1/MEDIA/USB/XP:switch(U1:H1)
- mO /V1/MEDIA/USB/XP:switch=

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

8.11.2. Querying the Connected Source

Command and Response

- GET·/V1/MEDIA/USB/XP/H1.ConnectedSource
- pw·/V1/MEDIA/USB/XP/H1.ConnectedSource=<host>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number

Example

- GET /V1/MEDIA/USB/XP/H1.ConnectedSource
- pw /V1/MEDIA/USB/XP/H1.ConnectedSource=U4

8.11.3. Querying the Connected Destinations

Command and Response *#autoselect*

- GET·/V1/MEDIA/USB/XP/<host>.ConnectedDestinations
- pr·/V1/MEDIA/USB/XP/<host>.ConnectedDestinations=H1

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number

Example

- GET /V1/MEDIA/USB/XP/U3.ConnectedDestinations
- pr /V1/MEDIA/USB/XP/U3.ConnectedDestinations=H1

8.11.4. Locking the USB Port

Command and Response *#lock*

- SET·/V1/MEDIA/USB/XP/<usb_port>.Lock=<locked_state>
- pw·/V1/MEDIA/USB/XP/<usb_port>.Lock=<locked_state>

Parameters

Parameter	Parameter description	Values	Value description
<usb_port>	USB Port	**U1-U4**	USB-C and USB-B port number
		H1	USB hub
<locked_state>	Locked state	**true**	The port is locked
		false	The port is unlocked

Example

- SET /V1/MEDIA/USB/XP/U2.Lock=false
- pw /V1/MEDIA/USB/XP/U2.Lock=false

8.11.5. Setting the 5V Sending to the USB Peripherals

The 5V power towards the USB A-type ports can be enabled or disabled as follows:

Command and Response

- SET·/V1/MEDIA/USB/H1/<device_id>.Power5VMode=<device_pwr>
- pw·/V1/MEDIA/USB/H1/<device_id>.Power5VMode=<device_pwr>

Parameters

Parameter	Parameter description	Values	Value description
<device_id>	USB A-type and USB C-type port	**D1-D4**	Downstream port number
<device_pwr>		**Auto**	The host controls the 5V power sending.
		Off	Disable 5V power on USB downstream port

Example

- SET /V1/MEDIA/USB/H1/D1.Power5VMode=Auto
- pw /V1/MEDIA/USB/H1/D1.Power5VMode=Auto

8.11.6. Setting the USB Autoselect Policy

Command and Response

- SET·/V1/MEDIA/USB/AUTOSELECT/H1.Policy=<op_mode>
- pw·/V1/MEDIA/USB/AUTOSELECT/H1.Policy=<op_mode>

Parameters

Parameter	Parameter description	Values	Value description
<op_mode>	Operation mode	**Off**	The autoselect function is disabled.
		Last Detect	It is always the last attached input that is switched to the output automatically.
		First Detect	The first active USB input is selected.
		Follow video	Follows the video crosspoint state automatically.

Example

- SET /V1/MEDIA/USB/AUTOSELECT/H1.Policy=Follow video
- pw /V1/MEDIA/USB/AUTOSELECT/H1.Policy=Follow video

8.11.7. Setting the Followed Video Port to Autoselect

Command and Response

- SET·/V1/MEDIA/USB/AUTOSELECT/H1.VideoFollowPort=<out>
- pw·/V1/MEDIA/USB/AUTOSELECT/H1.VideoFollowPort=<out>

Example

- SET /V1/MEDIA/USB/AUTOSELECT/H1.VideoFollowPort=O1
- pw /V1/MEDIA/USB/AUTOSELECT/H1.VideoFollowPort=O1

8.11.8. Changing the Autoselect Included USB Ports

Command and Response

- SET·/V1/MEDIA/USB/AUTOSELECT/H1/<host>.Included=<state>
- pw·/V1/MEDIA/USB/AUTOSELECT/H1/<host>.Included=<state>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number
<state>	The chosen input is ignored in the autoselect process or not.	**true**	The port is included in autoselect.
		false	The autoselect function ignores that port.

Example

- SET /V1/MEDIA/USB/AUTOSELECT/H1/U1.Included=true
- pw /V1/MEDIA/USB/AUTOSELECT/H1/U1.Included=true

8.11.9. Changing the USB Port Priority

Command and Response

- SET·/V1/MEDIA/USB/AUTOSELECT/H1/<host>.Priority=<prio_num>
- pw·/V1/MEDIA/USB/AUTOSELECT/H1/<host>.Priority=<prio_num>

Parameters

Parameter	Parameter description	Values	Value description
<host>	USB Host	**U1-U4**	USB-C and USB-B port number
<prio_num>	Priority number from 1 to 100, equal numbers are allowed.	**1-100**	1: the highest priority 100: the lowest priority

Example

- SET /V1/MEDIA/USB/AUTOSELECT/H1/U1.Priority=51
- pw /V1/MEDIA/USB/AUTOSELECT/H1/U1.Priority=51

8.11.10. Setting the Icron Role Automation Mode

By default, the Icron role is changed automatically according to the USB crosspoint state in the devices. With this command, the operation of this functionality can be controlled.

Command and Response

- SET·/EXPERIMENTAL/MEDIA/USB.IcronRoleAutomationMode=<mode>
- pw·/EXPERIMENTAL/MEDIA/USB.IcronRoleAutomationMode=<mode>

Parameters

Parameter	Parameter description	Values	Value description
<mode>	Icron role automation mode	**On**	The Icron role is automatically set based on the USB crosspoint state. If a **local USB host** connector is selected, it is set to **LEX**. If the Icron is selected as **host to the device HUB**, it is set to **REX**.
		Auto	The Icron role depends on the connected RX. If **UCX-3x3-TPX-RX20** is connected, operation aligns to the **On** setting. If a **HDMI-UCX-TPX-RX107** is connected, operation aligns to the **Off** setting.
		Off	Icron role is not set automatically. It must be set manually.

Example

- SET /EXPERIMENTAL/MEDIA/USB.IcronRoleAutomationMode=Off
- pw /EXPERIMENTAL/MEDIA/USB:IcronRoleAutomationMode=Off

8.12. USB Port Settings - USB-C Related Commands

INFO: USB-C port numbers may differ depending on the model. For more information, see the Port Numbering section.

8.12.1. Setting the USB-C Power

Command and Response *#power*

- SET·/V1/MEDIA/USB/<port_number>/POWER.Reserved=<power>
- pw·/V1/MEDIA/USB/<port_number>/POWER.PowerLimit=<power>

Parameters

Parameter	Parameter description	Values	Value description
<power>	Power output for the USB-C ports	**15 W**	15W power minimum*
		30 W	30W power minimum*
		60 W	60W power minimum*
		100 W	100W power minimum*
<port_number>	USB-C Port number	**U1-U2**	USB-C port number

* In case of **Static** Allocation Mode, this is the maximum amount of output power, if the Allocation mode is **Auto**, it is the minimum amount of output power.

Example

- SET /V1/MEDIA/USB/U1/POWER.Reserved=30 W
- pw /V1/MEDIA/USB/U1/POWER.Reserved=30 W

8.12.2. Setting the Power Allocation Mode

Command and Response

- GET·/V1/MEDIA/USB/<port_number>/POWER.AllocationMode=<allocation_mode>
- pr·/V1/MEDIA/USB/<port_number>/POWER.AllocationMode=<allocation_mode>

Parameters

Parameter	Parameter description	Value	Value description
<allocation_mode>	Power Allocation Mode	**Static**	The power set on the port is being output.
		Auto	The power set on the port is the minimum output, which can increase automatically depending on the amount of unallocated power.
<port_number>	USB-C Port number	**U1-U2**	USB-C port number

Example

- GET /V1/MEDIA/USB/U1/POWER.AllocationMode=Static
- pr /V1/MEDIA/USB/U1/POWER.AllocationMode=Static

8.12.3. Setting the Displayport Alternate Mode Policy

Command and Response

- SET·/V1/MEDIA/USB/<usb_port>.DpAltModePolicy=<dp_policy>
- pw·/V1/MEDIA/USB/<usb_port>.DpAltModePolicy=<dp_policy>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<dp_policy>	The preferred video or USB data transmission	**Auto**	**Auto:** Taurus offers both operation modes described below. A BYOD device can choose between the two. 4 lane DP Alt mode operation (4K@60) is not guaranteed.
		Force C	It means 4 Lane Video setting.
		Force D	It means 2 Lane Video setting. It is used when 4 Lane mode is not supported.

Example

- SET /V1/MEDIA/USB/U2.DpAltModePolicy=Auto
- pw /V1/MEDIA/USB/U2.DpAltModePolicy=Auto

ATTENTION: Changing DpAltModePolicy is recommended before connecting a computer to the input.

8.12.4. Querying the Host Alternate Mode Support

Command and Response

- GET·/V1/MEDIA/USB/<usb-c_port>.HostSupportsDpAltMode
- pr·/V1/MEDIA/USB/<usb-c_port>.HostSupportsDpAltMode=<altmode_support>

Parameters

Parameter	Parameter description	Value	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<altmode_support>		**False**	The host does not support the alternate mode.
		True	The host supports the alternate mode.

Example

- GET /V1/MEDIA/USB/U1.HostSupportsDpAltMode
- pr /V1/MEDIA/USB/U1.HostSupportsDpAltMode=true

8.12.5. Querying the Status of the Alternate Mode

Command and Response *#dpaltmode #alternatemode #displayportalternatemode*

- GET·/V1/MEDIA/USB/<usb-c_port>.ActiveAltMode
- pr·/V1/MEDIA/USB/<usb-c_port>.ActiveAltMode=<altmode_state>

Parameters

Parameter	Parameter description	Value	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<altmode_state>		**N/A**	The host is not connected
		None	DP Alt mode is not active
		DP	DP Alt mode is active.

Example

- GET /V1/MEDIA/USB/U2.ActiveAltMode
- pr /V1/MEDIA/USB/U2.ActiveAltMode=DP

8.12.6. Querying the Port Data Role

Command and Response

- GET·/V1/MEDIA/USB/<usb_port>.ActivePortDataRole
- pr·/V1/MEDIA/USB/<usb_port>.ActivePortDataRole=<data_role>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<data_role>		**N/A**	No information about the data role.
		DFP	Downstream Facing Port (usually a Host / HUB ports) The port data role is configured as USB Host. This is for building up the connection (USB data transmission operates after the data role swap)
		UFP	Upstream Facing Port (usually a device)

Example

- GET /V1/MEDIA/USB/U2.ActivePortDataRole
- pr /V1/MEDIA/USB/U2.ActivePortDataRole=UFP

8.12.7. Querying the Port Power Role

Command and Response *#power*

- GET·/V1/MEDIA/USB/<usb_port>.ActivePortPowerRole
- pr·/V1/MEDIA/USB/<usb_port>.ActivePortPowerRole=<power_role>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<power_role>		**N/A**	No information about the power role.
		Sink	The port is configured as a sink.
		Source	The port is configured as a source.

Example

- GET /V1/MEDIA/USB/U2.ActivePortPowerRole
- pr /V1/MEDIA/USB/U2.ActivePortPowerRole=Source

8.12.8. Setting the Port Power Role

Command and Response

- SET·/V1/MEDIA/USB/<usb-c_port>.PortPowerRoleSetting=<power_role>
- pw·/V1/MEDIA/USB/<usb_port>.PortPowerRoleSetting=<power_role>

Parameters

Parameter	Parameter description	Values	Value description
<usb-c_port>	USB-C port number	**U1-U2**	USB-C port number
<power_role>		**Sink**	The port is configured as a sink.
		Source	The port is configured as a source.
		Dual Role	The port is configured to be in Dual Power Role mode.

Example

- SET /V1/MEDIA/USB/U1.PortPowerRoleSetting=Dual Role
- pw /V1/MEDIA/USB/U1.PortPowerRoleSetting=Dual Role

8.13. EDID Management

8.13.1. Querying the Emulated EDIDs

Command and Response *#edid*

- GET·/V1/EDID.EdidStatus
- pr·/V1/EDID.EdidStatus=<source>:E1;<source>:E2; <source>:E3;<source>:E4

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs

Example

- GET /V1/EDID.EdidStatus
- pr /V1/EDID.EdidStatus=F89:E1;D1:E2;D1:E3;D1:E4

Emulated EDID memory for input port is listed with the EDID number that is currently emulated on the input.

8.13.2. Querying the Validity of a Dynamic EDID

Command and Response

- GET·/V1/EDID/D/<dynamic_edid>.Validity
- pr·/V1/EDID/D/<dynamic_edid>.Validity=<validity>

Parameters

Parameter	Parameter description	Values	Value description
<dynamic_edid>	The Dynamic EDID to be queried	**D1-D3**	Dynamic EDIDs
<validity>	Validity of a Dynamic EDID	**true**	The Dynamic EDID is valid.
		false	The Dynamic EDID is invalid.

Example

- GET /V1/EDID/D/D1.Validity
- pr /V1/EDID/D/D1.Validity=true

The 'Validity' property is true, valid EDID is stored in D1 memory place.

8.13.3. Querying the Preferred Resolution of a User EDID

Command and Response

- GET·/V1/EDID/U/<user_edid>.PreferredResolution
- pr·/V1/EDID/U/<user_edid>.PreferredResolution=<preferred_resolution>

Example

- GET /V1/EDID/U/U2.PreferredResolution
- pr /V1/EDID/U/U2.PreferredResolution=1920x1080p60.00Hz

INFO: Use the **Manufacturer** and **MonitorName** properties to query further information.

8.13.4. Emulating an EDID to an Input Port

Command and Response

- CALL·/V1/EDID:switch(<source>:<destination>)
- mO·/V1/EDID:switch

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs
<destination>	The emulated EDID memory of the desired input port	**E1-E4**	Emulated EDIDs

Example

- CALL /V1/EDID:switch(F49:E2)
- mO /V1/EDID:switch

8.13.5. Emulating an EDID to All Input Ports

Command and Response

- CALL·/V1/EDID:switchAll(<source>)
- mO·/V1/EDID:switchAll

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs

Example

- CALL /V1/EDID:switchAll(F47)
- mO /V1/EDID:switchAll

8.13.6. Copying an EDID to User Memory

Command and Response

- CALL·/V1/EDID:copy(<source>:<destination>)
- mO·/V1/EDID:copy

Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	**F1-F159**	Factory EDIDs
		U1-U100	User EDIDs
		D1-D3	Dynamic EDIDs
<destination>	The User EDID spot you wish to copy the EDID to	**U1-U100**	User EDIDs

Example

- CALL /V1/EDID:copy(F1:U2)
- mO /V1/EDID:copy

8.13.7. Deleting an EDID from User Memory

Command and Response

- CALL·/V1/EDID:delete(<user_edid>)
- mO·/V1/EDID:delete

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The User EDID spot you wish to delete an EDID from	**U1-U100**	User EDIDs

Example

- CALL /V1/EDID:delete(U2)
- mO /V1/EDID:delete

8.13.8. Resetting the Emulated EDIDs

Command and Response

- CALL·/V1/EDID:reset()
- mO·/V1/EDID:reset

Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	**E1-E4**	Emulated EDIDs

Example

- CALL /V1/EDID:reset()
- mO /V1/EDID:reset

Calling this method switches all emulated EDIDs to a factory default one. See the table in the Factory EDID List section.

8.14. Ethernet Port Configuration

8.14.1. Setting the DHCP State

> **ATTENTION:** When you change a network property, the new value is stored, but the **applySettings** method must always be called to apply the new settings. When two or more network parameters are changed, the **applySettings** method is enough to be called once as a final step; it will reboot the device.

Command and Response *#dhcp #network #ipaddress*

- SET·/V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp_status>
- pw·/V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp_status>

Parameters

Parameter	Parameter description	Value	Value description
<dhcp_status>		**False**	The IP address setting is static.
		True	The IP address setting is DHCP.

Example

- SET /V1/MANAGEMENT/NETWORK.DhcpEnabled=true
- pw /V1/MANAGEMENT/NETWORK.DhcpEnabled=true
- CALL /V1/MANAGEMENT/NETWORK:applySettings()
- mO /V1/MANAGEMENT/NETWORK:applySettings

INFO: The **applySettings** method will save and apply the new value, and it will reboot the device.

INFO: The current setting can be queried by using the GET Command.

8.14.2. Changing the IP Address (Static)

Command and Response

- SET·/V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>
- pw·/V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>

Example

- SET /V1/MANAGEMENT/NETWORK.StaticIpAddress=192.168.0.85
- pw /V1/MANAGEMENT/NETWORK.StaticIpAddress=192.168.0.85
- CALL /V1/MANAGEMENT/NETWORK:applySettings()
- mO /V1/MANAGEMENT/NETWORK:applySettings

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the GET Command.

8.14.3. Changing the Subnet Mask (Static)

Command and Response *#ipaddress*

- SET·/V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>
- pw·/V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>

Example

- SET /V1/MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0
- pw /V1/MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0
- CALL /V1/MANAGEMENT/NETWORK:applySettings()
- mO /V1/MANAGEMENT/NETWORK:applySettings

INFO: The **applySettings** method will save and apply the new value and it will reboot the device.

INFO: The current setting can be queried by using the GET Command.

8.14.4. Changing the Gateway Address (Static)

Command and Response

- SET·/V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>
- pw·/V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>

Example

- SET /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5
- pw /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5
- CALL /V1/MANAGEMENT/NETWORK:applySettings()
- mO /V1/MANAGEMENT/NETWORK:applySettings

INFO: The **applySettings** method will save and apply the new value, and it will reboot the device.

INFO: The current setting can be queried by using the GET Command.

8.14.5. Applying the Network Settings

Command and Response

- CALL·/V1/MANAGEMENT/NETWORK:applySettings()
- m0·/V1/MANAGEMENT/NETWORK:applySettings

Example

- CALL /V1/MANAGEMENT/NETWORK:applySettings()
- m0 /V1/MANAGEMENT/NETWORK:applySettings

All network settings that were changed are applied and network interface restarts.

8.14.6. Setting the Host name

The host name is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding the device in the Device Discovery window of the LDC, see more details in the Add New Favorite Device section. If the IP address of the device is changing, the host name can be used as a fixed property.

Restarting HTTP(S) Services is required after the host name changed. A new certficate is generated after modifying the host name.

Command and Response

- SET·/V1/MANAGEMENT/NETWORK.HostName=<unique_name>
- pw·/V1/MANAGEMENT/NETWORK.HostName=<unique_name>

Parameters

Parameter	Value Description
<unique_name>	The name can be 1-64 character(s) long and the following are allowed when naming: the elements of the English alphabet (a-z, A-Z) and numbers (0-9); hyphen (-) and dot (.) are also accepted, except as a last character.

Example

- SET /V1/MANAGEMENT/NETWORK.HostName=room-switcher
- pw /V1/MANAGEMENT/NETWORK.HostName=room-switcher

8.15. Remote Power

8.15.1. Enabling/Disabling Remote Power

DIFFERENCE: This setting is only available in case the receiver is HDMI-UCX-TPX-RX107.

Allows the user to toggle PoE on the TPX output port.

Command and Response

- SET·/V1/LINK/TX/POE/POWER.Reserved=<output_power>
- pw·/V1/LINK/TX/POE/POWER.Reserved=<output_power>

Parameters

Parameter	Parameter description	Values	Value description
<output_power>	Reserved power for the TPX port	**30 W**	Remote power is enabled
		0 W	Remote power is disabled

Example

- SET /V1/LINK/TX/POE/POWER.Reserved=30 W
- pw /V1/LINK/TX/POE/POWER.Reserved=30 W

8.16. Network Security

8.16.1. Enabling/Disabling the Ethernet Port

Command and Response

- SET·/V1/MEDIA/ETHERNET/<ethernet_port>.Enabled=<status>
- pw·/V1/MEDIA/ETHERNET/<ethernet_port>.Enabled=<status>

Parameters

Parameter	Parameter description	Values	Value description
<ethernet_port>	Ethernet port number	**P1-P7***	
<status>		**true**	The port is enabled.
		false	The port is disabled.

* UCX-2x1-TPX-TX30 model only has four Ethernet ports, plus it can control the two Ethernet ports of the HDMI-UCX-TPX-RX107 (P1-P6).

Example

- SET /V1/MEDIA/ETHERNET/P4.Enabled=true
- pw /V1/MEDIA/ETHERNET/P4.Enabled=true

8.16.2. Querying the Service Port Number

Command and Response

- GET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port
- pr·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port=<port_num>

Parameters

Parameter	Parameter description	Parameter values
<port>	Port type	**HTTP** **HTTPS** **LW3** **UART1** **UART2**
<port_num>	Port number	**80** **443** **6107** **8001** **8002**

Example

- GET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Port
- pr /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Port=80

8.16.3. Enabling/Disabling the Service Port

Command and Response *#http #https*

- SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>
- pw·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>

Parameters

Parameter	Parameter description	Values	Value description
<port>	Port type	**HTTP** **HTTPS**	
<status>		**true**	The port is enabled.
		false	The port is disabled.

Example

- SET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Enabled=true
- pw /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Enabled=true

8.16.4. Querying the Username for Authentication

INFO: UCX-TPX series devices deal with one user for authentication and the username (admin) can not be changed.

Command and Response

- GET·/V1/MANAGEMENT/NETWORK/AUTH/USER1.Name
- pr·/V1/MANAGEMENT/NETWORK/AUTH/USER1.Name=admin

Example

- GET /V1/MANAGEMENT/NETWORK/AUTH/USER1.Name
- pr /V1/MANAGEMENT/NETWORK/AUTH/USER1.Name=admin

8.16.5. Enabling/Disabling the Authentication

INFO: Authentication is enabled by default.

Command and Response

- SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- pw·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- CALL·/V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- mO·/V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

Parameters

Parameter	Parameter description	Values	Value description
<port>	Port type	**HTTP** **HTTPS**	
<status>		**true**	The authentication is enabled.
		false	The authentication is disabled.

Example

- SET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.AuthenticationEnabled=true
- pw /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.AuthenticationEnabled=true
- CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- mO /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

INFO: Restart HTTP(S) Services is required after the authentication settings changed.

8.16.6. Restarting the Network Services

Command and Response *#http #https*

- CALL·/V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart()
- mO·/V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart=

Parameters

Parameter	Parameter description	Parameter values
<port>	Port type	**HTTP** **HTTPS**

Example

- CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- mO /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

8.16.7. Setting the VLAN Preset

Command and Response

- SET·/V1/MEDIA/ETHERNET.VlanPreset=<vlan_preset>
- pw·/V1/MEDIA/ETHERNET.VlanPreset=<vlan_preset>

Parameters

Parameter	Parameter description	Values	Value description
<vlan_preset>	The available VLAN presets	**Transparent**	Transparent VLAN is enabled, all Ethernet ports are connected.
		Dedicated	Dedicated VLAN is enabled, there are several different VLAN networks active.
		SeparatedBYOD	Separated BYOD VLAN is enabled, the BYOD network is separated from the corporate and Management networks.

Example

- SET /V1/MEDIA/ETHERNET.VlanPreset=Dedicated
- pw /V1/MEDI/ETHERNET.VlanPreset=Dedicated

8.16.8. Setting the VLAN ID

You can create separate networks by setting different VLAN IDs for the Ethernet ports. You can create any number of setups for limiting access to the corporate or management network or providing separate networks for each user. Default VLAN ID is 1 for all of the ports.

ATTENTION: VLAN ID 1000 is reserved for the Management network.

INFO: VLAN membership can be set through connection to the TX on HDMI-UCX-TPX-RX107 models as well.

Command and Response

- SET·/V1/MEDIA/ETHERNET/<port>.VlanMembership=<vlan_id>
- pw·/V1/MEDIA/ETHERNET/<port>.VlanMembership=<vlan_id>

Example

- SET /V1/MEDIA/ETHERNET/P1.VlanMembership=2
- pw /V1/MEDIA/ETHERNET/P1.VlanMembership=2

Enabling the Management Network on an Ethernet Port

Request and Response

- SET·/V1/MEDIA/ETHERNET/<port>.VlanMembership=1000
- pw·/V1/MEDIA/ETHERNET/<port>.VlanMembership=1000

Example

- SET /V1/MEDIA/ETHERNET/P1.VlanMembership=1000
- pw /V1/MEDIA/ETHERNET/P1.VlanMembership=1000

8.16.9. Setting up the Static IP Address for Management Network

In case ther is no DHCP server on the Corporate/Management network, a static IP address is needed to be set before enabling the function, so that it remains available.

Command and Response

- SET·/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredIpAddress=<static_management_ip>
- pw·/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredIpAddress=<static_management_ip>

Example

- SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredIpAddress=10.10.128.1
- pw /EXPERIMENTAL/MANAGEMENT/NETWORK/INTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredIpAddress=10.10.128.1

8.16.10. Setting Up Gateway for Static IP on Management Network

Command and Response

- SET·/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredGatewayAddress=<static_management_gateway>
- pw·/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredGatewayAddress=<static_management_gateway>

Example

- SET /EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/PIV4/STATIC.ConfiguredGatewayAddress=10.10.128.1
- pw /EXPERIMENTA/MANAGEMENT/NETWORK/INTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredGatewayAddress=10.10.128.1

8.17. Serial Port Configuration

8.17.1. BAUD Rate Setting

Command and Response *#rs-232 #rs232*

- SET·/V1/MEDIA/SERIAL/<serial_port>.Baudrate=<baudrate>
- pw·/V1/MEDIA/SERIAL/<serial_port>.Baudrate=<baudrate>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<baudrate>	Baud rate value	**9600** **19200** **38400** **57600** **115200**

Example

- SET /V1/MEDIA/SERIAL/P1.Baudrate=19200
- pw /V1/MEDIA/SERIAL/P1.Baudrate=19200

8.17.2. Stop Bits Setting

Command and Response *#rs-232 #rs232*

- SET·/V1/MEDIA/SERIAL/<serial_port>.StopBits=<stopbits>
- pw·/V1/MEDIA/SERIAL/<serial_port>.StopBits=<stopbits>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<stopbits>	Stop bit value	**1** **2**

Example

- SET /V1/MEDIA/SERIAL/P1.StopBits=1
- pw /V1/MEDIA/SERIAL/P1.StopBits=1

8.17.3. Querying the Data Bits

Command and Response *#rs-232 #rs232*

- GET·/V1/MEDIA/SERIAL/<serial_port>.DataBits
- pr·/V1/MEDIA/SERIAL/<serial_port>.DataBits=<databits>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<databits>	DataBits value	**8** **9**

Example

- GET /V1/MEDIA/SERIAL/P1.DataBits
- pr /V1/MEDIA/SERIAL/P1.DataBits=8

8.17.4. Parity Setting

Command and Response *#rs-232 #rs232*

- SET·/V1/MEDIA/SERIAL/<serial_port>.Parity=<parity>
- pw·/V1/MEDIA/SERIAL/<serial_port>.Parity=<parity>

Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	**P1-P2**
<parity>	Parity value	**None** **Odd** **Even**

Example

- SET /V1/MEDIA/SERIAL/P1.Parity=None
- pw /V1/MEDIA/SERIAL/P1.Parity=None

8.18. Sending a Message via RS-232

ATTENTION: Serial message sending is implemented only via Lightware REST API. This function is not available with LW3 protocol command. For more details, see Serial Port Messaging.

8.19. GPIO Port Configuration

8.19.1. Querying the Direction of a GPIO Pin

Command and Response *#gpio*

- GET·/V1/MEDIA/GPIO/<port>.Direction
- pw·/V1/MEDIA/GPIO/<port>.Direction(<dir>)

Parameters

Parameter	Parameter description	Value	Value description
<dir>	The direction of the GPIO pin.	**Input**	input
		Output	output

Example

- GET /V1/MEDIA/GPIO/P1.Direction
- pw /V1/MEDIA/GPIO/P1.Direction=Input

8.19.2. Setting the Direction of a GPIO Pin

Command and Response

- SET·/V1/MEDIA/GPIO/<port>.Direction(<dir>)
- pw·/V1/MEDIA/GPIO/<port>.Direction(<dir>)

Parameters

See the previous section.

Example

- SET /V1/MEDIA/GPIO/P1.Direction=Input
- pw /V1/MEDIA/GPIO/P1.Direction=Input

8.19.3. Querying the Output Level of a GPIO Pin

Command and Response

- GET·/V1/MEDIA/GPIO/<port>.Output
- pw·/V1/MEDIA/GPIO/<port>.Output(<value>)

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	**High**	high level
		Low	low level

Example

- GET /V1/MEDIA/GPIO/P1.Output
- pw /V1/MEDIA/GPIO/P1.Output=Low

8.19.4. Setting the Output Level of a GPIO Pin

Command and Response

- SET·/V1/MEDIA/GPIO/<port>.Output(<value>)
- pw·/V1/MEDIA/GPIO/<port>.Output(<value>)

Parameters

See the previous section.

Example

- SET /V1/MEDIA/GPIO/P1.Output=High
- pw /V1/MEDIA/GPIO/P1.Output=High

8.19.5. Setting the Output Level for a Specified Time

Command and Response

- CALL·/V1/MEDIA/GPIO/<port>:interval(<value>;<time>)
- mO·/V1/MEDIA/GPIO/<port>:interval=

Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	**High**	high level
		Low	low level
<time>	Duration of the desired value in seconds.	**1-120**	second(s)

Example

- CALL /V1/MEDIA/GPIO/P1:interval(Low;1)
- mO /V1/MEDIA/GPIO/P1:interval=

8.19.6. Toggling the Level of a GPIO Pin

The output level can be changed from high to low and from low to high by the command below.

Command and Response

- CALL·/V1/MEDIA/GPIO/<port>:toggle()
- mO·/V1/MEDIA/GPIO/<port>:toggle

Example

- CALL /V1/MEDIA/GPIO/P1:toggle()
- mO /V1/MEDIA/GPIO/P1:toggle

8.20. OCS Port Configuration

DIFFERENCE: The UCX-4x3-TPX-TX30 and UCX-2x1-TPX-TX30 transmitters do not have an OCS port, however they can control the OCS port of the HDMI-UCX-TPX-RX107 receiver.

8.20.1. Querying the Input Level of an OCS Pin

Command and Response *#ocs*

- GET·/V1/MEDIA/OCS/P1.InputLevel
- pr·/V1/MEDIA/OCS/P1.InputLevel=<value>

Parameters

Parameter	Parameter description	Value	Value description
<value>	The input value of the OCS pin.	**High**	high level
		Low	low level

Example

- GET /V1/MEDIA/OCS/P1.InputLevel
- pr /V1/MEDIA/OCS/P1.InputLevel=Low

8.20.2. Setting the Sensor Type

Command and Response

- SET·/V1/MEDIA/OCS/P1.SensorType=<sensor_type>
- pw·/V1/MEDIA/OCS/P1.SensorType=<sensor_type>

Parameters

Parameter	Parameter description	Value	Value description
<sensor_type>	It defines whether the low or high input level means the occupancy.	**Active low**	Occupancy status is 'Occupied' when the input level is low.
		Active high	Occupancy status is 'Occupied' when the input level is high (default value).

Example

- SET /V1/MEDIA/OCS/P1.SensorType=Active low
- pw /V1/MEDIA/OCS/P1.SensorType=Active low

8.20.3. Querying the Reported OCS State

Command and Response

- GET·/V1/MEDIA/OCS/P1.State
- pr·/V1/MEDIA/OCS/P1.State=<status>

Parameters

Parameter	Parameter description	Value	Value description
<status>	It reports the occupancy state of the room depending on the sensor type.	**Free**	When the SensorType=Active high and the Inputlevel=Low or when SensorType=Active low and Inputlevel=High
		Occupied	When the SensorType=Active high and the Inputlevel=High or when SensorType=Active low and Inputlevel=Low

Example

- GET /V1/MEDIA/OCS/P1.State
- pr /V1/MEDIA/OCS/P1.State=Free

8.21. LW3 Commands - Quick Summary

System Commands

Setting the Device Label
- SET·/V1/MANAGEMENT/LABEL.DeviceLabel=<custom_name>

Resetting the Device
- CALL·/V1/SYS/DEVICES/<TX/RX>:restart()

Restoring the Factory Default Settings
- CALL·/V1/SYS/DEVICES/<TX/RX>:factoryDefaults()

Querying the Firmware Package Version
- GET·/V1/MANAGEMENT/UID/PACKAGE.Version

Control Lock
- SET·/V1/MANAGEMENT/UI.ControlLock=<lock_status>

Setting the Current Time
- CALL·/V1/MANAGEMENT/DATETIME:setTime(<current_time>)

Identifying the Device
- CALL·/V1/MANAGEMENT/UI:identifyMe()

Toggling the Dark Mode Setting
- SET·/V1/MANAGEMENT/UI/DARKMODE.Enable=<mode_state>

Setting the Delay of the Dark Mode Setting
- SET·/V1/MANAGEMENT/UI/DARKMODE.Delay=<delay_time>

Enabling Remote System Logging
- SET·/V1/MANAGEMENT/LOG/REMOTE.Enabled=<status>

Setting the Remote Server Address
- SET·/V1/MANAGEMENT/LOG/REMOTE.ServerAddress=<server_address>

Setting the Protocol for the Remote System Logging
- SET·/V1/MANAGEMENT/LOG/REMOTE.Protocol=<protocol>

Setting the Format of the Remote System Logging
- SET·/V1/MANAGEMENT/LOG/REMOTE.SyslogFormat=<format>

Setting the Port for Remote System Logging
- SET·/V1/MANAGEMENT/LOG/REMOTE.PortNumber=<port_number>

Enabling/Disabling SNMP Monitoring
- SET·/V1/MANAGEMENT/NETWORK/SERVICES/SNMP.Enabled=<status>

Setting the Device Location
- SET·/V1/MANAGEMENT/NETWORK/SERVICES/SNMP.SysLocation=<location>

Video Port Settings - General

Switching Video Input
- CALL·/V1/MEDIA/VIDEO/XP:switch(<in>:<out>)

Switching an Input to All Outputs
- CALL·/V1/MEDIA/VIDEO/XP:switchAll(<input>)

Locking the Video Port
- SET·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked_state>

Muting the Video Port
- SET·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted_state>

Setting the Autoselect Policy
- SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>.Policy=<autoselect_mode>

Changing the Autoselect Included Input Ports
- SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Included=<state>

Changing the Input Port Priority
- SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Priority=<prio_num>

Querying the Connected Source
- GET·/V1/MEDIA/VIDEO/XP/<out>.ConnectedSource

Querying the Input Switching Capability
- GET·/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE.<in>

Querying the Connected Destinations
- GET·/V1/MEDIA/VIDEO/XP/<n>.ConnectedDestinations

Querying the Video Signal Presence
- GET·/V1/MEDIA/VIDEO/<port>.SignalPresent

HDCP Setting (Input Port)
- SET·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed_hdcp>

Setting the HDCP Mode
- SET·/V1/MEDIA/VIDEO/<out>.HdcpMode=<hdcp_mode>

Setting the Output Signal Type
- SET·/V1/MEDIA/VIDEO/<out>.OutputSignalType=<signal_type>

Querying the Embedded Audio

- GET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent

Muting the Embedded Audio

- SET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute_state>

Setting the Output 5V Mode

- SET·/V1/MEDIA/VIDEO/<out>.Output5VMode=<5V_pwr>

Querying the HDCP Capability (Output Port)

- GET·/V1/MEDIA/VIDEO/<out>/HDCP/SinkMaxHdcpVersion=<hdcp_ver>

Querying the HDCP Setting (Output Port)

- GET·/V1/MEDIA/VIDEO/<out>/HDCP.AllowedHdcpVersion=<allowed_hdcp>

Welcome Screen Settings

Displaying the Welcome Screen Image

- SET·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.ImageEnabled=<image_state>

Displaying the Welcome Screen Text

- SET·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.MessageEnabled=<text_state>

Setting the Welcome Screen Text

- SET·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN.MessageText=<text>

Resetting the Welcome Screen Image

- CALL·/V1/MEDIA/VIDEO/<w_scr>/WELCOMESCREEN:resetImage()

Video Port Settings - USB-C Related Commands

Restarting the Link Training

- CALL·/V1/MEDIA/VIDEO/<in>/DP:restartLinkTraining()

CEC Command Sending

Simple CEC Code Sending

- CALL·/V1/MEDIA/VIDEO/<out>/CEC:send(<command>)

Remote Control Code Sending

- CALL·/V1/MEDIA/VIDEO/<port>/CEC:sendUserControlClick(<command>)

Audio Port Settings

Switching the Audio Input

- CALL·/V1/MEDIA/AUDIO/XP:switch(<audio_in>:<audio_out>)

Querying the Connected Source

- GET·/V1/MEDIA/AUDIO/XP/<audio_out>.ConnectedSource

Querying the Connected Destinations

- GET·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations

Setting the Autoselect Operation Mode

- SET·/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>.Policy=<op_mode>

Setting the Followed Video Port to Autoselect

- SET·/V1/MEDIA/AUDIO/AUTOSELECT/<audio_out>.VideoFollowPort=<out>

Locking the Audio Port

- SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Lock=<locked_state>

Muting the Audio Port 1.

- SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>

Muting the Audio Port 2.

- SET·/V1/MEDIA/AUDIO/<audio_out>.Mute=<muted_state>

Querying the Audio Signal Presence

- GET·/V1/MEDIA/AUDIO/<audio_port>.SignalPresent

Analog Audio Output Volume (dB) Setting

- SET·/V1/MEDIA/AUDIO/<audio_out>.VolumedB=<level>

Analog Audio Output Volume Percent Setting

- SET·/V1/MEDIA/AUDIO/<audio_out>.VolumePercent=<percent>

Setting the Balance

- SET·/V1/MEDIA/AUDIO/<audio_out>.Balance=<level>

Analog Audio Output Level Setting by Steps (dB)

- CALL·/V1/MEDIA/AUDIO/<audio_out>:stepVolumedB(<step>)

Analog Audio Output Level Setting by Steps in Percent

- CALL·/V1/MEDIA/AUDIO/<audio_out>:stepVolumePercent(<step>)

Analog Audio Output Balance Setting by Steps

- CALL·/V1/MEDIA/AUDIO/<audio_out>:stepBalance(<step>)

USB Port Settings

Switching the USB Input

- CALL·/V1/MEDIA/USB/XP:switch(<host>:H1)

Querying the Connected Source

- GET·/V1/MEDIA/USB/XP/H1.ConnectedSource

Querying the Connected Destinations

- GET·/V1/MEDIA/USB/XP/<host>.ConnectedDestinations

Locking the USB Port

- SET·/V1/MEDIA/USB/XP/<usb_port>.Lock=<locked_state>

Setting the 5V Sending to the USB Peripherals

- SET·/V1/MEDIA/USB/H1/<device_id>.Power5VMode=<device_pwr>

Setting the USB Autoselect Policy

- SET·/V1/MEDIA/USB/AUTOSELECT/H1.Policy=<op_mode>

Setting the Followed Video Port to Autoselect

- SET·/V1/MEDIA/USB/AUTOSELECT/H1.VideoFollowPort=<out>

Changing the Autoselect Included USB Ports

- SET·/V1/MEDIA/USB/AUTOSELECT/H1/<host>.Included=<state>

Changing the USB Port Priority

- SET·/V1/MEDIA/USB/AUTOSELECT/H1/<host>.Priority=<prio_num>

Setting the Icron Role Automation Mode

- SET·/EXPERIMENTAL/MEDIA/USB.IcronRoleAutomationMode=<mode>

USB Port Settings - USB-C Related Commands

Setting the USB-C Power

- SET·/V1/MEDIA/USB/<port_number>/POWER.Reserved=<power>

Setting the Power Allocation Mode

- GET·/V1/MEDIA/USB/<port_number>/POWER.AllocationMode=<allocation_mode>

Setting the Displayport Alternate Mode Policy

- SET·/V1/MEDIA/USB/<usb_port>.DpAltModePolicy=<dp_policy>

Querying the Host Alternate Mode Support

- GET·/V1/MEDIA/USB/<usb-c_port>.HostSupportsDpAltMode

Querying the Status of the Alternate Mode

- GET·/V1/MEDIA/USB/<usb-c_port>.ActiveAltMode

Querying the Port Data Role

- GET·/V1/MEDIA/USB/<usb_port>.ActivePortDataRole

Querying the Port Power Role

- GET·/V1/MEDIA/USB/<usb_port>.ActivePortPowerRole

Setting the Port Power Role

- SET·/V1/MEDIA/USB/<usb-c_port>.PortPowerRoleSetting=<power_role>

EDID Management

Querying the Emulated EDIDs

- GET·/V1/EDID.EdidStatus

Querying the Validity of a Dynamic EDID

- GET·/V1/EDID/D/<dynamic_edid>.Validity

Querying the Preferred Resolution of a User EDID

- GET·/V1/EDID/U/<user_edid>.PreferredResolution

Emulating an EDID to an Input Port

- CALL·/V1/EDID:switch(<source>:<destination>)

Emulating an EDID to All Input Ports

- CALL·/V1/EDID:switchAll(<source>)

Copying an EDID to User Memory

- CALL·/V1/EDID:copy(<source>:<destination>)

Deleting an EDID from User Memory

- CALL·/V1/EDID:delete(<user_edid>)

Resetting the Emulated EDIDs

- CALL·/V1/EDID:reset()

Ethernet Port Configuration

Setting the DHCP State

- SET·/V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp_status>

Changing the IP Address (Static)

- SET·/V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>

Changing the Subnet Mask (Static)

- SET·/V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>

Changing the Gateway Address (Static)

- SET·/V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>

Applying the Network Settings

- CALL·/V1/MANAGEMENT/NETWORK:applySettings()

Setting the Host name

- SET·/V1/MANAGEMENT/NETWORK.HostName=<unique_name>

Remote Power

Enabling/Disabling Remote Power

- SET·/V1/LINK/TX/POE/POWER.Reserved=<output_power>

Network Security

Enabling/Disabling the Ethernet Port

- SET·/V1/MEDIA/ETHERNET/<ethernet_port>.Enabled=<status>

Querying the Service Port Number

- GET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port

Enabling/Disabling the Service Port

- SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>

Querying the Username for Authentication

- GET·/V1/MANAGEMENT/NETWORK/AUTH/USER1.Name

Enabling/Disabling the Authentication

- SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- CALL·/V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()

Restarting the Network Services

- CALL·/V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart()

Setting the VLAN Preset

- SET·/V1/MEDIA/ETHERNET.VlanPreset=<vlan_preset>

Setting the VLAN ID

- SET·/V1/MEDIA/ETHERNET/<port>.VlanMembership=<vlan_id>
- SET·/V1/MEDIA/ETHERNET/<port>.VlanMembership=1000

Setting up the Static IP Address for Management Network

- SET·/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredIpAddress=<static_management_ip>

Setting Up Gateway for Static IP on Management Network

- SET·/EXPERIMENTAL/MANAGEMENT/NETWORKINTERFACES/MANAGEMENT/IPV4/STATIC.ConfiguredGatewayAddress=<static_management_gateway>

Serial Port Configuration

BAUD Rate Setting

- SET·/V1/MEDIA/SERIAL/<serial_port>.Baudrate=<baudrate>

Stop Bits Setting

- SET·/V1/MEDIA/SERIAL/<serial_port>.StopBits=<stopbits>

Querying the Data Bits

- GET·/V1/MEDIA/SERIAL/<serial_port>.DataBits

Parity Setting

- SET·/V1/MEDIA/SERIAL/<serial_port>.Parity=<parity>

GPIO Port Configuration

Querying the Direction of a GPIO Pin

- GET·/V1/MEDIA/GPIO/<port>.Direction

Setting the Direction of a GPIO Pin

- SET·/V1/MEDIA/GPIO/<port>.Direction(<dir>)

Querying the Output Level of a GPIO Pin

- GET·/V1/MEDIA/GPIO/<port>.Output

Setting the Output Level of a GPIO Pin

- SET·/V1/MEDIA/GPIO/<port>.Output(<value>)

Setting the Output Level for a Specified Time

- CALL·/V1/MEDIA/GPIO/<port>:interval(<value>;<time>)

Toggling the Level of a GPIO Pin

- CALL·/V1/MEDIA/GPIO/<port>:toggle()

OCS Port Configuration

Querying the Input Level of an OCS Pin

- GET·/V1/MEDIA/OCS/P1.InputLevel

Setting the Sensor Type

- SET·/V1/MEDIA/OCS/P1.SensorType=<sensor_type>

Querying the Reported OCS State

- GET·/V1/MEDIA/OCS/P1.State

9

Firmware Update

This chapter is meant to help customers perform firmware updates on our products by giving a few tips on how to start and by explaining the features of the Lightware Device Updater v2 (LDU2) software. The latest software and firmware pack can be downloaded from www.lightware.com.

- Introduction 172
- Preparation 172
- Running the Software 173
- Updating Via GUI 174
- Updating the RX via the TX 176
- Updating the RX via TX Outside of Management Network 177
- Command Line Interface (CLI) 178
- CLI Commands 178
- Updating via REST API 182
- If the Update is not successful 182

ATTENTION: While the firmware is being updated, the normal operation mode is suspended, as the transmitter is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the device and restart the process.

9.1. Introduction

Lightware Device Updater v2 (LDU2) software is the second generation of the LFP-based (Lightware Firmware Package) firmware update process.



LDU2

9.2. Preparation

Most Lightware devices can be controlled over several interfaces (e.g. Ethernet, USB, RS-232). But the firmware can be updated usually over one dedicated interface, which is the Ethernet in most cases.

If you want to update the firmware of one or more devices, you need the following:

- **LFP2 file**,
- **LDU2 software** installed on your PC or Mac.

Both can be downloaded from www.lightware.com.

Optionally, you can download the **release notes** file in HTML format.

9.2.1. About the Firmware Package (LFP2 File)

All the necessary tools and binary files are packed into the LFP2 package file. You only need this file to do the update on your device.

- This allows the use of the same LFP2 package for different devices.
- The package contains all the necessary components, binary, and other files.
- The release notes is included in the LFP2 file, which is displayed in the window where you select the firmware package file in LDU2.

INFO: The size of the LFP2 file is more than 200 MB due to the components of the package. That is not a fault: Taurus runs embedded Linux inside that is necessary for the complex functions and features of the device.

9.2.2. LDU2 Installation

ATTENTION: Minimum system requirement: 2 GB RAM. The minimum display resolution is 1600x900.

INFO: The Windows and the Mac applications have the same look and functionality.

Download the software from www.lightware.com.

Installation in case of Windows OS



Run the installer. If the User Account Control displays a pop-up message, click **Yes**.

Installation Modes

Normal install	Snapshot install
Available for Windows, MacOS and Linux	Available for Windows
The installer can update only this instance	Cannot be updated
One updateable instance may exist for all users	Many different versions can be installed for all users

ATTENTION: Using the default Normal install is highly recommended.

INFO: If you have a previously installed version, you will be prompted to remove the old version before installing the new one.

Installation in case of macOS



Mount the DMG file by double clicking on it, and drag the LDU2 icon over the Applications icon to copy the program into the Applications folder. If you want to copy LDU2 into another location, just drag the icon over the desired folder.

ATTENTION: Please check the firewall settings on the macOS device. LDC needs to be added to the exceptions of the blocked software for the proper operation.

INFO: This type of installer is equal to the **Normal install** of Windows.

Installation in case of Linux



Step 1. Download the **archive file** (tar.gz) from www.lightware.com and unpack it to a temp folder.

Step 2. Run the **install_ldu2.sh** file in the temp folder. The script will install LDU2 into the following folder: HOME/.local/share/lightware/ldu2.

Step 3. The folder above will contain this file: **LightwareDeviceUpdaterV2.sh,** which can be used to start LDU2.


9.3. Running the Software

You have two options:

- **Starting the LDU2** by double-clicking on the shortcut/program file, or
- Double-clicking on an **LFP2 file**.


LDU2 Auto-Update

At startup, the software checks if a newer version is available on the web.

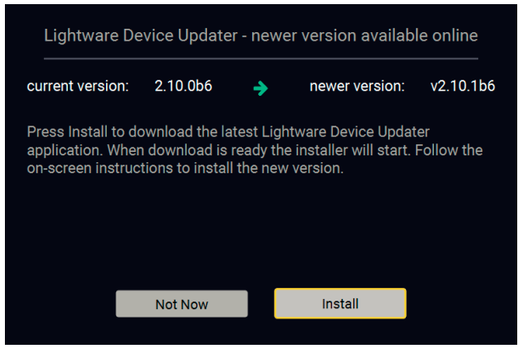

Main Screen

When the software is started by the shortcut, the device discovery screen appears. Press the **Discover devices** button to start finding the Lightware devices:

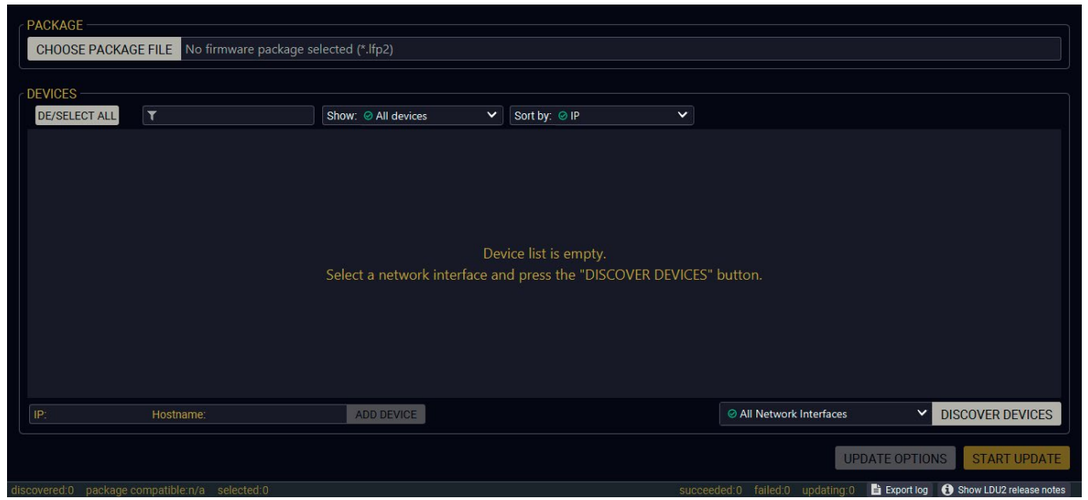

Devices may also be added manually by typing the IP address in the box near the bottom of the screen. From LDU2 version v2.16.1, manual addition of devices can also be done using the hostname.

ATTENTION: If the device cannot be added by the hostname, please use the IP address.

If you start the software by double-clicking on the LFP2 file, the firmware will be loaded. Press the **Search for devices** button; all the devices will be listed that are compatible with the selected firmware pack.

INFO: If you press the **Choose package file** button, the release notes of the LFP2 file will be displayed in the right panel; see the Step 1. Select the Firmware Package. section.

Device List

When the discovery has completed, the devices available on the network are listed in the application.



Legend of the Icons

	IP address editor	The IP address of the device can be changed in the pop-up window.
	Identify me	Clicking on the icon makes the front panel LEDs blink for 10 seconds, which helps identify the device physically.
	Authentication required	The password-protection is enabled. You have to enter the password to perform the firmware update in the pop-up window at the beginning of the update.
	Favorite device	The device has been marked, thus the IP address is stored. When a device is connected with that IP address, the star will be highlighted in that line.
	Further information available	Device is unreachable. Change the IP address using the front panel LCD menu or the IP address editor of the LDU2.

9.4. Updating Via GUI

To update the desired device(s) via the Graphical User Interface, follow these steps.

ATTENTION: The computer that runs LDU2 and the target device (that will be updated) must be in the same subnet. The update cannot be performed from behind a firewall or gateway.


ATTENTION: While the firmware is being updated, the normal operation mode is suspended, as the device is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the unit and restart the process.

Device Cloning – Configuration Backup and Restore feature supports copying all the settings from one device to another, but cloning is only possible between devices using the same firmware. Uploading of the firmware package happens on http (80) and https (443) ports, so one of them has to be enabled.


Step 1. Select the Firmware Package.

Click on the **Choose package file** button and navigate to the location where the LFP2 file was saved. When you click on the name of the package, the preview of the release notes is displayed in the right panel.

CHOOSE PACKAGE FILE

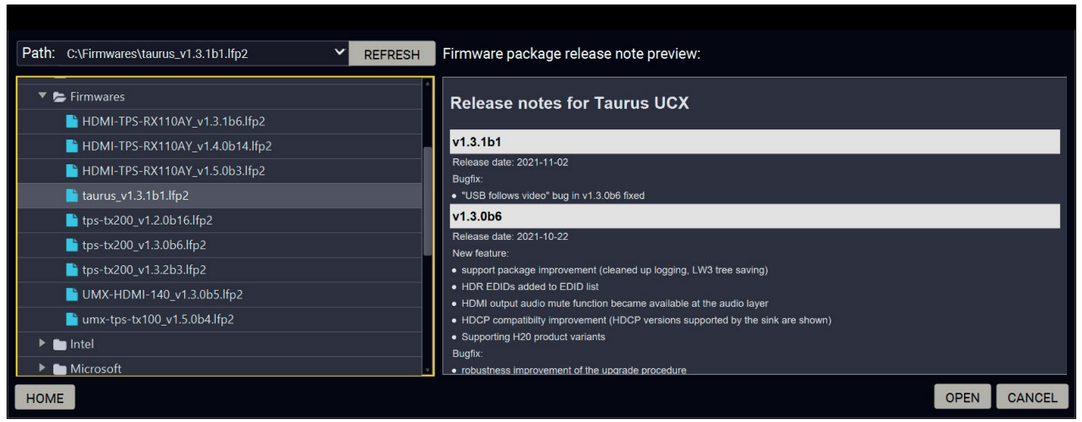

After the package file is loaded, the list is filtered to show the compatible devices only. The current firmware version of the device is highlighted in orange if it is different from the version of the package loaded.

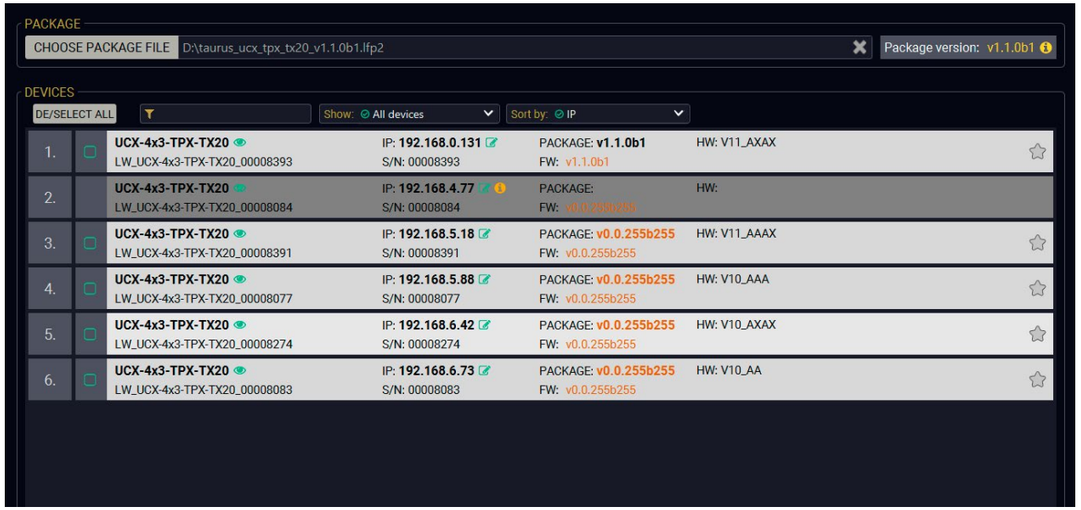

If you start the update by double-clicking on the LFP file, the screen above will be loaded right away.


The Meaning of the Symbols

Show details	The log about the updating process of the device can be displayed in a new window.
Service mode	The device is in bootload mode. Backup and restore cannot be performed in this case.

ATTENTION: When the host is connected to two networks (default and management) with different network cards, UCX-TPX devices advertise themselves over both. However, LDU2 only lists them with the IP address on the network that responds first. Currently it is undeterminable which IP address will be listed.

Step 2. Select the desired devices for updating

Select the devices for updating; the selected line will be highlighted in green.

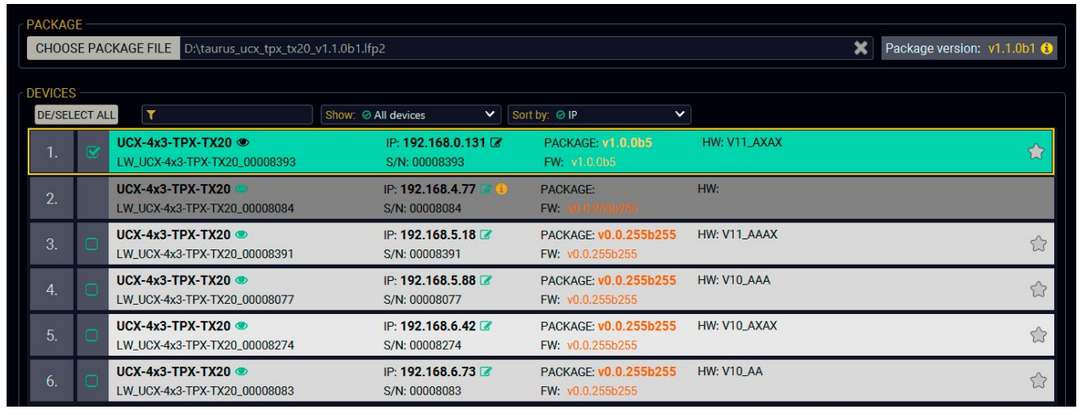

Step 3. Start the update and wait until it is finished.


Click on the **Start Update** button to start the procedure. The status is shown in percent in the right side of the device line and the overall process in the bottom progress bar. The device might reboot during the firmware update procedure.

START UPDATE (1)




When the progress bar reaches 100% (**Done** is displayed at all devices), the update of all devices are finished successfully and a message appears; you can close the software.

Step 4. Wait until the unit reboots with the new firmware.

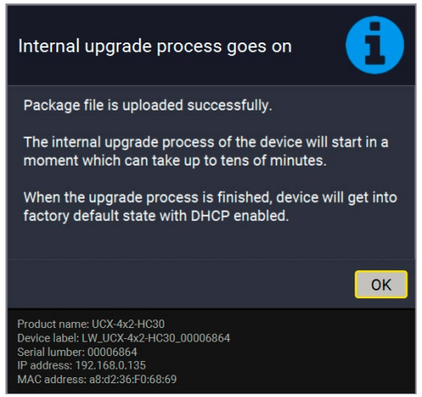

Once the firmware update procedure is completed, the device is rebooted with the new firmware. Shutting down and restarting the device is recommended.

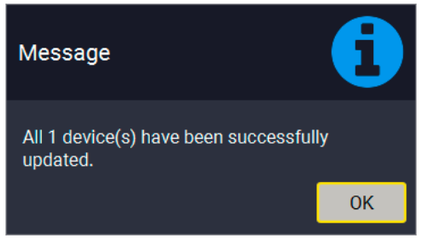

9.5. Updating the RX via the TX

It is possible to remotely update HDMI-UCX-TPX-RX107 devices connected to a UCX-TPX-TX model without the need to connect directly to the receiver and install the RX-specific FW.

Normal Mode

In order to successfully update your devices, take the following steps:


Step 1. Make sure that the connection between the transmitter and the receiver is active.
Step 2. Connect to the transmitter via the **Management network**.
Step 3. Open LDU2 and browse the package, or double-click the .lfp2 file to open LDU2 with the package loaded instantly.
Step 4. Choose the desired device(s) from the list.
Step 5. Start the update.
Step 6. Enter the authentication credentials if authentication is enabled
Step 7. The devices update and restart.

Advanced Mode


In order to successfully update your devices, take the following steps:

Step 1. Make sure that the connection between the transmitter and the receiver is active.
Step 2. Connect to the transmitter via the **Management network**.
Step 3. Open LDU2 and browse the package, or double-click the .lfp2 file to open LDU2 with the package loaded instantly.
Step 4. Choose the desired device(s) from the list.
Step 5. Click on the **Update Options** button.
Step 6. Choose the "**Update both TX and RX devices**" option.



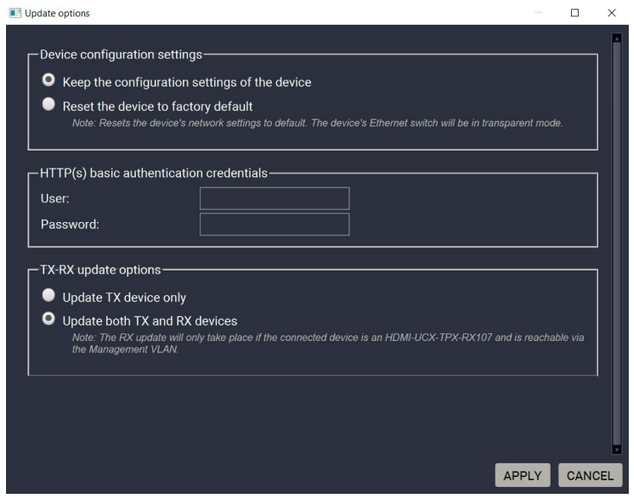

Step 7. Start the update.
Step 8. Enter the authentication credentials if authentication is enabled.
Step 9. If there is a pop-up window confirming the update of the RX to ensure compatibility, click on the **Update RX** button.

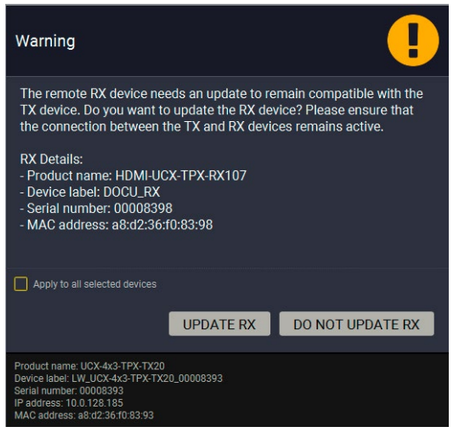

Step 10. The devices update and restart.

ATTENTION: It is important that the TX is updated first! Updating the RX before the TX might cause operation issues.

ATTENTION: Update will only work properly when the RX is accessed through the Management network!

9.6. Updating the RX via TX Outside of Management Network

It is possible to remotely update HDMI-UCX-TPX-RX107 devices connected to a UCX-TPX-TX model without the need to connect directly to the receiver.

In case the Management network is not set on your system, updating the HDMI-UCX-TPX-RX107 is not possible using the TX FW package, only its **specific RX FW package**.

> **ATTENTION:** You do **not** need to connect directly to the RX to update it this way, it only needs to be on the same network as the host computer.

To successfully update your extenders this way, follow these steps:

Step 1. Make sure that the connection between the transmitter and the receiver is active.

Step 2. Download the desired TX FW package from lightware.com.

Step 3. Open LDU2 and browse the package, or double-click the .lfp2 file to open LDU2 with the package loaded instantly.

Step 4. Choose the desired device from the list.

Step 5. Start the update.

Step 6. Enter the authentication credentials if authentication is enabled.

Step 7. The TX updates and restarts.

Step 8. Download the **compatible RX FW package** from lightware.com.

Step 9. Open LDU2 and browse the package, or double-click the .lfp2 file to open LDU2 with the package loaded instantly.

Step 10. Choose the desired device from the list.

Step 11. Start the update.

Step 12. The RX updates and restarts.

> **ATTENTION:** It is important that the TX is updated first! Updating the RX before the TX might cause operation issues.

9.7. Command Line Interface (CLI)

The CLI of the LDU2 software is a simple tool for creating scriptable device updates without the need of human interactions. It allows batch updating just like in case of GUI usage.

9.7.1. How to Run

Running under Windows® OS


The installer of LDU2 puts the following file into the installation folder:

`LightwareDeviceUpdaterV2_CLI.cmd`

CLI is available via this file, the exe is not suitable for that purpose. Open a command line window to execute or test the features directly.

Step 1. Open an Explorer window where the cmd file is located, the default is:
`c:\Program Files (x86)\Lightware\Lightware Device Updater V2\LightwareDeviceUpdaterV2_CLI.cmd`.

Step 2. Click on the address line (highlighted in blue in the picture), type **`cmd.exe`** and press enter. The command interpreter window of Windows is opened at the path of the LDU2 install folder.

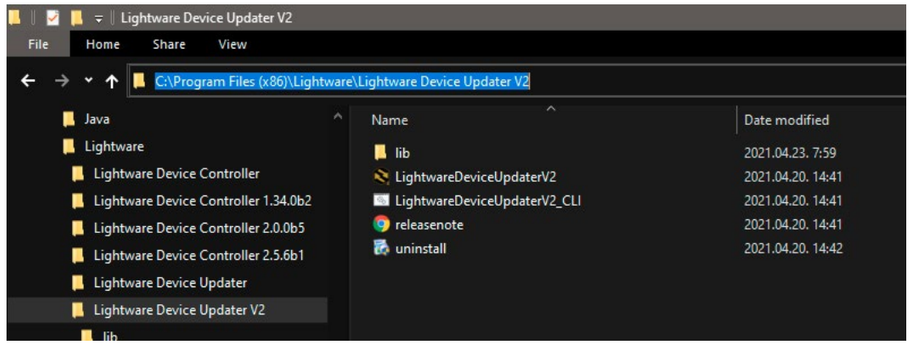

Step 3. Now you can use the `LightwareDeviceUpdaterV2_CLI.cmd` file with the commands and options, which are described in the coming sections:

Running under Linux

The Command Line Interface under Linux Operating Systems can be run by the following:

`LightwareDeviceUpdaterV2.sh.`

Running an update:

```
bash LightwareDeviceUpdaterV2.sh update --ip 172.24.5.27 --package ~/Downloads/taurus_
v1.2.0b9.lfp2
```

The commands and options are the same under Windows® and Linux, too. Following sections contain examples with **LightwareDeviceUpdaterV2_CLI.cmd**.

9.7.2. How to Use

Command Structure

The commands can be run over CLI in the following way:

`LightwareDeviceUpdaterV2_CLI.cmd [command] [options]`

`[Command]`: a certain command described in the coming sections; only one command can be run at a time

`[Options]`: mandatory and/or optional parameters of the command, if any. Optional parameters have a default value, which can be found at each affected command. You only have to define the parameter if you want to apply a different value. The **order of the options** is arbitrary.

Important Notes

- CLI is **case-sensitive** (including commands, options and other parameters).
- There is **no limit** regarding the number of the devices to update. At most 20 devices are updated simoultaneously, when one of them is finished, the following (21st) will be started automatically.
- If an update is failed, the IP address of the affected device(s) are listed at the end.
- The computer that runs LDU2 and the target device (that will be updated) must be in the same subnet. The update cannot be performed from behind a firewall or gateway.

9.8. CLI Commands

INFO: The commands and options described in the following sections are the same under Windows® and Linux, too. The examples contain **LightwareDeviceUpdaterV2_CLI.cmd**.

About the Examples

- Sent command is in **blue**, response is in **grey**.
- If the response in practice is **longer than listed** in the example, this symbol can be seen: `[...]`.

9.8.1. Help

The defined commands and options can be listed by the **help** command.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd help
```

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd help

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar help
Command line usage:
    Win: LightwareDeviceUpdaterV2_CLI.cmd [command] [options]
    Linux: LightwareDeviceUpdaterV2.sh [command] [options]

    Commands:
        * help
        * version
        * update
        * deviceInfo
        * restore
        * packageOptions
[...]
```

9.8.2. LDU2 Version

The response shows the version of the LDU2 and the version of the Script API (the Application Programming Interface that is used by the LDU2 and the script).

Command

`LightwareDeviceUpdaterV2_CLI.cmd version`

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd version


C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar version
LDU2 version: 2.35.0b6
Script API version: 1.3.34
```

9.8.3. Check For New LDU2 Version

The following command can be used to check if an update of LDU2 is available. This is just a request, since the CLI is not suitable for handling the complete installer of the software.

Command

`LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates`

Example 1

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar checkForUpdates
Current LDU2 version: 2.35.0b6
LDU2 is up-to-date
```

Example 2

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar checkForUpdates
Current LDU2 version: 2.34.0b1
New version is available online: 2.35.0b6
Download URL: http://update.lightware.hu/ldu2/lwr/v2.35.0b6/install_LDU2_v2.35.0b6.exe
```

9.8.4. Device Info

The most important information about the selected device is displayed; see the example for more details.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd deviceInfo [options]
```

Options

Option	Description	Required?
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-v or --packageVersion	Shows installed package version only	optional

Example 1

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd deviceInfo --ip
192.168.0.132

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar deviceInfo --ip
192.168.0.100
Product name:    UCX-4x3-TPX-TX20
IP address:      192.168.0.132
Serial number:   00008643
MAC address:     A8:D2:36:F0:86:43
Part number:     91310097
Device label:    LW_UCX-4x3-TPX-TX20_00008643
Package version: v1.16.0b3
CPU FW version:  v3.13.0b2
HW version:      V11_AAAX
Operation mode:  Application mode
```

Example 2

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd deviceInfo --ip
192.168.0.132 --packageVersion

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar deviceInfo --ip
192.168.0.132 --packageVersion
v1.16.0b3
```

9.8.5. Update

This command can be used to update the firmware of the devices.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd update [options]
```

Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-r or --reportProgress	Report update progress in percentage form. Default: false	optional
Package-specific options	Certain LFP2 packages have features that can be applied at this command; see the Package Options section.	optional

ATTENTION: The configuration is restored automatically if the factory default option is not applied in the **update** command. In that case, there is no need to run the **restore** command after the update.

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip
192.168.0.132 --package D:\Firmwares\taurus_ucx_tpx_tx20_v1.18.0b5.lfp2 --reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --ip
192.168.0.132 --package D:\Firmwares\taurus_ucx_tpx_tx20_v1.18.0b5.lfp2 --reportProgress
[2025-09-29 13:19:43.862] [ INFO] [           main] - Device IPs: [192.168.0.132]
[2025-09-29 13:19:46.891] [ INFO] [           main] - All selected devices are available over the network.
[2025-09-29 13:19:47.928] [ INFO] [           main] - All the selected devices are compatible with the specified
package.
[2025-09-29 13:19:48.918] [ INFO] [   192.168.0.132] - Update process started
[2025-09-29 13:19:49.078] [ INFO] [   192.168.0.132] - Update API version: 1.1
[2025-09-29 13:19:49.111] [ INFO] [   192.168.0.132] - Current package version on the device : v1.16.0b3
[2025-09-29 13:19:49.118] [ INFO] [   192.168.0.132] - Version of the package to be uploaded : v1.18.0b5
[2025-09-29 13:19:49.127] [ INFO] [   192.168.0.132] - Update parameters: deviceIp: 192.168.0.132, factoryDefault:
false, updateTxOnly: false, updateRxOnly: false
[2025-09-29 13:19:50.822] [ INFO] [   192.168.0.132] - Update protocol: http://
[2025-09-29 13:19:50.823] [ INFO] [   192.168.0.132] - Authentication type: NONE
[2025-09-29 13:19:51.092] [ INFO] [   192.168.0.132] - Device info: Product name: UCX-4x3-TPX-TX20, Device label:
LW_UCX-4x3-TPX-TX20_00008643, Serial number: 00008643, Mac address: A8:D2:36:F0:86:43, Ip address: 192.168.0.132,
Host name: , Package version: v1.16.0b3, Part number: 91310097, Hw version: V11_AAAX
[2025-09-29 13:19:51.096] [ INFO] [   192.168.0.132] - Creating backup of the device's configuration settings.
[2025-09-29 13:20:19.276] [ INFO] [   192.168.0.132] - Configuration backup file created: C:\Users\nikolett.
keindl\.ldu2\backup\backup_91310097_00008643_2025-09-29_13-20-19.bkp
[2025-09-29 13:20:19.285] [ INFO] [   192.168.0.132] - Uploading firmware package.
[2025-09-29 13:20:22.990] [ INFO] [ProgressReporter] - Progress: 2%
[...]
```

The lines containing "ProgressReporter" can be enabled optionally. If it is enabled, the current state is displayed every 5 seconds.

9.8.6. Package Options

Shows package-specific update options.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd packageOptions [options]
```

Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd packageOptions
--package D:\Firmwares\taurus_ucx_tpx_tx20_v1.18.0b5.lfp2

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar packageOptions
--package D:\Firmwares\taurus_ucx_tpx_tx20_v1.18.0b5.lfp2

Login options:
        --user : HTTP(s) basic authentication user (Default: empty string)
        --pw : HTTP(s) basic authentication password (Default: empty string)

Device configuration settings:
        --factoryDefault : if set, device resets to factory default during update (Default: false. Please note: In
some cases, the factory default switch automatically sets to true, based on the version on the device.)

TX-RX update options:
        --updateTxOnly : if set, only the TX device is updated, the paired RX is not updated (Default: false)
        --updateRxOnly : if set, only the paired RX device is updated, the TX is not updated (Default: false) -
works only with HDMI-UCX-TPX-RX107 via the Management VLAN
```

Package option example can be seen in the following section.

9.8.7. Complex Example

The following options applied:

- Firmware is updated
- Authentication enabled

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip
192.168.0.132 --package D:\Firmwares\taurus_ucx_tpx_tx20_v1.18.0b5.lfp2 --user admin --pw Password12
--reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update
--ip 192.168.0.132 --package D:\Firmwares\taurus_ucx_tpx_tx20_v1.18.0b5.lfp2 --user admin --pw Password12
--reportProgress
[2025-09-29 14:05:39.105] [ INFO] [           main] - Device IPs: [192.168.0.132]
[2025-09-29 14:05:42.262] [ INFO] [           main] - All selected devices are available over the network.
[2025-09-29 14:05:43.280] [ INFO] [           main] - All the selected devices are compatible with the specified
package.
[2025-09-29 14:05:44.259] [ INFO] [   192.168.0.132] - Update process started
[2025-09-29 14:05:44.769] [ INFO] [   192.168.0.132] - Update API version: 1.1
[2025-09-29 14:05:45.021] [ INFO] [   192.168.0.132] - Current package version on the device : v1.18.0b5
[2025-09-29 14:05:45.027] [ INFO] [   192.168.0.132] - Version of the package to be uploaded : v1.18.0b5
[2025-09-29 14:05:45.036] [ INFO] [   192.168.0.132] - Update parameters: deviceIp: 192.168.0.132, factoryDefault:
false, updateTxOnly: false, updateRxOnly: false
[2025-09-29 14:05:48.880] [ INFO] [   192.168.0.132] - Update protocol: http://
[2025-09-29 14:05:48.880] [ INFO] [   192.168.0.132] - Authentication type: BASIC
[2025-09-29 14:05:50.609] [ INFO] [   192.168.0.132] - Device info: Product name: UCX-4x3-TPX-TX20, Device label:
LW_UCX-4x3-TPX-TX20_00008643, Serial number: 00008643, Mac address: A8:D2:36:F0:86:43, Ip address: 192.168.0.132,
Host name: , Package version: v1.18.0b5, Part number: 91310097, Hw version: V11_AAAX
[2025-09-29 14:05:50.613] [ INFO] [   192.168.0.132] - Creating backup of the device's configuration settings.
[2025-09-29 14:06:22.405] [ INFO] [   192.168.0.132] - Configuration backup file created: C:\Users\nikolett.
keindl\.ldu2\backup\backup_91310097_00008643_2025-09-29_14-06-22.bkp
[2025-09-29 14:06:22.415] [ INFO] [   192.168.0.132] - Uploading firmware package.
[2025-09-29 14:06:28.328] [ INFO] [ProgressReporter] - Progress: 3%
[2025-09-29 14:06:33.341] [ INFO] [ProgressReporter] - Progress: 6%
[2025-09-29 14:06:38.346] [ INFO] [ProgressReporter] - Progress: 8%
[2025-09-29 14:06:43.347] [ INFO] [ProgressReporter] - Progress: 11%
[2025-09-29 14:06:48.352] [ INFO] [ProgressReporter] - Progress: 14%
[2025-09-29 14:06:53.353] [ INFO] [ProgressReporter] - Progress: 16%
[2025-09-29 14:06:58.368] [ INFO] [ProgressReporter] - Progress: 19%
[2025-09-29 14:07:03.375] [ INFO] [ProgressReporter] - Progress: 21%
[2025-09-29 14:07:05.331] [ INFO] [   192.168.0.132] - Package upload finished.
[2025-09-29 14:07:06.432] [ INFO] [   192.168.0.132] - Starting internal update process. Device is about to reboot.
[2025-09-29 14:07:08.388] [ INFO] [ProgressReporter] - Progress: 24%
[2025-09-29 14:07:36.658] [ INFO] [   192.168.0.132] - Waiting for the device...
[2025-09-29 14:07:38.439] [ INFO] [ProgressReporter] - Progress: 28%
[2025-09-29 14:07:43.441] [ INFO] [ProgressReporter] - Progress: 29%
[2025-09-29 14:07:48.456] [ INFO] [ProgressReporter] - Progress: 30%
[2025-09-29 14:07:58.482] [ INFO] [ProgressReporter] - Progress: 31%
[2025-09-29 14:08:03.495] [ INFO] [ProgressReporter] - Progress: 32%
[2025-09-29 14:08:13.506] [ INFO] [ProgressReporter] - Progress: 33%
[2025-09-29 14:08:18.516] [ INFO] [ProgressReporter] - Progress: 34%
[2025-09-29 14:08:28.530] [ INFO] [ProgressReporter] - Progress: 35%
[2025-09-29 14:08:33.534] [ INFO] [ProgressReporter] - Progress: 36%
[2025-09-29 14:08:48.563] [ INFO] [ProgressReporter] - Progress: 37%
[2025-09-29 14:09:13.580] [ INFO] [ProgressReporter] - Progress: 38%
[2025-09-29 14:09:33.621] [ INFO] [ProgressReporter] - Progress: 39%
[2025-09-29 14:09:58.660] [ INFO] [ProgressReporter] - Progress: 40%
[2025-09-29 14:10:18.707] [ INFO] [ProgressReporter] - Progress: 41%
[2025-09-29 14:10:43.773] [ INFO] [ProgressReporter] - Progress: 42%
[2025-09-29 14:11:03.811] [ INFO] [ProgressReporter] - Progress: 43%
[2025-09-29 14:11:23.829] [ INFO] [ProgressReporter] - Progress: 44%
[2025-09-29 14:11:48.866] [ INFO] [ProgressReporter] - Progress: 45%
[2025-09-29 14:12:08.911] [ INFO] [ProgressReporter] - Progress: 46%
[2025-09-29 14:12:33.951] [ INFO] [ProgressReporter] - Progress: 47%
[2025-09-29 14:12:53.981] [ INFO] [ProgressReporter] - Progress: 48%
[2025-09-29 14:13:04.003] [ INFO] [ProgressReporter] - Progress: 69%
[2025-09-29 14:13:11.881] [ INFO] [   192.168.0.132] - Done

All 1 update(s) finished successfully.
```

9.8.8. Exit Codes

There is a return value in all cases when a command run is finished. Currently, three codes are defined:

Code	Displayed text	Description
0	N/A	The update performed successfully
1	Update error (ErrorCode:1)	The error happened during the update
2	CLI error (ErrorCode:2)	The error happened before starting the update

The error line contains further information about the error.

Querying the Exit Code under Windows®

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>echo %errorlevel%
0
```

Querying the Exit Code under Linux

```
echo $?
0
```

If this value is queried after the update and it is 0, the update performed successfully.

9.9. Updating via REST API

The **Update REST API (REpresentational State Transfer Application Public Interface)** is developed to have a standardized update interface between the Lightware device and a third-party software tool (e.g. external controller). The update means – generally – to install a new Lightware Firmware Package (LFP2) to the Lightware device. The Update REST API is part of the entire **Lightware REST API** software architecture.

The Update REST API is available over **HTTPS** and with **basic authentication** (with setting a password for the user **admin**).

For more details on updating with REST API, see the Updating the Device via REST API section.

9.10. If the Update is not successful

- Restart the process and try the update again.
- If the backup cannot be created for some reason, you will get a message whether to continue the process without backup or stop the update. A root cause can be that the desired device is already in bootload (firmware update) mode, thus the normal operation mode is suspended and backup cannot be made.

If an update is not successful, the **Export log** button becomes red. If you press the button, you can download the log file as a ZIP package, which can be sent to Lightware Support if needed. The log files contain useful information about the circumstances to find the root cause. #bootload

10

Troubleshooting

Usually, if the system seems not to transport the signal as expected, the best strategy for troubleshooting is to check signal integrity through the whole signal chain starting from source side and moving forward to receiver end.

- Use Case Studies **184**
- How to Speed Up the Troubleshooting Process **185**

First, check the front panel LEDs and take the necessary steps according to their states. For more information about status LEDs, refer to the Front Panel LEDs and Rear Panel LEDs sections.


- Link to the section of connections/cabling.
- Link to the section of front panel operation.
- LW3 Link to the section of LW3 protocol commands.
- RA Link to the section of REST API commands.

10.1. Use Case Studies

Symptom	Root cause	Action	Refer to
Video layer			
No picture on the video output	Device(s) not powered properly	Check the switcher and the other devices if they are properly powered; try to unplug and reconnect them.	4.6
	Cable connection problem	Cables must fit very well, check all the connectors.	4.6
	No incoming signal	No video signal is present on the HDMI input ports. Check the source device and the HDMI cables.	4.6
	Not the proper video port is the active one	Check the video crosspoint settings.	3.1.1 6.7 8.6.1
	Not the proper interface is the active one	If the source/display has more connectors, check if the proper interface is selected.	
	Output port is muted	Check the mute state of output ports.	6.7.1 8.6.4
	Display is not able to receive the video format	Check the emulated EDID and select another (e.g. emulate the display's EDID on the input port).	6.11.1 8.13.4
	HDCP is disabled	Enable HDCP on input port(s) of the switcher.	6.8 8.6.12
No picture on the video output + signal error rate is high, HDMI2.0 scrambling is disabled, clock rate is set 1:10	The source sends 4K signals, but the emulated EDID does not support this resolution.	Check the emulated EDID and select another (e.g. F139 EDID on the input port).	6.11.1 8.13.4
No 4K60 video signal on the USB-C input	The source is not able to send 4K60Hz	Check the documentation of the source and the ability of the connected port. Certain USB-C ports are only for power and not for video transmission. The icons beside the port can help.	
	The source PC or BYOD resolution is not 4K60Hz	Check the source resolution and modify it if necessary. Certain sources require restarting.	
	The USB-C cable is not appropriate	The USB-C standard allows two cable types: the Full-Featured Type-C Cable Assembly or 2.0 Type-C Cable Assembly. The latter one will not operate with 4K60Hz.	4.5
		Always use high-quality cables. The no-name USB 3.1 Gen1-compatible cables can use only 2 SS channels instead of 4. The minimum cable requirement is USB 3.1 Gen1-compatiblity and support of Displayport HBR2.	4.5
		The active Thunderbolt3 cable is not appropriate, because it is not compatible backwards (with USB 3.x or DP). The passive TBT3 (20Gbps) cable may be appropriate if it supports USB3 Gen1 or Gen2 and Displayport.	4.5

Symptom	Root cause	Action	Refer to	
USB layer				
The USB 2.0 data transmission does not operate	IR drop level of the USB Type-C cable is low.	It can cause communication problems. Always use high quality cables.		4.5
The USB 2.0 data transmission or Power delivery do not operate	If the resistor of the conductor in USB-C cable is too high, the voltage difference could be more than 0.25V, which can cause USB 2.0 or Power Delivery communication problems.	Always use high quality cables.		4.5
The USB 3.x data transmission does not operate	The DiplayPort Alt Mode on the port might be in 4-lane mode.	Check the DP Alt Mode settings and make sure the bandwidth for the video signal does not exceed the limits for 2-lane transmission.		5.3.3
				6.8.2
			LW3	8.12.3
Power via USB-C				
BYOD charges slowly	The BYOD needs more than 60W	Make sure the Power Allocation is set to Auto or increase the minimum output power		4.3
				6.13.6
	Not proper the power setting of the USB-C port	Check the output power setting on the connected port.		6.10.1

10.2. How to Speed Up the Troubleshooting Process

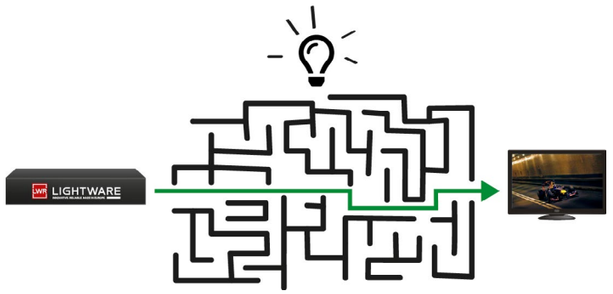

Lightware's technical support team is always working hard to provide the fastest support possible. Our team's response time is one of the best in the industry, and in the toughest of cases we can directly consult with the hardware or software engineer who designed the product to get the information from the most reliable source.

However, the troubleshooting process can be even faster... with your help.

There are certain pieces of information that push us in the right direction to find the root cause of the problem. If we receive most of this information in the first e-mail, or it is gathered at the time when you call us, then there is a pretty high chance that we will be able to respond with the final solution right away. This information is the following:

- Schematic (a pdf version is preferred, but a hand drawing is sufficient).
- Serial number(s) of the device(s) (it is either printed somewhere on the box or you can query it in the Device Controller software or on the built-in website).
- Firmware versions of the devices (please note that there may be multiple CPUs or controllers in the device and we need to know all of their firmware versions, a screenshot is the best option).
- Cable lengths and types (in our experience, it's usually the cable).
- Patch panels, gender changers or anything else in the signal path that can affect the transmission.
- Signal type (resolution, refresh rate, color space, deep color).
- Emulated EDID(s) (please save them as a file and send it to us).
- Actions to take in order to re-create the problem (if we cannot reproduce the problem, it is hard for us to find the cause).
- Photo or video about the problem ('image noise' can mean many different things, it's better if we see it too).
- Error logs from the Device Controller software.
- In the case of Event Manager issue, the event file and/or backup file from the Device Controller software.
- The more of the information above you can give us, the better. Please send this information to the Lightware Support Team (support@lightware.com) to speed up the troubleshooting process.

11

Technologies

The following sections contain descriptions and useful technical information on how the devices work in the background. The content is based on experiences and cases we met in the practice. These sections help understand features and technical standards like the following:


- EDID Management **187**
- HDCP Management **188**
- Pixel Accurate Reclocking **190**

11.1. EDID Management

11.1.1. Understanding the EDID

The Extended Display Identification Data (EDID) is the passport of display devices (monitors, TV sets, projectors). It contains information about the capabilities of the display, such as supported resolutions, refresh rates (these are called Detailed Timings), the type and manufacturer of the display device, etc.

After connecting a source to a display (DVI, HDMI, DP), the source reads out the EDID to determine the resolution and refresh rate of the image to be transmitted.

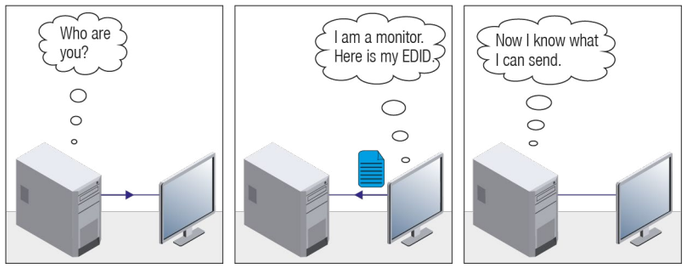

EDID Communication

Most DVI computer displays have a 128-byte long EDID structure. However, Digital Televisions and HDMI capable displays may have another 128 bytes, which is called E-EDID and defined is by CEA (Consumer Electronics Association). This extension contains information about additional Detailed Timings, audio capabilities, speaker allocation and HDMI capabilities. It is important to know that all HDMI capable devices must have CEA extension, but not all devices with CEA extension are HDMI capable.

Common Problems Related to EDID

Problem: "My system consists of the following: a computer, a Lightware device, a WUXGA (1920x1200) LCD monitor, and an SXGA (1280x1024) projector. I would like to see the same image on the monitor and the projector. What EDID should I choose on the Lightware device?"

Solution: If you want to see the image on both displays, you need to select the resolution of the smaller display (in this case SXGA), otherwise the smaller display may not show the higher resolution image.

Problem: "I have changed to a different EDID on an input port of the Lightware device to have a different resolution, but nothing happens."

Solution: Some graphics cards and video sources read out the EDID only after power-up and later they do not sense that the EDID has been changed. You need to restart your source to make it read out the EDID again.

11.1.2. Advanced EDID Management

Each DVI sink (e.g. monitors, projectors, plasma displays, etc...) must support the EDID data structure. Source BIOS and operating systems are likely to query the sink using DDC2B protocol to determine what pixel formats and interface are supported. The DVI standard uses EDID data structure to identify the monitor type and capabilities. Most DVI sources (VGA cards, set top boxes, etc.) will output DVI signal after accepting the connected sink's EDID information. In the case of EDID readout failure or missing EDID, the source will not output DVI video signal.

Lightware devices provide the Advanced EDID Management function that helps system integration. The built-in EDID Router can store and emulate factory pre-programmed- and User programmable EDIDs. The EDID of the attached monitors or projectors for each output is stored in a non-volatile memory. This way the EDID of a monitor is available when the monitor is unplugged or switched off.

Any EDID can be emulated on any input. An emulated EDID can be copied from the EDID router's memory (static EDID emulation), or from the last attached monitor's memory (dynamic EDID emulation). For example, the Lightware device can be set up to emulate a sink device that is connected to one of the outputs. In this case, the EDID automatically changes if the monitor is replaced with another display device (as long as it has a valid EDID).

EDID is independently programmable for all inputs without affecting each other. All inputs have their own EDID circuit.

INFO: The user is not required to disconnect the video cable to change an EDID as opposed to other manufacturer's products. The EDID can be changed even if a source is connected to the input and powered ON.

INFO: When the EDID has been changed, the router toggles the HOTPLUG signal for 2 seconds. Some sources do not sense this signal. In such cases, the source device must be restarted or powered OFF and ON again.

11.2. HDCP Management

Lightware Visual Engineering is a legal HDCP adopter. Several functions have been developed, which helps to solve HDCP related problems. Complex AV systems often have both HDCP and non-HDCP components. The matrix allows transmitting HDCP encrypted and unencrypted signals. The devices will be still HDCP compliant, as they will never output an encrypted signal to a non-HDCP compliant display device. If an encrypted signal is switched to a non-compliant output, a red screen alert or muted screen will appear.

11.2.1. Protected and Unprotected Content

Many video sources send HDCP protected signal if they detect that the sink is HDCP capable – even if the content is not copyrighted. This can cause trouble if an HDCP capable device is connected between the source and the display. In this case, the content cannot be viewed on non-HDCP capable displays and interfaces like event controllers. Rental and staging technicians often complain about certain laptops, which are always sending HDCP encrypted signals if the receiver device (display, matrix router, etc.) reports HDCP compliancy. Even though HDCP encryption is not required all the time (e.g. computer desktop image), certain laptops still do that.

To avoid unnecessary HDCP encryption, Lightware introduced the HDCP enabling/disabling function: the HDCP capability can be disabled in the Lightware device. If HDCP is disabled, the connected source will detect that the sink is not HDCP capable, and turn off authentication.

11.2.2. Disable Unnecessary Encryption

HDCP Compliant Sink

All the devices are HDCP-compliant, no manual setting is required, both protected and unprotected contents are transmitted and displayed on the sink.



Not HDCP-compliant Sink 1.

Not-HDCP compliant sink is connected to the matrix. Some sources (e.g. computers) always send HDCP encrypted signals if the receiver device reports HDCP compliancy, however, HDCP encryption is not required all the time (e.g. computer desktop image). If HDCP is enabled in the matrix, the image will not be displayed on the sink.



Setting the HDCP parameter to Auto on the output port and disable HDCP on the input port, the transmitted signal will not be encrypted if the content is not protected. Thus, non-HDCP compliant sinks will display non-encrypted signal.

Not HDCP-compliant Sink 2.

The layout is the same as in the previous case: non-HDCP compliant display device is connected to the matrix but the source would send protected content with encryption. If HDCP is enabled on the input port of the matrix, the source will send encrypted signal.



The sink is not HDCP compliant, thus it will not display the video signal, but blank screen is shown. If HDCP is disabled on the input port of the matrix, the source will not send the signal. The solution is to replace the display device with an HDCP-capable one.

11.2.3. HDCP 2.2

HDCP 2.2 is the latest evolution of copy protection. It is designed to create a secure connection between a source and a display. The 2.x version of HDCP is not a continuation of HDCPv1, and is rather a completely different link protection. One of the main differences is the number of the allowed devices within a closed AV system: HDCP 2.2 allows 32 devices (HDCP 1.4 allows 128 devices). A further limit is that up to four level is allowed, which means the protected signal can be transmitted over at most four repeater/matrix/switcher devices. HDCP content protection is activated only if an active video stream is transmitted from the source to the display. The encryption is not activated without a video signal.

HDCP 2.2 standard allows the application of a previous version of HDCP (e.g. HDCP 1.4) between the source and the display if the source device allows it. According to the standard, if the image content is protected with HDCP, the highest supported content protection level has to be applied. However, if the highest level of protection is not justified by the source content, the level may be decreased to avoid compatibility problems; this case is determined by the source.

HDCP 2.2 Source and HDCP 1.4 Sink

In this case the signal of an HDCP 2.2 compliant source is switched to an HDCP 1.4 compliant sink device. The signal is encrypted with HDCP 2.2 on the input and encrypted with HDCP 1.4 on the output of the Lightware device. A lower level of encryption may be applied only if the source device/content allows it - according to the HDCP standard. In this case, the HDCP setting on the input port has to be set to HDCP 1.4 and Depends on input on the output port.



HDCP 1.4 Source and HDCP 2.2 Sink

The example below is the reversal of the previous case. An HDCP 1.4 compliant source sends a signal with HDCP 1.4 encryption. The signal is switched to an HDCP v2.2 compliant sink device. In this case, the outgoing signal has to be encrypted with the highest supported encryption level towards the sink, as the Lightware device and the sink are both HDCP 2.2 compliant. The HDCP 2.2 standard does not allow keeping the original HDCP 1.4 encryption level on the output.



What Kind of Signal Will be on the Output of the Lightware Device?

See the table below that summarizes the possible cases:

Incoming Signal	HDCP 1.4 Compatible Sink on the Output	HDCP 2.2. Compatible Sink on the Output
HDCP 1.4	HDCP 1.4	HDCP 2.2
HDCP 2.2 (convertable)*	HDCP 1.4	HDCP 2.2
HDCP 2.2 (not convertable)**	Red screen	HDCP 2.2

* Stream type 0: the video stream allows the conversion of the signal to apply a lower level of encryption.

** Stream type 1: the video stream does not allow the conversion of the signal.


11.3. Pixel Accurate Reclocking

Signal reclocking is an essential procedure in digital signal transmission. After passing the reclocking circuit, the signal becomes stable, jitter-free, and can be transmitted over more equipment like processors or event controllers. Without reclocking, sparkles, noise, and jaggies appear on the image.

Lightware's sophisticated Pixel Accurate Reclocking technology fixes more problems than general TMDS reclocking. It removes not only intra-pair skew, but inter-pair skew as well. The Pixel Accurate Reclocking circuit eliminates the following errors:


Intra-pair skew

Skew between the + and - wires within a differential wire pair (e.g. Data2- and Data2+). It's caused by different wire lengths or slightly different wire construction (impedance mismatch) in the DVI cable. It results in jitter.

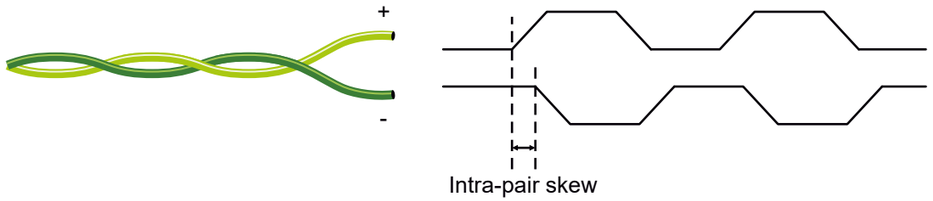


Inter-pair skew

Skew between two differential wire pairs in a cable. It is caused by different wire pair lengths or different number of twists in the DVI cable. Too much inter-pair skew results in color shift in the picture or sync loss.

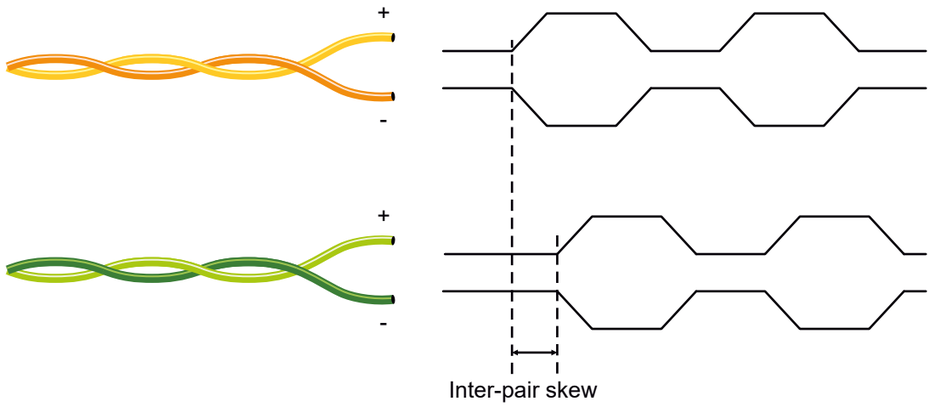


Jitter

Signal instability in the time domain. The time difference between two signal transitions should be a fixed value, but noise and other effects cause variations.

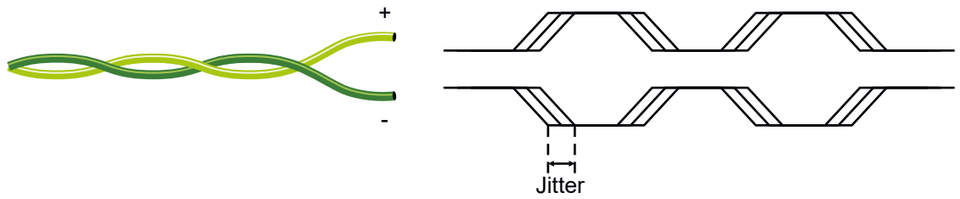

Noise

Electromagnetic interference between other electronic devices such as mobile phones, motors, etc. and the DVI cable are coupled onto the signal. Too much noise results in increased jitter.

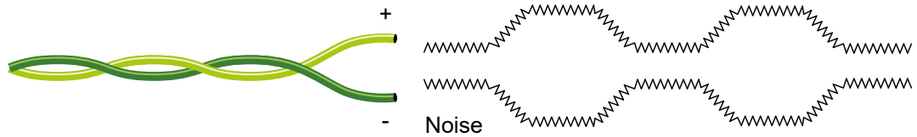

12

Appendix

Tables, drawings, guides, technical details and hashtag keyword list as follows:

- Specifications **192**
- Port Numbering **194**
- Applied Ports (Network Settings) **195**
- Factory EDID List **196**
- Cable Wiring Guide **198**
- Factory Default Settings **199**
- Content of the Backup File **200**
- Mechanical Drawings **201**
- Firmware Release Notes for UCX-TPX-TX30 Devices **202**
- Hashtag Keyword List **203**
- Further Document Information **204**
- Limited Warranty Statement **204**

12.1. Specifications

INFO: Specifications are subject to change without notice.

General

Compliance	CE, UKCA
Electrical safety	EN 62368-1:2024
EMC (emission)	EN 55032:2015+A1:2020
EMC (immunity)	EN 55035:2017+A11:2020
RoHS	EN 63000:2018
FCC Compliance	FCC CFR Title 47, Part 15, Subpart B
DGUV Vorschrift 3	Schutzklasse III
Warranty	3 years
Operating temperature	0° to +50°C (+32° to +122°F)
Operating humidity	10% to 90%, non-condensing
Cooling	Cooling fan

Power (UCX-4x3-TPX-TX30)

Power supply option	External 220W Power Supply
IEC insulation class	IEC 62368-1, Class I
Supported power source	100-240 V AC; 50/60 Hz
AC power plug	Interchangeable (EZ, UK, JP/US, AUS/NZ)
Battery cell type	BR1632A
Power consumption[1]	183.3 W (max, measured)
Heat dissipation[1]	625.5 BTU/h (max)

[1] The power consumption and heat dissipation results were measured with UCX-4x3-TPX-TX30 and HDMI-UCX-TPX-RX107 together.

Power (UCX-2x1-TPX-TX30)

Power supply option	External 220W Power Supply
IEC insulation class	IEC 62368-1, Class I
Supported power source	100-240 V AC; 50/60 Hz
AC power plug	Interchangeable (EZ, UK, JP/US, AUS/NZ)
Battery cell type	BR1632A
Power consumption	162 W (max, measured)
Heat dissipation	552.7 BTU/h (max)

Enclosure

Rack mountable	yes
Enclosure material	1 mm steel
Dimensions (mm)	271 W x 140.3 D x 26 H
Dimensions (inch)	10.7 W x 5.57 D x 1.01 H
Weight - UCX-4x3-TPX-TX30	1050 g (2.31 lb)
Weight - UCX-2x1-TPX-TX30	1040 g (2.29 lb)

Video inputs

USB-C input

Connector type	24-pole USB type C receptacle
AV standard	DP 1.2a
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr
Video delay	0 frame
Max. video resolution	4096x2160@60Hz RGB 4:4:4 (up to 600MHz pixel clock); 1920x1080@120Hz, 36 bit
Audio formats	all formats in line with HDMI 2.0 standard
3D support	yes

HDMI input

Connector type	19-pole HDMI Type A receptacle (with screw locking option)
AV standard	DVI 1.0; HDMI 1.4; HDMI 2.0
Maximum data rate	18Gbps
Maximum pixel clock	597MHz
HDCP compliance	HDCP 1.4; HDCP 2.2
Color space	RGB, YCbCr
Video delay	0 frame
Max. video resolution	4096x2160@60Hz RGB 4:4:4 (up to 600MHz pixel clock); 1920x1080@120Hz, 36 bit
Max. input HDMI cable length (with premium certified cable) at 3840x2160@60Hz 4:4:4	5m
Re-clocking	Pixel Accurate Re-clocking
3D support	yes
Audio mode	simultaneous pass-through and de-embedding to the Audio layer
Supported audio formats for pass-through	All HDMi 2.0 audio formats

Supported audio formats for de-embedding	Uncompressed
Compressed	Dolby Digital, DTS; Compressed HBR; Dolby TrueHD; DTS-HD

Video Outputs

TPX output

Connector type	RJ45 connector
Power over Ethernet	POE+ PSE (IEEE802.3at)
Data rate	10GBase-T
Compliance	AVXT
HDCP compliance	HDCP 2.3
Transferred signals	Video, Audio, USB 2.0, RS-232, Ethernet
Color space	RGB, YCbCr
Supported resolutions at 8bits/color	up to 4096x2160@60Hz 4:4:4
Audio formats	8-channel PCM, Dolby TrueHD, DTS-HD Master Audio 7.1

HDMI output

Connector type	19-pole HDMI Type A receptacle (with screw locking option)
AV standard	DVI 1.0; HDMI 1.4; HDMI 2.0
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr
Supported resolutions	up to UHD/4K@60Hz 4:4:4
Audio formats	8-channel PCM, Dolby TrueHD, DTS-HD Master Audio 7.1

Audio Ports

Analog audio output

Connector type	5-pole Phoenix connector
Audio formats	2-ch PCM
Sampling frequency	48kHz
Volume	-95.62 dB-0 dB
Balance	-100 - +100 (0 is center)

Control ports

USB ports

Connector type	A-type receptacle
USB compliance	USB 2.0
Connector type	mini B-type
USB compliance	USB 2.0
Connector type	B-type receptacle
USB compliance	USB 2.0

Ethernet ports

Connector type	RJ45 female connector
Ethernet data rate	10/100/1000 Base-T, full duplex with autodetect
Power over ethernet (PoE)	PoE+ PSE (IEEE802.3at) only on **Ethernet 3** port

RS-232 ports

Connector type	3-pole Phoenix connector
Baud rates	between 9600 and 115200 baud
Data bits	8
Parity	None, Odd/Even
Stop bits	1/2
Output voltage: Low level	3V to 15V
Output voltage: High level	-15V to - 3V

GPIO ports

Connector type	8-pole Phoenix connector
Function (pin 1-6)	Configurable (input/output)
Function (pin 7)	5V output
Function (pin 8)	Ground

12.2. Port Numbering

INFO: The -LCC models have the same values as non-LCC models.

Audio/Video Ports

Model name		UCX-4x3-TPX-TX30		UCX-2x1-TPX-TX30	
Port name		Video port nr. (LW3)	Audio port nr. (LW3)	Video port nr. (LW3)	Audio port nr. (LW3)
Inputs	AVX in 1	-	-	-	-
	USB-C in 1	I1	I1	I1	I1
	USB-C in 2	I2	I2	-	-
	HDMI in 3	I3	I3	I2	I2
	HDMI in 4	I4	I4	-	-
	Welcome Screen	I5	-	I5	-
Outputs	AVX out 1	O1	O1	O1	O1
	HDMI out 1	O2	O2	-	-
	HDMI out 2	O3	O3	-	-
	HDMI out 3	-	-	-	-
	Local HDMI out	-	-	-	-
	Analog audio out	-	O4	-	O2
	Remote audio out	-	O5	-	O3

USB Ports

Model name		UCX-4x3-TPX-TX30	UCX-2x1-TPX-TX30
Port name		USB port nr. (LW3)	
Upstream Facing Ports	USB-C Host 1	U1	U1
	USB-C Host 2	U2	-
	USB-B Host 3	U3	U2
	USB-B Host 4	U4	-
USB Hub/ Downstream Port	USB hub	H1	H1
	USB Device 1	D1	D1
	USB Device 2	D2	D2
	USB Device 3	D3	D3
	USB Device 4	D4	D4

Ethernet Ports

Model name	UCX-4x3-TPX-TX30	UCX-2x1-TPX-TX30
Port name	**USB port nr. (LW3)**	
Ethernet 1	P1	P1
Ethernet 2	P2	P2
Ethernet 3	P3	P3
USB-C in1 (Eth)	P4	P4
USB-C in2 (Eth)	P5	P5

GPIO

Port name	Port nr. (LW3)
GPIO1	P1
GPIO2	P2
GPIO3	P3
GPIO4	P4
GPIO5	P5
GPIO6	P6

OCS (UCX-3x3-TPX-RX20, HDMI-UCX-TPX-RX107)

Port name	Port nr. (LW3)
OCS1	P1

RS-232 Ports

Port name	Port nr. (LW3)	Serial over IP port nr.
RS-232 1	P1	8001
RS-232 2	P2	8002
1	P3	8003

12.3. Applied Ports (Network Settings)

The following ports are necessary to pass via a network switch/firewall for a proper working between the device and the software:

Purpose/function	Protocol	Port nr.
Firmware update TFTP	UDP	69
	UDP	49990
	UDP	49995
Device Discovery	UDP	224.0.0.251:5353
Remote IP	UDP	230.76.87.82:37421
SNMP daemon/agent	UDP	161
HTTP - file transfer and update API	TCP	80
HTTPS - file transfer and update API	TCP	443
LW3 control API	TCP	6107
Used for communications between the control software and BlueRiver Control Server	TCP	6970
	TCP	8080

12.4. Factory EDID List

Mem	Resolution	Type	EDID features
F1	640 x 480p @ 60.00 Hz	D	DVI
F2	848 x 480p @ 60.00 Hz	D	DVI
F3	800 x 600p @ 60.32 Hz	D	DVI
F4	1024 x 768p @ 60.00 Hz	D	DVI
F5	1280 x 768p @ 50.00 Hz	D	DVI
F6	1280 x 768p @ 59.94 Hz	D	DVI
F7	1280 x 768p @ 75.00 Hz	D	DVI
F8	1360 x 768p @ 60.02 Hz	D	DVI
F9	1280 x 1024p @ 50.00 Hz	D	DVI
F10	1280 x 1024p @ 60.02 Hz	D	DVI
F11	1280 x 1024p @ 75.02 Hz	D	DVI
F12	1400 x 1050p @ 50.00 Hz	D	DVI
F13	1400 x 1050p @ 60.00 Hz	D	DVI
F14	1400 x 1050p @ 75.00 Hz	D	DVI
F15	1680 x 1050p @ 60.00 Hz	D	DVI
F16	1920 x 1080p @ 50.00 Hz	D	DVI
F17	1920 x 1080p @ 60.00 Hz	D	DVI
F18	2048 x 1080p @ 50.00 Hz	D	DVI
F19	2048 x 1080p @ 60.00 Hz	D	DVI
F20	1600 x 1200p @ 50.00 Hz	D	DVI
F21	1600 x 1200p @ 60.00 Hz	D	DVI
F22	1920 x 1200p @ 50.00 Hz	D	DVI
F23	1920 x 1200p @ 59.56 Hz	D	DVI
F24	2048 x 1200p @ 59.96 Hz	D	DVI
F29	1920 x 1080p @ 60.00 Hz	U	DVI
F30	1440 x 480i @ 60.05 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F31	1440 x 576i @ 50.08 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F32	640 x 480p @ 59.95 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F33	720 x 480p @ 59.94 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F34	720 x 576p @ 50.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F35	1280 x 720p @ 50.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F36	1280 x 720p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F37	1920 x 1080i @ 50.04 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F38	1920 x 1080i @ 50.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F39	1920 x 1080i @ 60.05 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F40	1920 x 1080i @ 60.05 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F41	1920 x 1080p @ 24.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F42	1920 x 1080p @ 25.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F43	1920 x 1080p @ 30.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F44	1920 x 1080p @ 50.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F45	1920 x 1080p @ 59.94 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F46	1920 x 1080p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F47	1920 x 1080p @ 60.00 Hz	U	HDMI; YUV444; YUV422; 2CH_AUD
F48	1920 x 1080p @ 60.00 Hz	U	HDMI; YUV444; YUV422; 8CH_AUD
F49	1920 x 1080p @ 60.00 Hz	U	HDMI; YUV444; YUV422; DC30; DC36; YUVDC; 8CH_AUD
F98	1280 x 720p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD; 3D
F99	1920 x 1080p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD; 3D
F100	1024 x 768p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F101	1280 x 1024p @ 50.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F102	1280 x 1024p @ 60.02 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F103	1280 x 1024p @ 75.02 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F104	1600 x 1200p @ 50.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F105	1600 x 1200p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F106	1920 x 1200p @ 59.56 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F107	2560 x 1440p @ 59.95 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F108	2560 x 1600p @ 59.86 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F109	3840 x 2400p @ 24.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F110	3840 x 2160p @ 24.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F111	3840 x 2160p @ 25.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F112	3840 x 2160p @ 30.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD

Mem	Resolution	Type	EDID features
F118	3840 x 2160p @ 30.00 Hz	U	HDMI; YUV444; YUV422; 2CH_AUD
F119	3840 x 2160p @ 30.00 Hz	U	HDMI; YUV444; YUV422; 8CH_AUD
F120	3840 x 2160p @ 60.00 Hz	H	HDMI; YUV444; YUV422; YUV420; 2CH_AUD
F121	1440 x 1080p @ 59.91 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F122	2560 x 2048p @ 59.98 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F123	1280 x 800p @ 59.91 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F124	1440 x 900p @ 59.90 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F125	1366 x 768p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F126	1600 x 900p @ 59.98 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F127	2048 x 1080p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F128	2560 x 1080p @ 60.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F129	3440 x 1440p @ 24.99 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F130	3440 x 1440p @ 29.99 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F131	4096 x 2160p @ 25.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F132	4096 x 2160p @ 30.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F133	4096 x 2160p @ 60.00 Hz	4	HDMI; YUV444; YUV422; YUV420; 2CH_AUD
F134	3440 x 1440p @ 23.99 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F135	4096 x 2160p @ 24.00 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F136	3840 x 2400p @ 29.99 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F137	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F138	3840 x 2160p @ 50.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F139	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 2CH_AUD
F140	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 8CH_AUD
F141	4096 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F142	4096 x 2160p @ 50.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F143	4096 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 2CH_AUD
F144	4096 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 8CH_AUD
F145	2560 x 2048p @ 49.97 Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F146	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F147	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F148	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; 8CH_AUD
F154	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F155	3840 x 2160p @ 60.00 Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR
F156	5120 x 2160p @ 30.00 Hz	5	HDMI; HDMI2; YUV444; YUV422; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F157	5120 x 2160p @ 30.00 Hz	5	HDMI; HDMI2; YUV444; YUV422; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR
F158	5120 x 2160p @ 60.00 Hz	5	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F159	5120 x 2160p @ 60.00 Hz	5	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR

Legend

D: DVI EDID

H: HDMI EDID

U: Universal EDID, supporting many standard resolutions:

- **F29:** Universal EDID for DVI signals (no audio support).
- **F47:** HDMI EDID supporting PCM audio.
- **F48:** HDMI EDID supporting all type of audio.
- **F49:** HDMI EDID supporting all type of audio and deep color.
- **F89:** Universal EDID for analog signals (no audio support).
- **F118:** HDMI EDID supporting PCM audio and 4K@30 Hz signals.
- **F119:** HDMI EDID supporting all type of audio and 4K@30 Hz signals.

4: 4K EDID

5: 5K EDID

Please note that minor changes in the factory EDID list may be applied in further firmware versions.

12.5. Cable Wiring Guide

Inputs and outputs of audio devices are symmetric or asymmetric. The main advantage of the symmetric lines is the better protection against the noise, therefore they are widely used in the professional audio industry. Symmetric audio is most often referred to as balanced audio, as opposed to asymmetric, which is referred to as unbalanced audio. Ligthware products are usually built with 5-pole Phoenix connectors, so we would like to help users assemble their own audio cables. See the most common cases below.

ATTENTION: Symmetric and asymmetric lines can be linked with passive accessories (e.g. special cables), but in this case half of the line level is lost.



ATTENTION: There are numerous types of regularly used connector and cable types to connect audio devices. Please always make sure that a connector or cable fits your system before use.

ATTENTION: Never join the phase-inverted (negative, cold or -) poles (either right or left) to the ground or to each other on the output side, as this can damage the unit.

INFO: Use a galvanic isolation in case of a ground loop.

12.5.1. Serial Ports

The device is built with a 3-pole Phoenix connector. See the examples below of connecting to a DCE (Data Circuit-terminating Equipment) or a DTE (Data Terminal Equipment) type device:

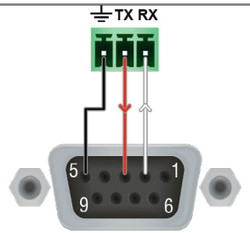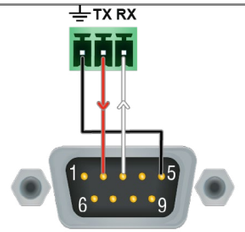
Lightware device and a DCE D-SUB 9 and Phoenix	Lightware device and a DTE D-SUB 9 and Phoenix
 2: TX data 3: RX data 5: Ground	 2: RX data 3: TX data 5: Ground

12.5.2. Audio Ports

The Pinout of the 5-pole Phoenix Connector




Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

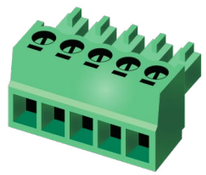


Compatible Plug Type: Phoenix® Combicon series (3.5mm pitch, 5-pole), type: MC 1.5/5-ST-3.5.

From Balanced Output to Unbalanced Input


Phoenix - 2 x 6.3 (1/4") TS

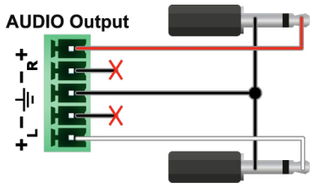

Phoenix - 2 x RCA

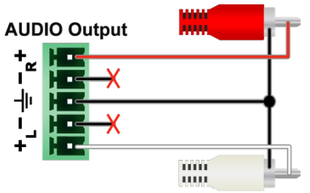


Phoenix - 3.5 (1/8") TRS

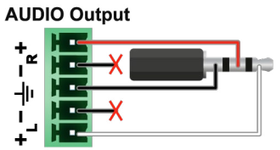


From Balanced Output to Balanced Input

Phoenix - 2 x 6.3 (1/4") TRS

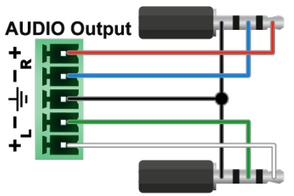

Phoenix - 2 x XLR

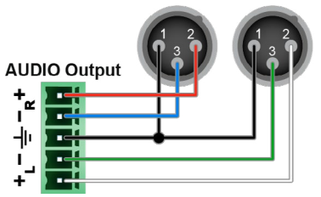

12.6. Factory Default Settings

Parameter	UCX-4x3-TPX-TX30	UCX-2x1-TPX-TX30
Video port settings		
Connected source (O1/O2/O3)	I1/I2/I3	I1/I2
Allowed HDCP Version (Ix)	off	off
Hotplug detect mode (HPD) at input ports	auto	
Display Welcome Screen Image	false	
Display Welcome Screen Message	true (<product_name>_<serial_number>_<ip_address>)	
Output 5V mode / signal type	auto / auto	
Output HDCP mode	auto	
Video autoselect	first detect	
Emulated EDID	dynamic	
Analog audio output port settings		
Volume	0 dB, 100%	
Balance	0 (center)	
Network settings		
Factory default IP address mode	DHCP	
Static IP address	192.168.0.100	
Static network mask	255.255.255.0	
Static gateway address	192.168.0.1	
Hostname	lightware-<serial_number>	
LW3 protocol	disabled	
HTTP, HTTPS	enabled	
HTTP, HTTPS authentication	enabled	
Authentication setting (user/password)	admin/<default_password>	

USB port settings		
USB-C Power Limit	equal output power	100W
DP Alternate Mode Policy	auto	
Port Power Role	dual role	
Autoselect	follow video O1	
D1-D4 Power 5V Mode	auto	
RS-232 port settings		
RS-232 port	9600 BAUD, 8, N, 1	
RS-232 serial over IP	enabled	
GPIO port settings		
Output level	low	
Direction	input	
Miscellaneous		
Control lock	disabled	
Dark mode	disabled	
Automatic fan control	enabled	
User EDID memory	empty	
LARA	enabled	
SNMP	disabled	


12.7. Content of the Backup File


The backup file contains numerous settings and parameters saved from the device. When the file is uploaded to a device, the following will be overwritten:


Audio / Video crosspoint settings
Mute state, Lock state, Crosspoint state
Autoselection (mode, port priority)
USB ports
Port name, Port type, Lock state, Crosspoint state, Power +5V mode
Autoselection (mode, port piority)
Lane management status, DisplayPort Alternate Mode policy, Power role setting, Power limit
USB-C video parameters (HDCP mode, Output signal type, Embedded audio mute state, Power +5V mode)
HDMI input ports
Video port name, Audio port name, HDCP setting
HDMI output ports
Port name, HDCP mode, HDMI mode, Power +5V mode
Analog audio port
Port name, Volume, Balance
Local serial port
Port name, RS-232 mode, Control protocol, Baud rate, Data bits, Stop bits, Parity
GPIO port
Port name, Direction, Level
OCS port
Sensor type, Port name
Network settings
Port name, Port status. PHY (speed and duplexity) mode
HTTP/HTTPS port status, HTTP/HTTPS Authentication status
LW3 port status, Serial port status
LARA full configuration
Further settings
Control lock status, Device label, Dark mode state, Dark mode delay
User EDID data (U1-U100), Emulated EDIDs by ports
Welcome screen status, Welcome screen parameters
Power supply output power limit
NTP (Date and time settings)


12.8. Mechanical Drawings


INFO: UCX-4x3-TPX-TX30 and UCX-2x1-TPX-TX30 models have the same size. Dimensions are in mm.

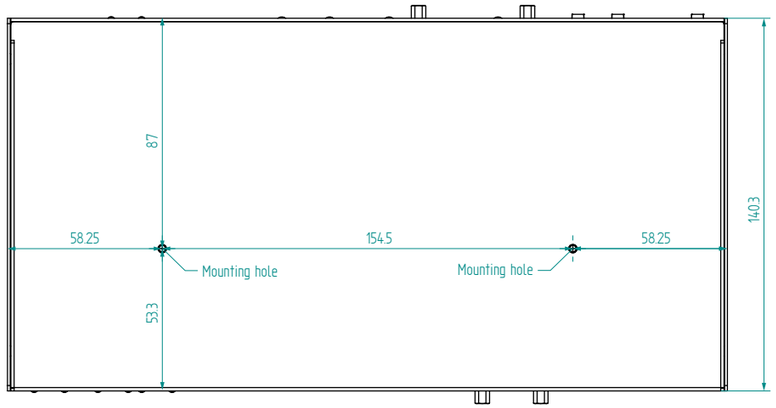


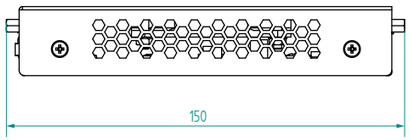

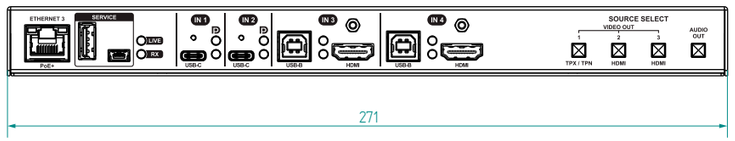


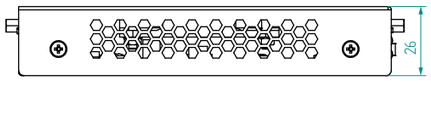

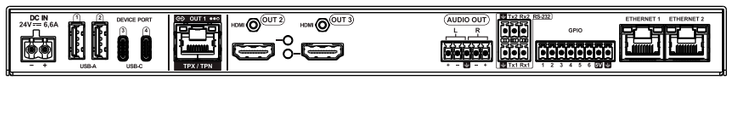

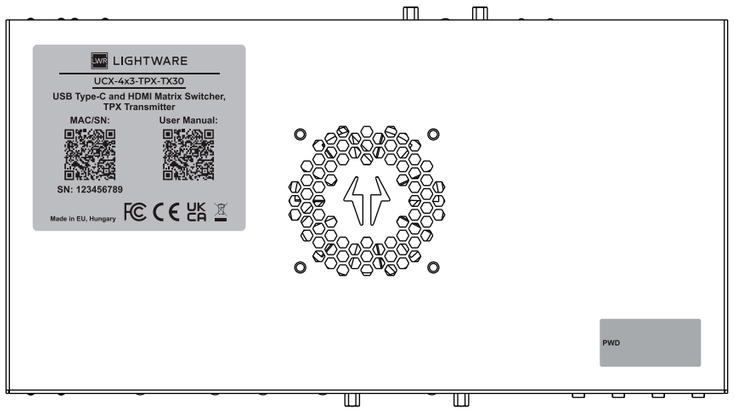

PSU-24VP3-220 (220W PSU for UCX-2x1-TPX-TX30, UCX-4x3-TPX-TX30)

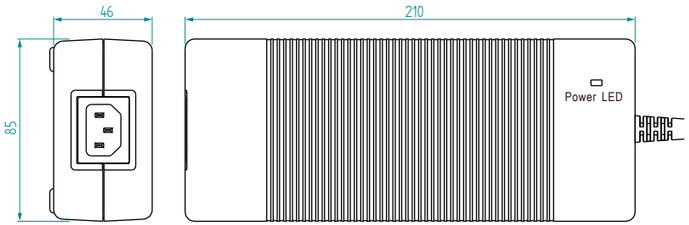

12.9. Firmware Release Notes for UCX-TPX-TX30 Devices

The list below shows the released firmware packages with important notes.

v1.21.0b10

Release date: 2026-10-15

New feature:

- New variants: Taurus UCX-2x1-TPX-TX30; UCX-4x3-TPX-TX30; UCX-2x1-TPN-TX30; and UCX-4x3-TPN-TX30 are supported now.
- Power Management got updated to support the PowerOverEthernet capabilities of the UCX-2x1-TPX-TX30; UCX-4x3-TPX-TX30; UCX-2x1-TPN-TX30; and UCX-4x3-TPN-TX30 devices.
- UCX TX30 devices now set the internal fan speed based on the CPU temperature - leading to reduced noise emission. Earlier Taurus TPX transmitters ran the fan at a fixed 100% duty cycle.
- Major LARA update: LARA 2.0.8b3. integration. Taurus UCX TX30 product family is supported now. Detailed change log is available on the LARA portal.
- This release introduces partial factory reset behaviour for the device. The reset process clears selected device configuration data while intentionally preserving local user credentials and password history. This allows users to restore parts of the device configuration without removing authentication-related information, helping maintain access continuity after the reset.
- Added integrated SNMPv3 support on UCX TX30 devices to improve remote monitoring and network management capabilities.

Bugfix:

- Fixed: Remote Syslog messages configured for RFC 3164 now include the mandatory PRI field, producing valid syslog messages. The remote syslog API endpoint naming was also corrected to use LogFormat instead of SyslogFormat.
- Fixed a core deadlock during frequent USB host switching: Resolved a concurrency race condition in the USB switch subsystem between upstream connection events and switch timers that could lead to an internal application deadlock/crash (taurus-core) when switching rapidly between USB hosts
- A critical security vulnerability in the firmware update REST API that could allow arbitrary code execution has been closed.
- Resolved potential display noise and visual artifact issues occurring upon USB-C DisplayPort Alternate Mode disconnection.
- Fixed a critical issue causing lost and non-recoverable USB2.0 transmission between the transmitter and the receiver after firmware update performed on the connecting RX device.

12.10. Hashtag Keyword List

This user manual contains keywords with hashtags (#) to help you find the relevant information as quick as possible.

The format of the keywords is the following:

#<keyword>

The usage of the keywords: use the **Search** function (Ctrl+F / Cmd+F) of your PDF reader application, type the **#** (hashtag) character and the wished keyword.

The **#new** special keyword indicates a new feature/function that has just appeared in the latest firmware or software version.

Example

#dhcp

This keyword is placed at the DHCP (dynamic IP address) setting in the front panel operation, the Lightware Device Controller (LDC) and the LW3 programmer's reference section.

The following list contains all hashtag keywords placed in the document with a short description belonging to them. The list is in **alphabetical order** by the hashtag keywords.

Hashtag Keyword	Description
#advancedview	Advanced view / Terminal window
#alternatemode	Displayport Alternate mode settings
#analogaudio	Analog audio related settings
#authentication	Authentication settings
#autoselect	Autoselect feature settings
#balance	Balance (for analog audio) setting
#buttonlock	Front panel button lock setting
#cablediagnostics	Cable diagnostics tool in LDC
#cec	CEC-related settings
#crosspoint	Crosspoint switch setting
#devicelabel	Device label
#dhcp	Dynamic IP address (DHCP) setting
#diagnostic	Failure diagnostic related tool/information
#displayportalternatemode	Displayport Alternate mode settings
#dpaltmode	Displayport Alternate mode settings
#edid	EDID related settings
#factory	Factory default settings
#fips	FIPS related information
#firmwareversion	Firmware version query
#framedetector	Frame detector in LDC
#hdcp	HDCP-encryption related setting
#http	Http-related settings
#https	Https-related settings
#ipaddress	IP address related settings
#label	Device label
#lock	Port lock setting
#lockbutton	Front panel button lock setting
#log	System log
#mute	Port mute setting
#network	Network (IP address) related settings
#portstatus	Source/destination port status query
#power	Power sending settings
#producttype	Product type query
#reboot	Restarting the device
#restart	Restarting the device
#rs232	RS-232 related settings
#rs-232	RS-232 related settings
#security	Network security settings
#serial	RS-232 related settings
#serialnumber	Serial number query
#signaltype	HDMI/DVI signal type setting
#status	Status query
#switch	Crosspoint switch setting
#systemlog	System log
#terminal	Advanced view / Terminal window
#testpattern	Test pattern (no sync screen) settings
#unlock	Port unlock setting
#unmute	Port unmute setting
#usb	USB 2.0 interface-related settings
#usbc	USB-C interface-related settings
#volume	Volume (for analog audio) setting
#welcomescreen	Welcome screen settings
#password	Password setting

12.11. Further Document Information

Symbol Legend

The following symbols and markings are used in the document:

WARNING! Safety-related information that is highly recommended to read and keep in every case!

ATTENTION: Useful information for performing a successful procedure; it is recommended to read.

DIFFERENCE: Feature or function that is available with a specific firmware/hardware version or product variant.

INFO: A notice, which contains additional information. Procedure can be successful without reading it.

DEFINITION: The short description of a feature or a function.

TIPS AND TRICKS: Ideas that you may have not known yet, but can be useful.


Navigation Buttons

Buttons in the PDF version		Buttons in the HTML version	
	Navigate to the **Table of Contents**.		Open the main **Table of Contents**.
	Go back to the **previous page**. If you clicked on a link previously, you can go back to the source page by pressing the button.		Navigate to the **Online User Manuals** webpage.
	Navigate to the **Bookmark page**.		Navigate to the **Bookmark page** in this User Manual.
	Visit www.lightware.com.		Download the **PDF version** of the User Manual.

About Printing

Lightware Visual Engineering supports green technologies and eco-friendly mentality. Thus, this document is made primarily for digital usage.
If you need to print out a few pages for any reason, follow the recommended printing settings:

- Page size: A4
- Output size: Fit to page or Match page size
- Orientation: Landscape

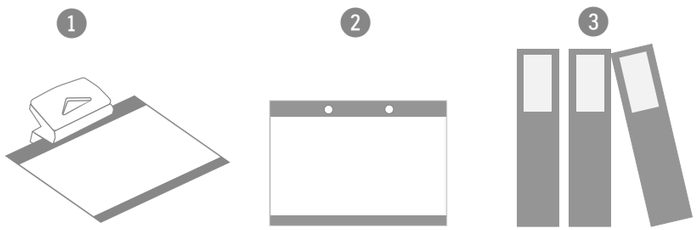

TIPS AND TRICKS: Thanks to the size of the original page, a border around the content (gray on the second picture below) makes it possible to organize the pages better. After punching holes in the printed pages, they can easily be placed into a ring folder.

12.12. Limited Warranty Statement

1. Lightware Visual Engineering PLC (Lightware) warrants to all trade and end user customers that any Lightware product purchased will be free from manufacturing defects in both material and workmanship for three (3) years from purchase unless stated otherwise below. The warranty period will begin on the latest possible date where proof of purchase/delivery can be provided by the customer. In the event that no proof can be provided (empty 'Date of purchase' field or a copy of invoice), the warranty period will begin from the point of delivery from Lightware.

1.1. 25G and MODEX product series will be subject to a seven (7) year warranty period under the same terms as outlined in this document.

1.2. If during the first three (3) months of purchase, the customer is unhappy with any aspect of a Lightware product, Lightware will accept a return for full credit.

1.3. Any product that fails in the first six (6) months of the warranty period will automatically be eligible for replacement and advanced replacement where available. Any replacements provided will be warranted for the remainder of the original unit's warranty period.

1.4. Product failures from six (6) months to the end of the warranty period will either be repaired or replaced at the discretion of Lightware. If Lightware chooses to replace the product, then the replacement will be warranted for the remainder of the original unit's warranty period.

2. The above-stated warranty and procedures will not apply to any product that has been:

2.1. Modified, repaired or altered by anyone other than a certified Lightware engineer unless expressly agreed beforehand.

2.2. Used in any application other than that for which it was intended.

2.3. Subjected to any mechanical or electrical abuse or accidental damage.

2.4. Any costs incurred for repair/replacement of goods that fall into the categories above (2.1., 2.2., 2.3.) will be borne by the customer at a pre-agreed figure.

3. All products to be returned to Lightware require a return material authorization number (RMA) prior to shipment, and this number must be clearly marked on the box. If an RMA number is not obtained or is not clearly marked on the box, Lightware will refuse the shipment.

3.1. The customer will be responsible for in-bound, and Lightware will be responsible for out-bound shipping costs.

3.2. Newly repaired or replaced products will be warranted to the end of the originally purchased product's warranty period.