
LIGHTWARE
INNOVATIVE. RELIABLE. MADE IN EUROPE.



C-PopUp-10RN

Assembly Guide

Box Contents



Tube and Insert



Fixing nut




Stickers



Weight pulley



Cable bag

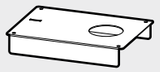

Metal sheet




Cable tie

Installation Steps


1.

- Prepare the table: drill a hole.

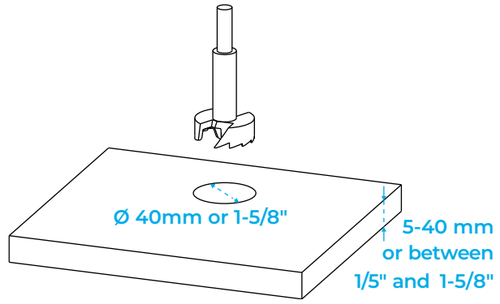


2.

- Insert the tube into the hole. The rotation of the tube does not matter, it is circularly simmetrical.

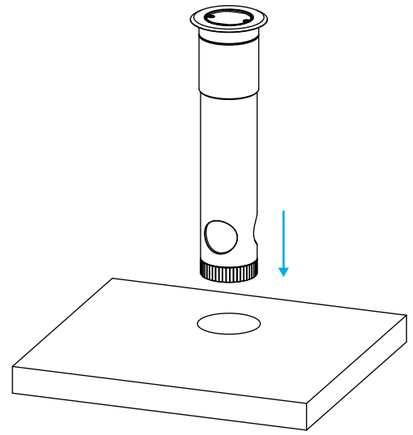

3.

- Place the metal sheet (1) and rotate it to where the cable is guided from.

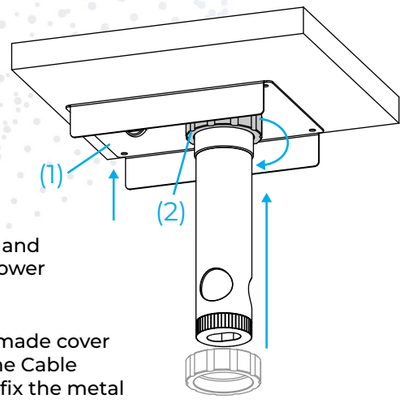


- Pull on the nut (2) and screw it (with the power of your hand).

Optionally: if a self-made cover is used instead of the Cable bag, it is advised to fix the metal sheet to the desk through the four holes (additional screws are not supplied).

Under table view

4.


- Unscrew the lower cap of the tube, but be careful: **if you remove the cap, the insert will fall out**.
- Remove the cap and the insert.

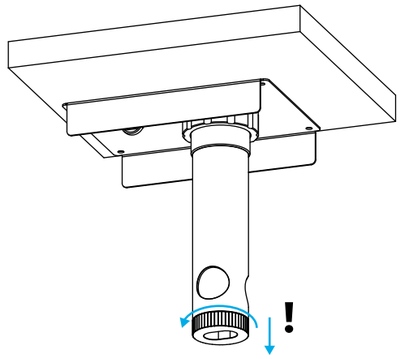

Under table view

5.


- Attach the desired sticker to the cap of the insert.

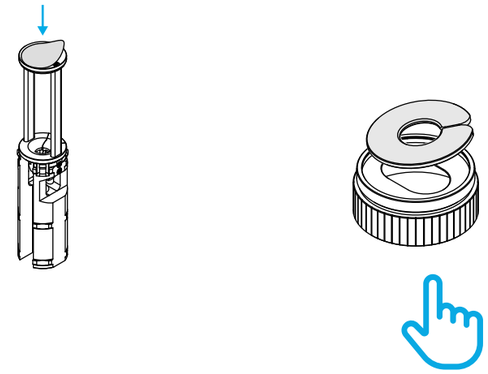

- Pop out the ring from the cap.


6.

- Push the cable through the cap.
- Open the ring wide enough and click it on the cable.

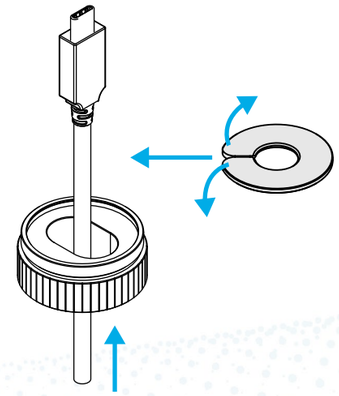


7.

- Press the two small pins and push the insert vertically upwards.

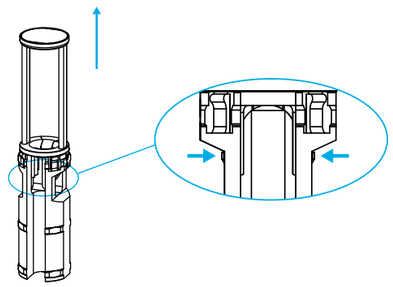


8.

- Insert the cable (1) from the side and snap the cap (2) into its place.

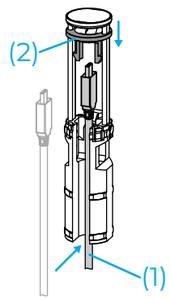

9.

- Slide the insert into the tube.
- Screw the lower cap in and fix it.

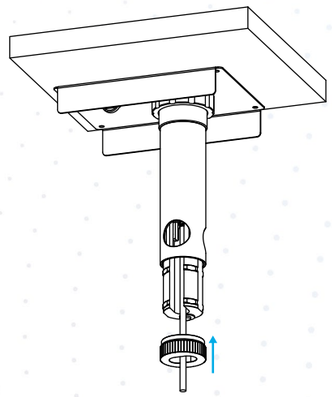

Under table view

Lightware Visual Engineering PLC.
Budapest, Hungary
sales@lightware.com +36 1 255 3800
support@lightware.com +36 1 255 3810

© Lightware Visual Engineering. All rights reserved. All trademarks mentioned are the property of their respective owners. Specifications are subject to change without notice.

Further information is available at www.lightware.com.

Doc ver: v2 SKU: 19210140

Cable Guiding


1. Close the Popup and install the Weight Pulley

- Put the cable in between the weight and the wheel (1).
- The Weight pulley contains six discs as default. Suggested weights:
  - 3m USB-C cable (CAB-USBC-T300A): 6 discs
  - 2m HDMI cable (CAB-HDMI20-PHS200F): 4 discs

Set the necessary discs according to the desired retraction.

2. Fix the Cable and the Cable Bag - Temporarily

- Fix the cable with the supplied Cable tie to the bridge (2) **temporarily**.
- Fix the Cable bag **temporarily**.

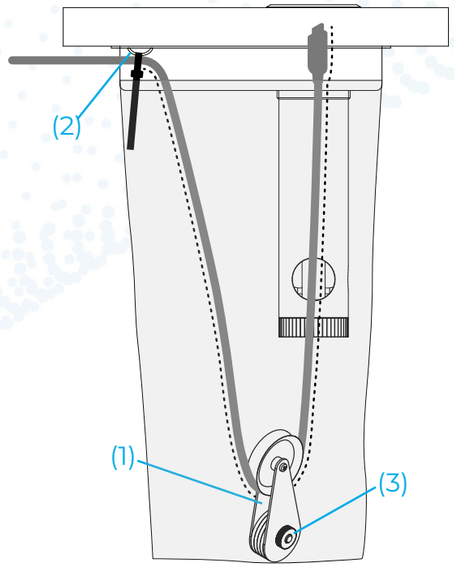

3. Adjust the Cable Length

- Allow a max. of 70 cm (cca. 28”) cable length from the bridge (dotted cable section).
- When the Popup is in closed state, the Weight pulley must not pull the cable down. The cable shall be in loose state.


4. Check the Retraction

- Open the Popup and check the retraction.
- If the the cable was retracted too fast (the Weight pulley is too heavy), unscrew the nut (3), and remove the unnecessary washers.

Cap Level Adjustment


If the cap is not on the same level (higher or lower) as the outer ring, do the following:


- Press the cap to open.
- Find the adjuster rod (1) via the bottom hole; screw it to change the height of the cap.
- Close the cap to check the level.

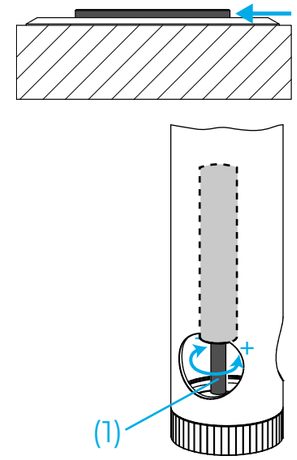

How to Use

Press the cap to open. The insert pops up until a soft “click”.

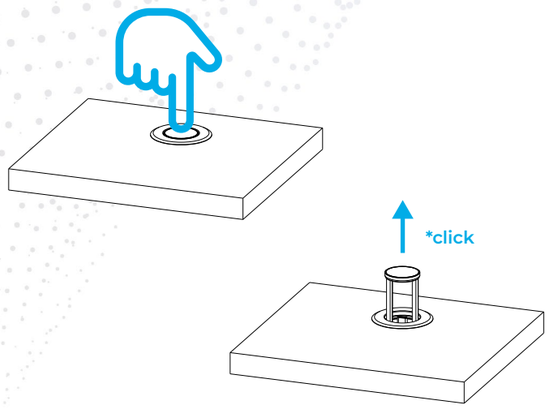


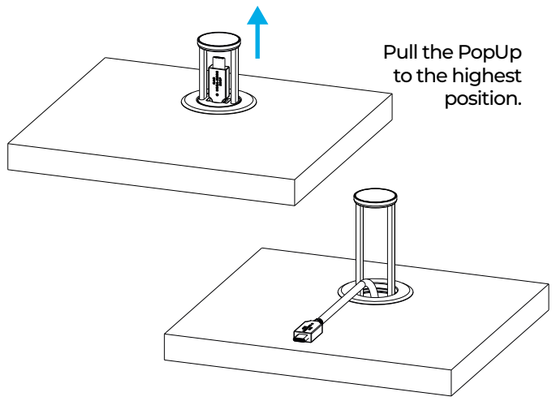


Pull the PopUp to the highest position.

The cable becomes available, ready to connect to your device. The height of the PopUp is cca. 39 mm (1 9/16”) in this position.


After the use, disconnect the cable from your device. Move the connector towards the opening; the weight supports the retraction.

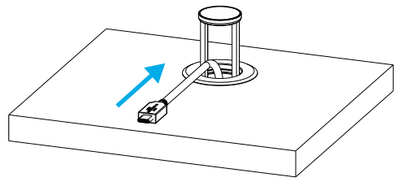

Do not close the inner tube fully when the connector is not in the tube. It could damage the cable.

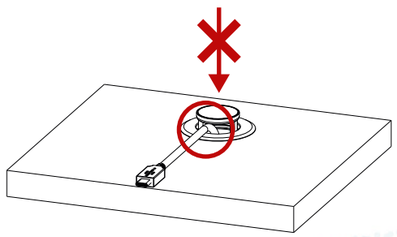


When the connector is retracted completely, the inner tube can be closed. Push the cap below the table level to lock it.

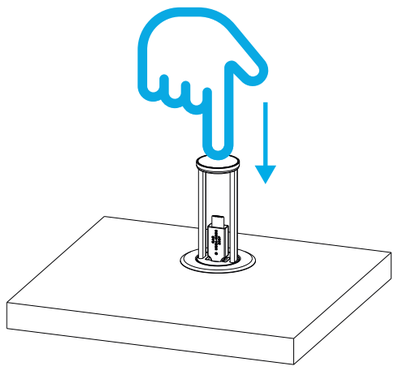


Compatible Cables

The Cable PopUp is compatible with the vast majority of commercially available USB-C cables as well as HDMI cables. However, the construction of the Cable PopUp has the following dimension limitations:

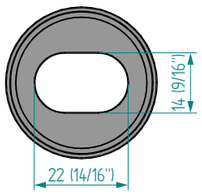

The lower cap, where the connector must be able to go through.

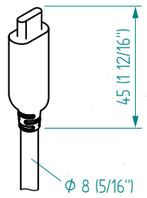

Max. connector dimensions

Dimensions

The values are calculated with 20mm (13/16”) desk thickness.

